

Parts Catalog

FARMTRAC

TRACTOR FARMTRAC 26H EXPORT EU,

Escorts Agri Machinery

TABLE INDEX

Sr No.	Table Name	Table No.	Page No.
1	ENGINE ASSEMBLY MITSUBISHI MVS3L2-Z564ET-18.2kW@2500RPM	1	1-2
2	EXHAUST SYSTEM SUBASSEMBLY	2	3-4
3	DAMPER INPUT HST WITH HARDWARE SUBASSEMBLY	3	5-6
4	COOLING SYSTEM SUBASSEMBLY (HST AND EU)	4	7-8
5	AIR CLEANER SUBASSEMBLY	5	9-10
6	COOLER OIL SUBASSEMBLY (HST)	6	11-12
7	FUEL SYSTEM SUBASSEMBLY	7	13-14
8	FRAME FUEL TANK AND BRACKET HINGE ASSEMBLY	8	15-16
9	FUEL TANK SUBASSEMBLY	9	17-18
10	LINKAGE THROTTLE SUBASSEMBLY	10	19-20
11	LINKAGE ASSEMBLY DIFFERENTIAL LOCK CONTROL	11	21-22
12	LEVER MID PTO GEAR SHIFT SUBASSEMBLY	12	23-24
13	LEVER POSITION CONTROL SUBASSEMBLY	13	25-26
14	LEVER PTO GEAR SHIFT SUBASSEMBLY	14	27-28
15	JOYSTICK CONTROL SUBASSEMBLY	15	29-30
16	LEVER CONTROL 2WD 4WD SUBASSEMBLY	16	31-32
17	LEVER RANGE HIGH LOW MEDIUM GEAR SHIFT SUBASSEMBLY	17	33-34
18	SHAFT PROPELLER ASSEMBLY (4WD COMPACT HST)	18	35-36
19	GUARD ASSEMBLY PROPELLER SHAFT	19	37-38
20	HOUSING ASSEMBLY SWIVEL FRONT AXLE RH WITH HARDWARE SUBASSEMBLY (4WD COMPACT)	20	39-42
21	HOUSING ASSEMBLY SWIVEL FRONT AXLE LH WITH HARDWARE SUBASSEMBLY (4WD COMPACT)	21	43-46
22	PILLOW BLOCK SUBASSEMBLY FRONT	22	47-48
23	PILLOW BLOCK SUBASSEMBLY REAR	23	49-50
24	HOUSING ASSEMBLY FRONT AXLE CENTER BEAM SUBASSEMBLY	24	51-52
25	AXLE FRONT WITH CYLINDER AND LINK ASSEMBLY	25	53-54
26	AXLE FRONT SUBASSEMBLY	26	55-56
27	COVER ASSEMBLY GUARD STEERING CYLINDER	27	57-58
28	WHEEL STEERING AND UNIT STEERING SUBASSEMBLY	28	59-60
29	WHEEL AND TYRE ASSEMBLY FRONT 23x8.50-12 (M/s BKT -TURF)	29	61-62
30	TUBING POWER STEERING SUBASSEMBLY	30	63-66

TABLE INDEX

Sr No.	Table Name	Table No.	Page No.
31	PEDAL SPEED CONTROL AND CRUISE CONTROL SUBASSEMBLY	31	67-70
32	DRIVE TRAIN INPUT FRONT HOUSING HST ASSEMBLY	32	71-72
33	HOUSING FRONT HST ASSEMBLY	33	73-74
34	HST UNIT SUBASSEMBLY WITH HARDWARE	34	75-76
35	DRIVE TRAIN 4WD SUBASSEMBLY (HST)	35	77-78
36	RETAINER AND GEAR PAIR INPUT SUB ASSEMBLY WITH HARDWARE (HST)	36	79-80
37	HOUSING ASSEMBLY INTERMEDIATE (HST)	37	81-82
38	CLUTCH WET PTO SUBASSEMBLY	38	83-84
39	HOUSING REAR AXLE CENTRE SUBASSEMBLY (HST)	39	85-86
40	GEAR AND DIFFERENTIAL REAR AXLE SUBASSEMBLY	40	87-88
41	DIFFERENTIAL LOCK SUBASSEMBLY	41	89-90
42	RETAINER BEARING DIFFERENTIAL SUBASSEMBLY LH	42	91-92
43	RETAINER BEARING DIFFERENTIAL SUBASSEMBLY RH	43	93-94
44	HOUSING REAR AXLE RH SUBASSEMBLY	44	95-96
45	HOUSING REAR AXLE LH SUBASSEMBLY	45	97-98
46	PTO REAR SHIFTING ASSEMBLY (HST)	46	99-100
47	PTO MID SHIFTING ASSEMBLY	47	101-102
48	RETAINER PTO BEARING AND SEAL ASSEMBLY	48	103-104
49	GEAR AND SHAFT PTO SUBASSEMBLY (HST)	49	105-106
50	PTO MID DROP BOX SUBASSEMBLY	50	107-108
51	GEARS AND SHAFT PTO SUBASSEMBLY (HST)	50A	109-112
52	PLATE INTERMEDIATE TRANSMISSION ASSEMBLY (Z-24)	51	113-114
53	GEAR DRIVE TRAIN RANGE ASSEMBLY (9+3)	52	115-116
54	RANGE GEAR SHIFTING ASSEMBLY (COMPACT)	53	117-118
55	HARDWARE BUCKLE UP TRANSMISSION AND REAR AXLE SUBASSEMBLY	54	119-120
56	HARDWARE BUCKLE UP ADAPTOR PLATE AND BACKEND SUBASSEMBLY	55	121-122
57	HARDWARE BUCKLE UP ADAPTOR PLATE & BACKEND SUBASSEMBLY	55	123-124
58	TRANSMISSION ASSEMBLY DRESSED UP	56	125-126
59	BRAKE LINKAGE SUB ASSEMBLY (HST)	57	127-128
60	WHEEL AND TYRE ASSEMBLY REAR 33x15.50-16.50 (M/s BKT -TURF)	58	129-130

TABLE INDEX

Sr No.	Table Name	Table No.	Page No.
61	HYDRAULIC LIFT ASSEMBLY (COMPACT TRACTOR MODEL)	59	131-132
62	CYLINDER ASSY	60	133-134
63	INTERNAL LEVER ASSY	61	135-136
64	CONTROL LEVERS ASSY	63	137-138
65	PUMP HYDRAULIC LIFT ASSEMBLY	64	139-140
66	TUBING HYDRAULIC SUCTION SUBASSEMBLY	65	141-142
67	TUBING AUXILLARY VALVE SUBASSEMBLY	66	143-144
68	LINKAGE THREE POINT COMPACT TRACTOR SUBASSEMBLY	67	145-146
69	HITCH REAR SWINGING DRAWBAR SUBASSEMBLY	68	147-148
70	HARNESS SUBASSEMBLY	69	149-152
71	HOOD FRONT SUBASSEMBLY	70	153-156
72	LATCH ASSEMBLY HOOD FRONT	71	157-158
73	COVER ASSEMBLY ENGINE SIDE RH	72	159-160
74	COVER ASSEMBLY ENGINE SIDE LH	73	161-162
75	GUIDE SUPPORT AND GAS SPRING FRONT HOOD SUBASSEMBLY	74	163-164
76	GUIDE SUPPORT AND RADIATOR FRAME SUBASSEMBLY	75	165-166
77	HOOD REAR SUBASSEMBLY	76	167-168
78	ROPS FOLDABLE SUBASSEMBLY COMPACT	77	169-170
79	FENDER SUBASSEMBLY (HST NON JOYSTICK)	78	171-174
80	BOARD RUNNING RH AND LH SUBASSEMBLY	79	175-176
81	SEAT DRIVER SUBASSEMBLY (EXPORT)	80	177-178
82	MIRROR AND FRONT LAMP SUBASSEMBLY	81	179-180
83	DECAL AND BADGES MODEL IDENTIFICATION ASSEMBLY HST	82	181-182

TABLE-1
ENGINE ASSEMBLY MITSUBISHI MVS3L2-Z564ET-18.2kW@2500RPM

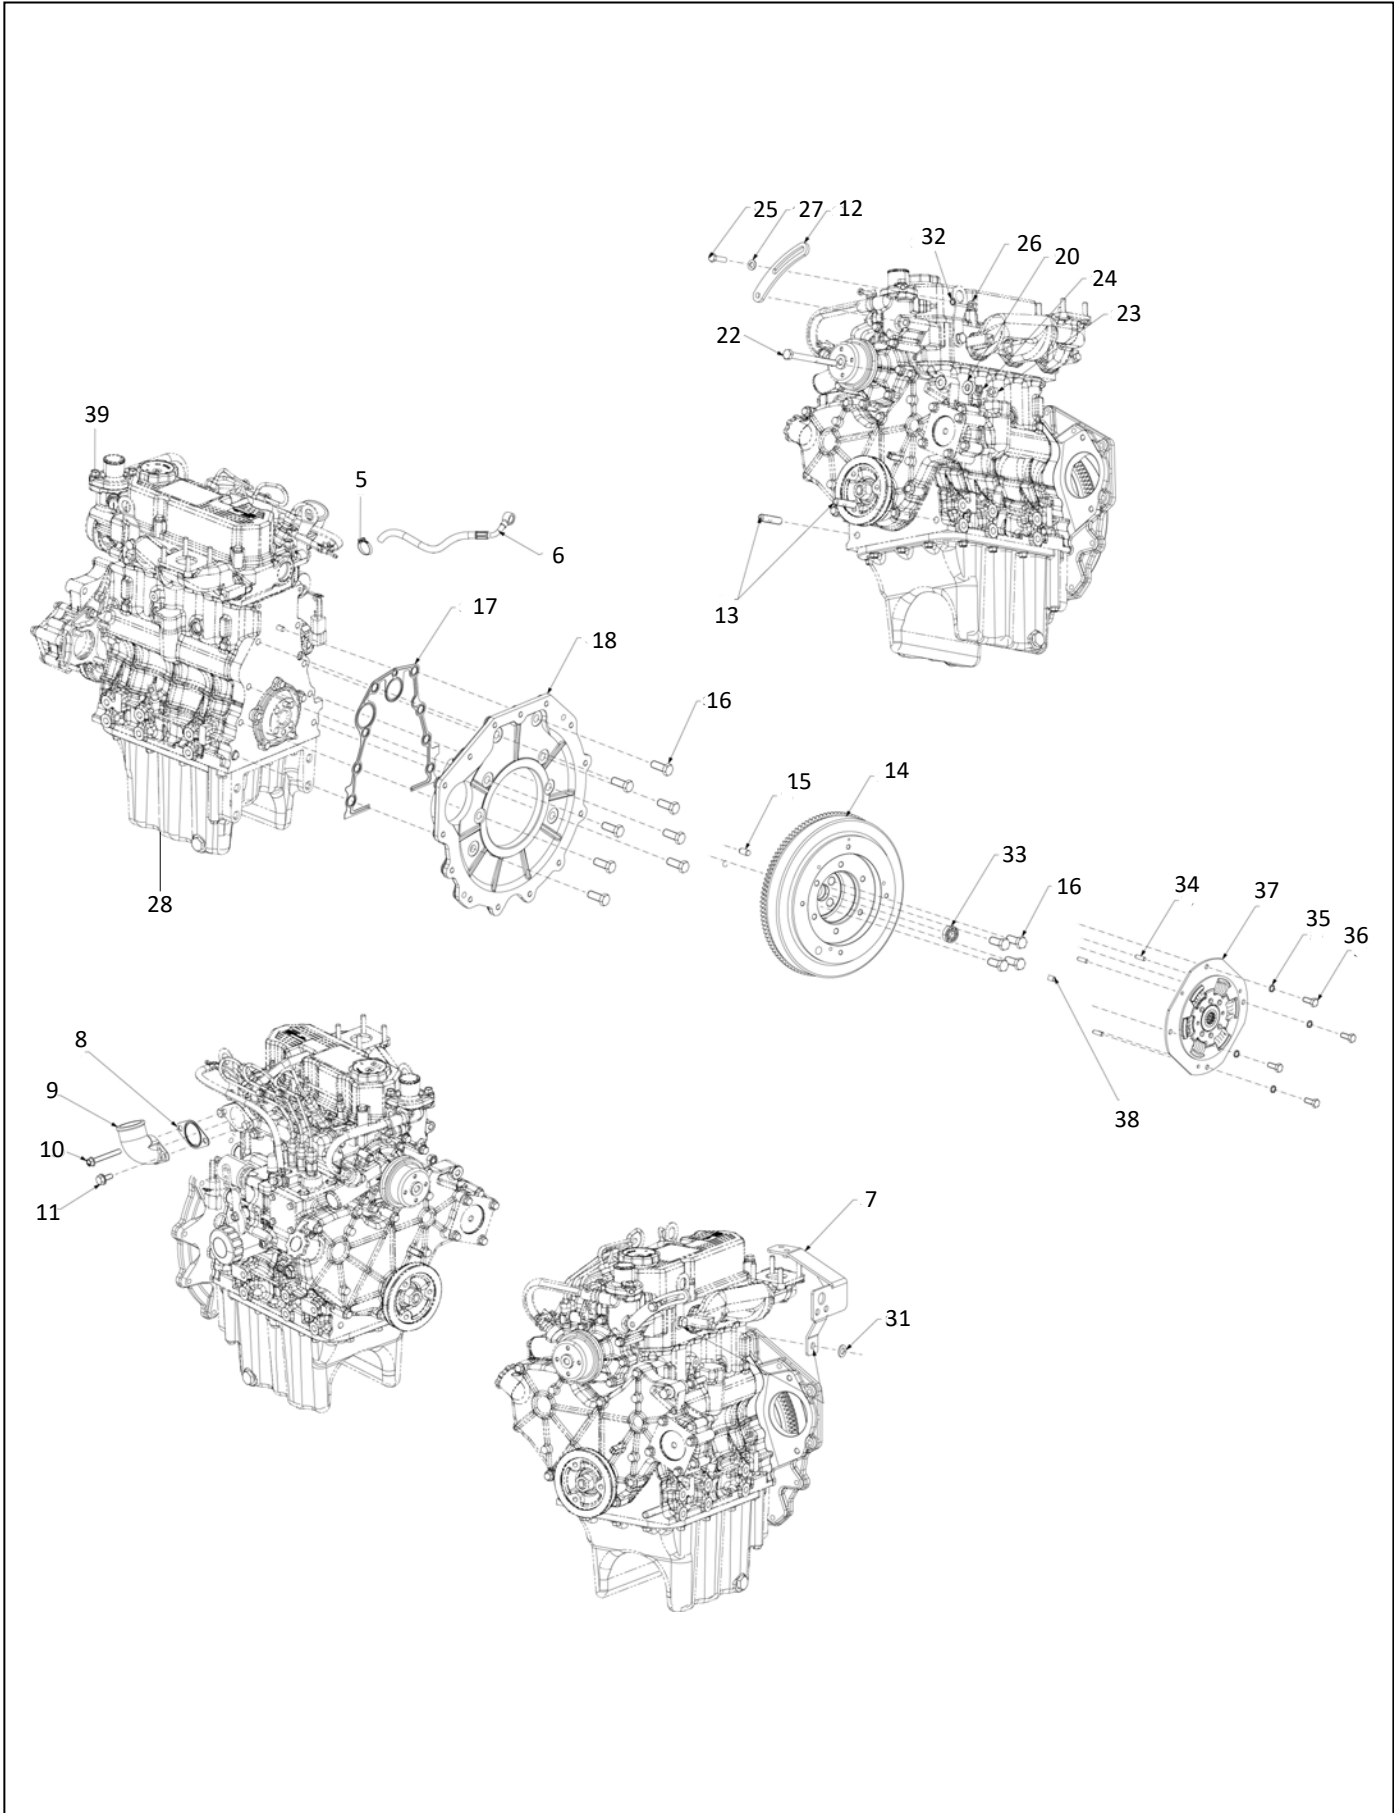


TABLE-1**ENGINE ASSEMBLY MITSUBISHI MVS3L2-Z564ET-18.2kW@2500RPM**

Fig. No.	Part No.	Description	Qty
5	D10017460.9	CLAMP ASSEMBLY FUEL TUBE	1
6	D10567380.9	HOSE ASSEMBLY FUEL TANK RETURN	1
7	D10551060.9	BRACKET SUPPORT MUFFLER HORIZONTAL	1
8	D10536300.9	GASKET INTAKE ELBOW MITSUBISHI ENGINE (S3L2)	1
9	D10536290.9	ELBOW INTAKE MANIFOLD MITSUBISHI ENGINE (S3L2)	1
10	D81502510.9	BOLT M8X1.25X60-8.8 HEX HEAD FLANGED (WHITE PASSIVATED)	1
11	D82500230.9	SCREW M8X1.25X20-8.8 HEX HEAD FLANGED	1
12	D10524990.9	LEVER ALTERNATOR ADJUSTING	1
13	D84500450.9	STUD B M12X45-10.9	2
14	D10607060.9	FLYWHEEL ASSEMBLY (MITSUBISHI MVS3L2-W463JCET)	1
15	D87500570.9	PIN 9.5X20 PLAIN DOWEL	1
16	D81503200.9	BOLT M12X1.25X30-10.9 HEX HEAD	12
17	D10525000.9	GASKET REAR PLATE ENGINE	1
18	D10524940.9	ADAPTER ENGINE TRANSMISSION COUPLING	1
20	D10525010.9	SPACER ALTERNATOR ADJUSTMENT	1
22	D81500470.9	BOLT M10X1.50X115 HEX HEAD	1
23	D83500090.9	NUT M10X1.50-8 HEX	1
24	D86500050.9	WASHER M10 SPRING LOCK	1
25	D82500060.9	SCREW M8X1.25X30-8.8 HEX HEAD	1
26	D83500060.9	NUT M8X1.25-6 HEX	1
27	D85500050.9	WASHER M8 FLAT	1
28	D10776850.9	ENGINE ASSEMBLY MITSUBISHI MVS3L2-Z564ET-18.2KW@2500RPM	1
31	D85500140.9	WASHER M10 FLAT	1
32	D86500030.9	WASHER M8 SPRING LOCK	1
33	D10538690.9	BEARING BALL 6001 2RS	1
34	D87500720.9	PIN 6X20 PLAIN DOWEL	3
35	D86500030.9	WASHER M8 SPRING LOCK	4
36	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	4
37	D10809900.9	DAMPER ASSEMBLY	1
38	D10044920.9	DOWEL FLY-WHEEL	2
39	D81500060.9	BOLT M10X1.50X30-8.8 HEX HEAD	1

TABLE-2
EXHAUST SYSTEM SUBASSEMBLY

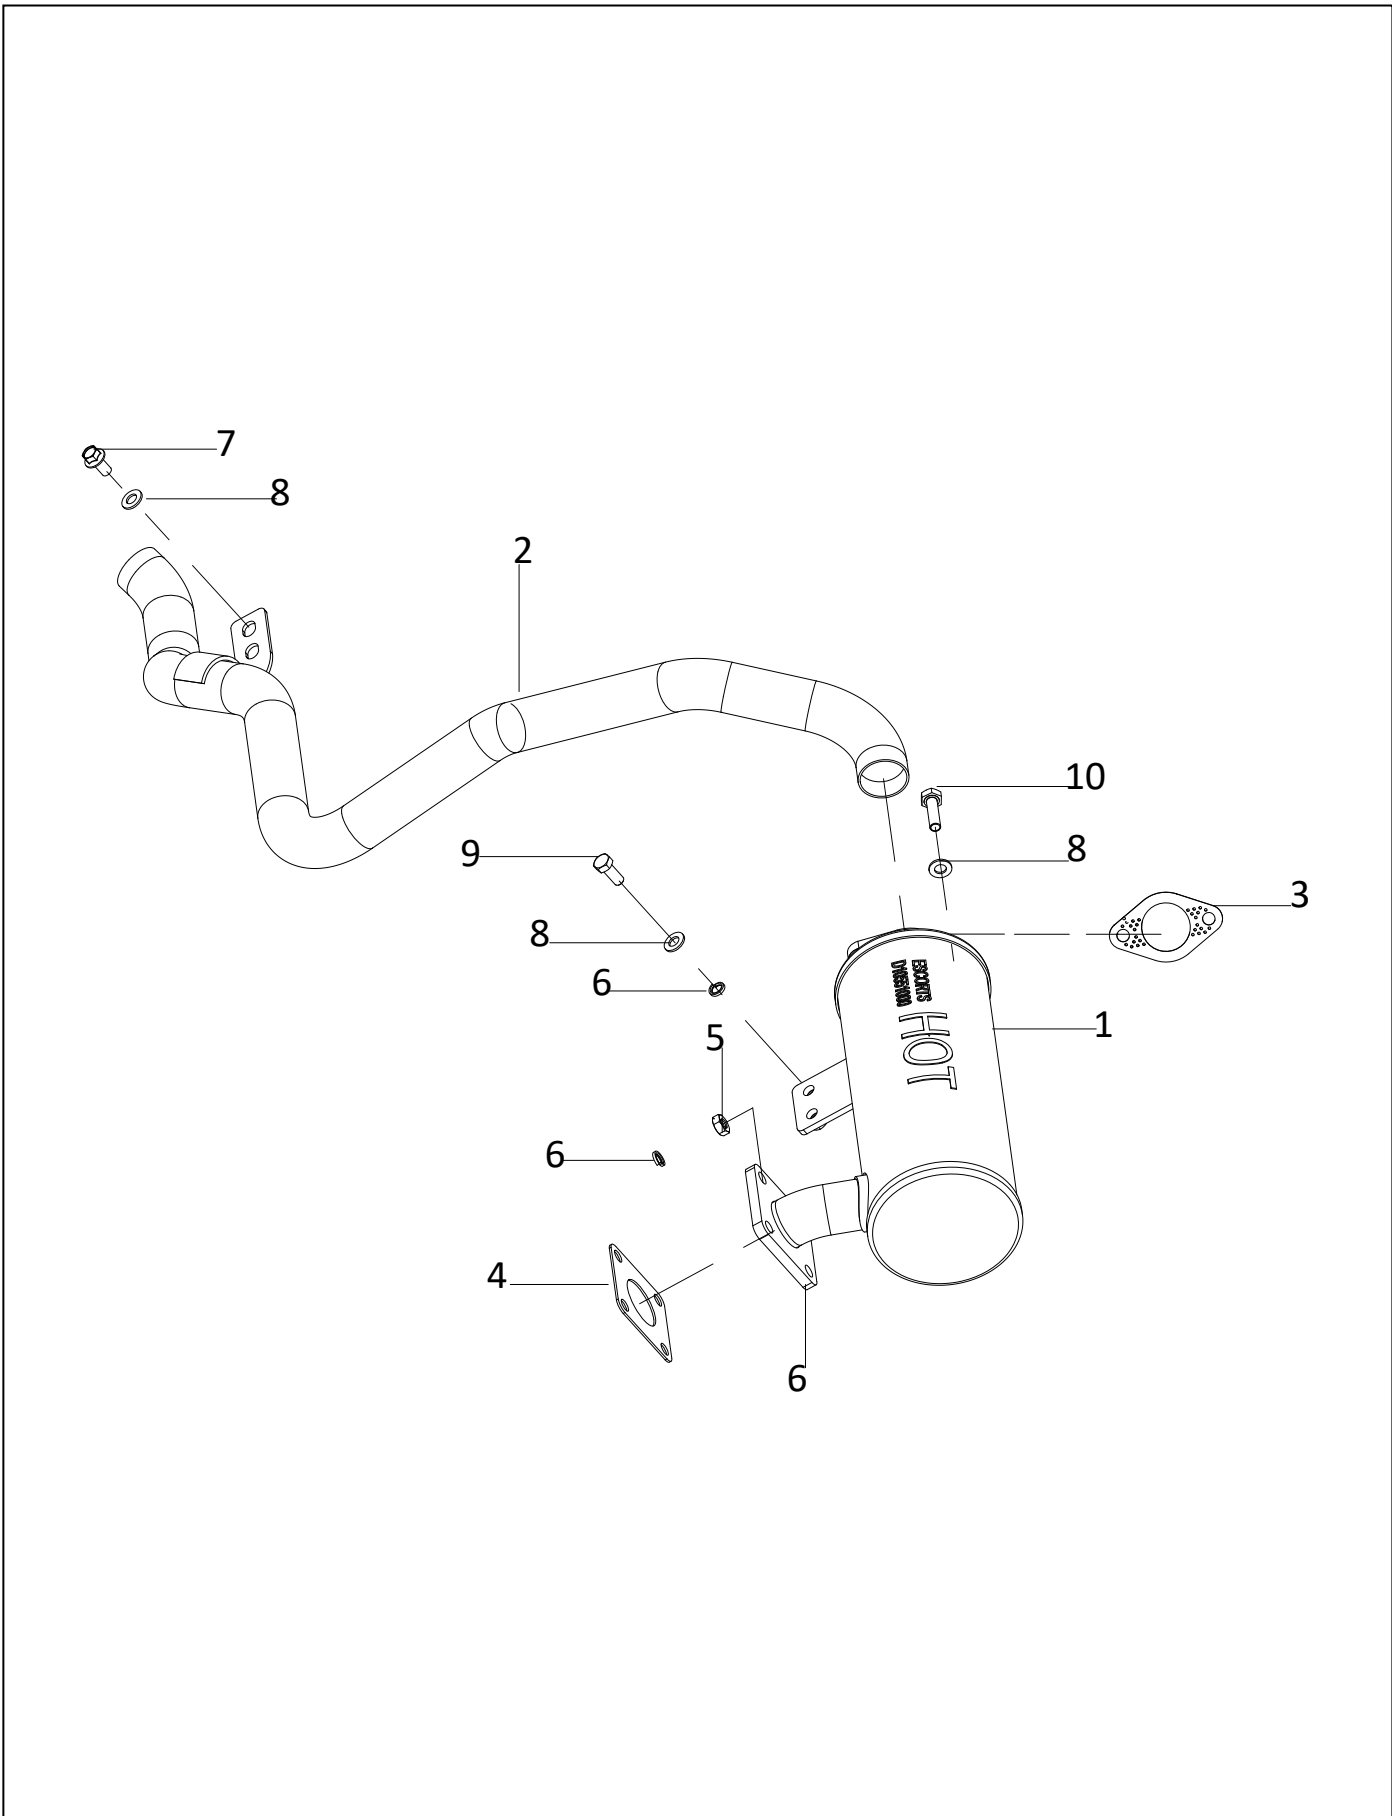


TABLE-2
EXHAUST SYSTEM SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10551000.9	MUFFLER ASSEMBLY HORIZONTAL(INSIDE)	1
2	D10551010.9	PIPE EXHAUST AND BRACKET ASSEMBLY	1
3	D10551080.9	GASKET MUFFLER OUTLET	1
4	D10551070.9	GASKET MUFFLER INLET	1
5	D83500060.9	NUT M8X1.25-6 HEX	4
6	D86500030.9	WASHER M8 SPRING LOCK	8
7	D81501580.9	BOLT M8X1.25X16 HEX HEAD FLANGED	2
8	D85500130.9	WASHER M8 FLAT	6
9	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	2
10	D81500310.9	SCREW M8X1.25X30-8.8 HEX HEAD	2

TABLE-3
DAMPER INPUT HST WITH HARDWARE SUBASSEMBLY

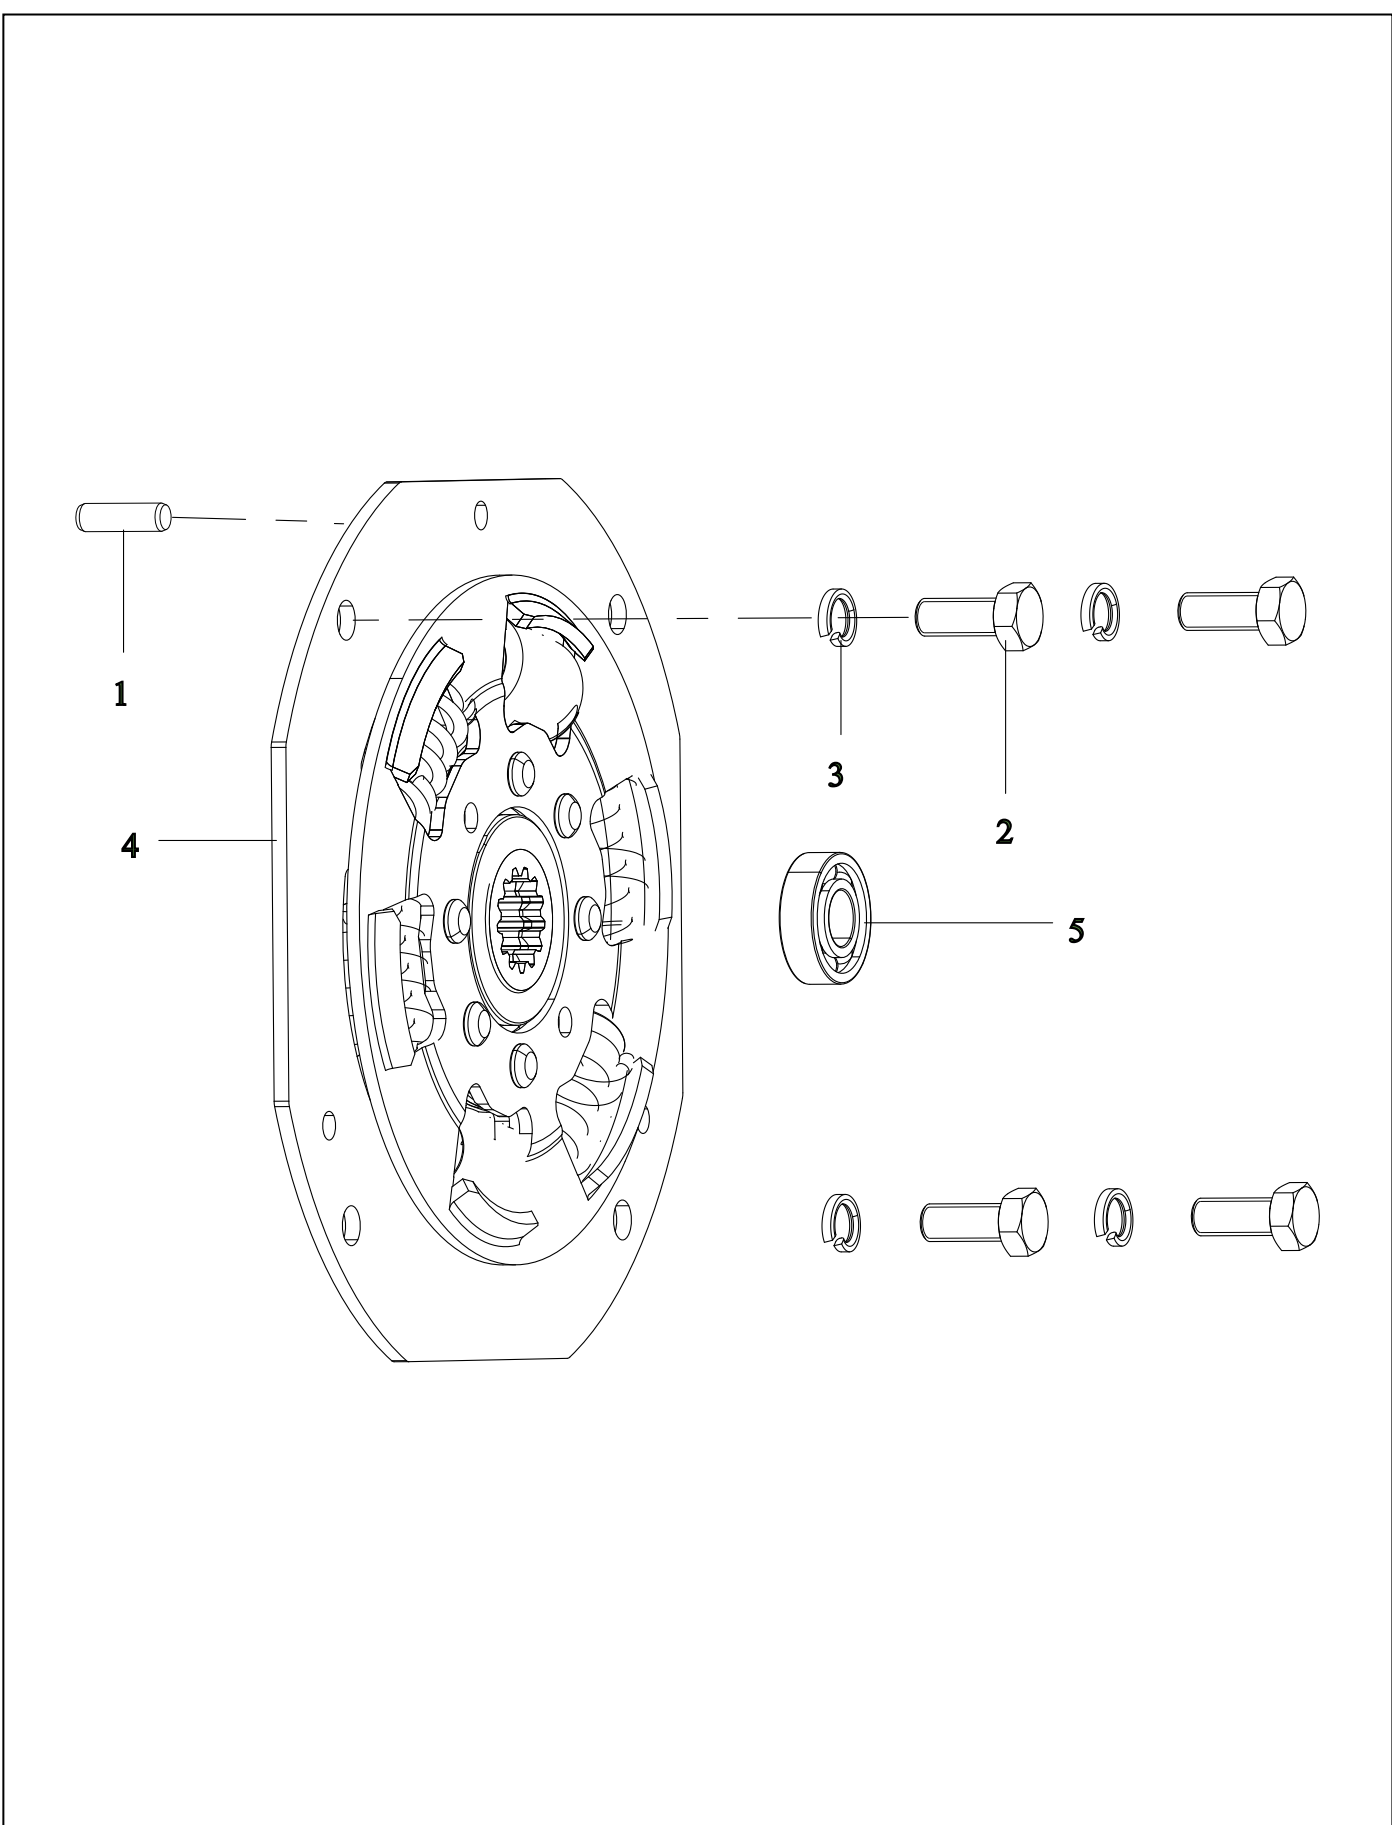


TABLE-3
DAMPER INPUT HST WITH HARDWARE SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D87500720.9	PIN 6X20 PLAIN DOWEL	3
2	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	4
3	D86500030.9	WASHER M8 SPRING LOCK	4
4	D10809900.9	DAMPER ASSEMBLY	1
5	D10538690.9	BEARING BALL 6001 2RS	1

TABLE-4
COOLING SYSTEM SUBASSEMBLY (HST AND EU)

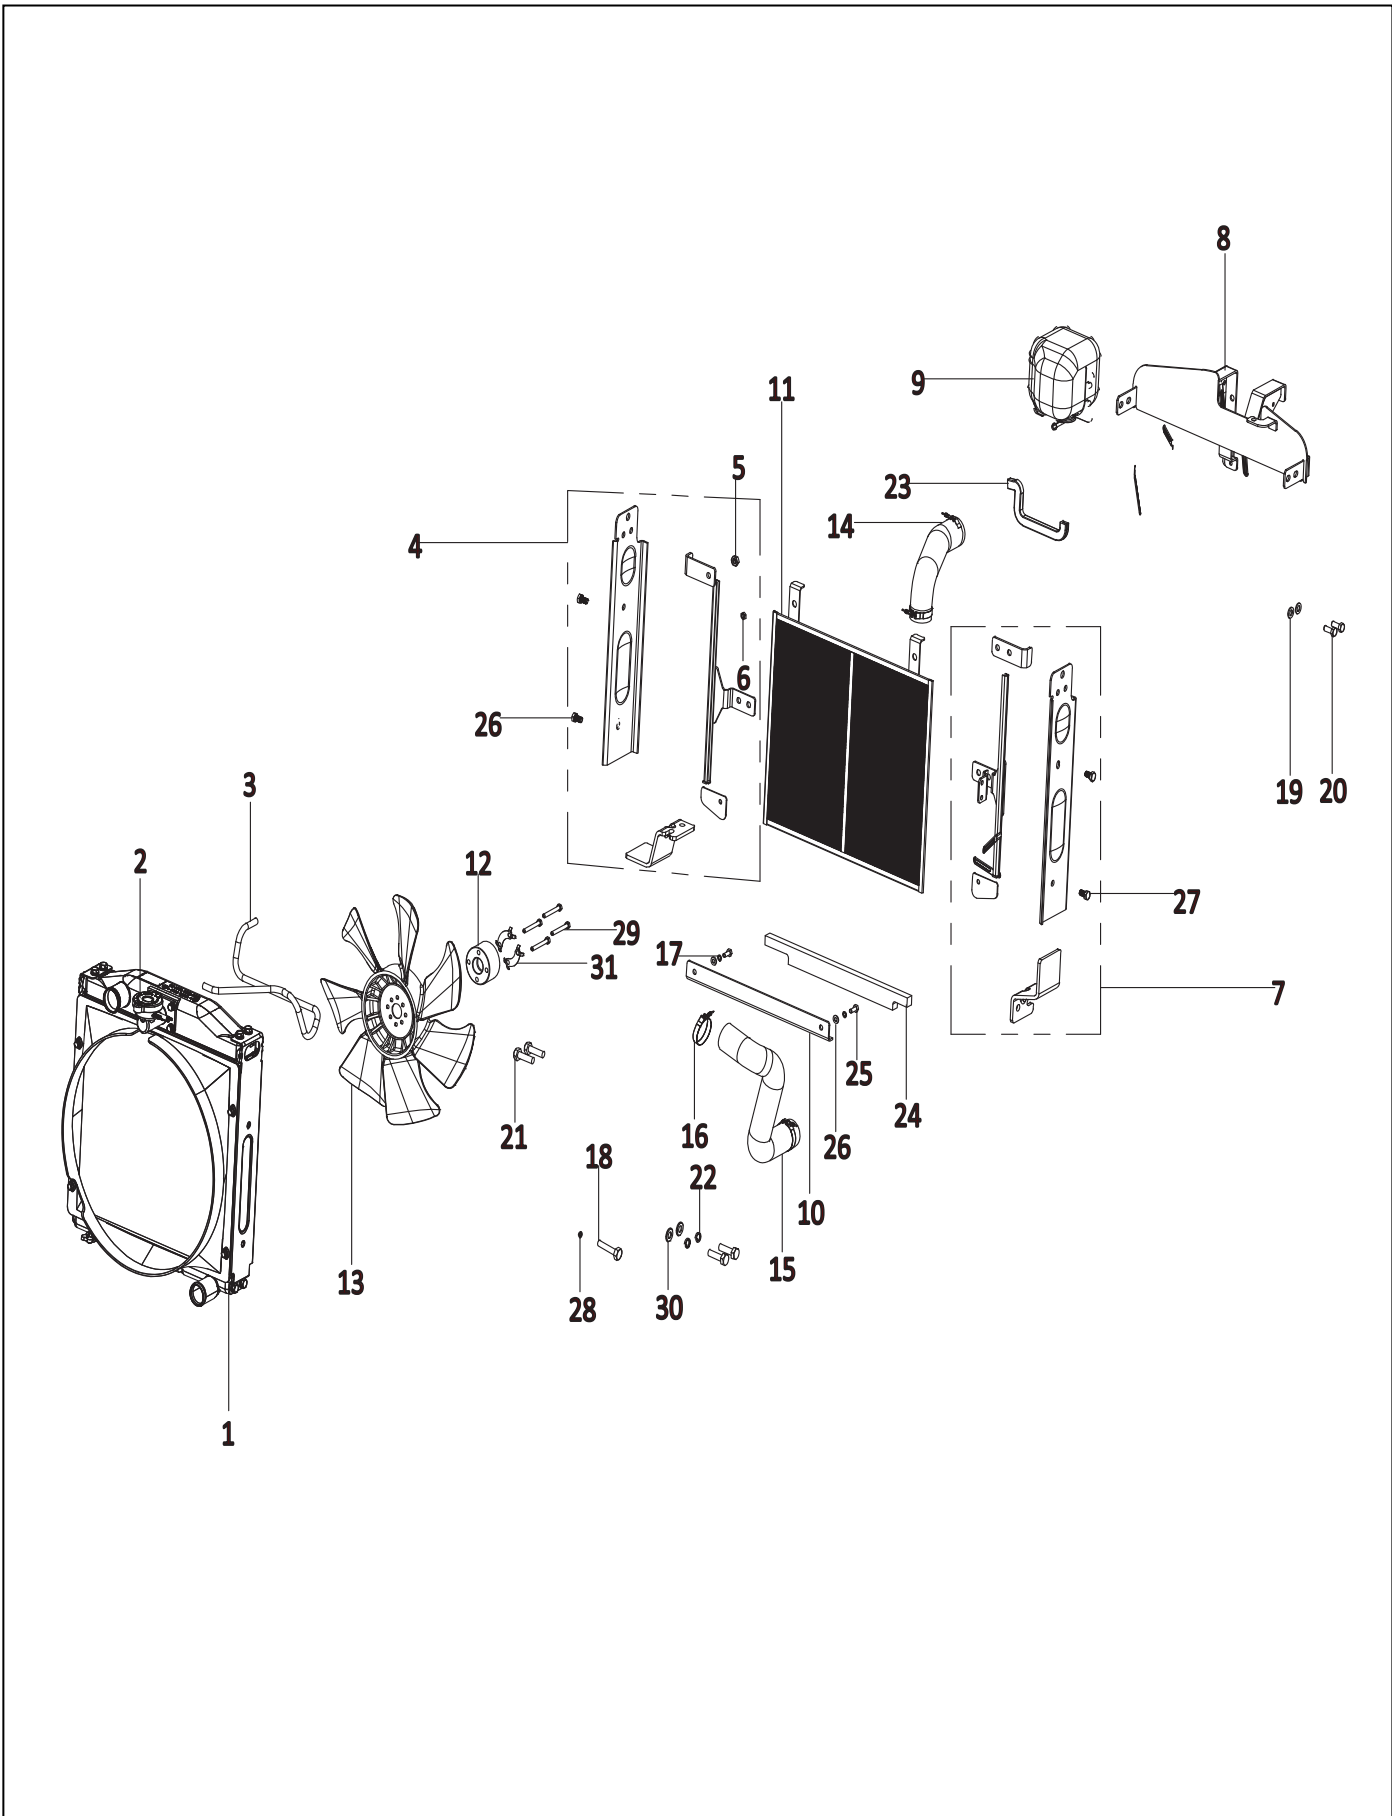


TABLE-4
COOLING SYSTEM SUBASSEMBLY (HST AND EU)

Fig. No.	Part No.	Description	Qty
1	D10558670.9	RADIATOR AND SHROUD ASSEMBLY	1
1-1	D10558670AE.9	RADIATOR AND SHROUD ASSEMBLY	1
2	D10521030.9	CAP ASSEMBLY PRESSURE RADIATOR (M/S SM AUTO)	1
3	D10560000.9	PIPE AND CLIP ASSEMBLY RECOVERY BOTTLE OVERFLOW	1
4	D10587760.9	FRAME ASSEMBLY RADIATOR SIDE LH	5
5	D83500060.9	NUT M8X1.25-6 HEX	31
6	D83500070.9	NUT M6X1.00-6 HEX	8
7	D10587750.9	FRAME ASSEMBLY RADIATOR SIDE RH	1
8	D10717700.9	FRAME ASSEMBLY RADIATOR	1
9	D10801990.9	BOTTLE RADIATOR ASSEMBLY RECOVERY	1
10	D10555800.9	PLATE BAFFLE RADIATOR FRAME	1
11	D10547430.9	MESH ASSEMBLY RADIATOR FRONT	1
12	D10557900.9	SPACER FAN WATER COOLING	1
13	D10521940.9	FAN ASSEMBLY WATER COOLING	1
14	D10547480.9	HOSE RADIATOR TOP	1
15	D10547490.9	HOSE RADIATOR BOTTOM	1
16	D10329500.9	CLAMP HOSE WORM DRIVE 55MM	4
17	D86500030.9	WASHER M8 SPRING LOCK	11
18	D81500590.9	BOLT M8X1.25X25-6.6 HEX HEAD	3
19	D85500050.9	WASHER M8 FLAT	11
20	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	4
21	D82500160.9	SCREW M10X1.50X45-8.8P HEX HEAD	4
22	D86500050.9	WASHER M10 SPRING LOCK	4
23	D10668970.9	BEADING RADIATOR FRAME TOP	1
24	D10559580.9	FOAM SEALING RADIATOR BOTTOM	1
25	D81500360.9	BOLT M6X1.00X16-9.8 HEX HEAD	2
26	D85500040.9	WASHER M6 FLAT	2
27	D82500070.9	SCREW M8X1.25X15-6.8 HEX HEAD	4
28	D86500040.9	WASHER M6 SPRING LOCK	9
29	D81503520.9	BOLT M6X1.0X50-10.9 HEX HEAD	4
30	D85500010.9	WASHER M10 FLAT	4
31	D10672200.9	WASHER FAN BOLT LOCK PLATE	2

TABLE-5
AIR CLEANER SUBASSEMBLY

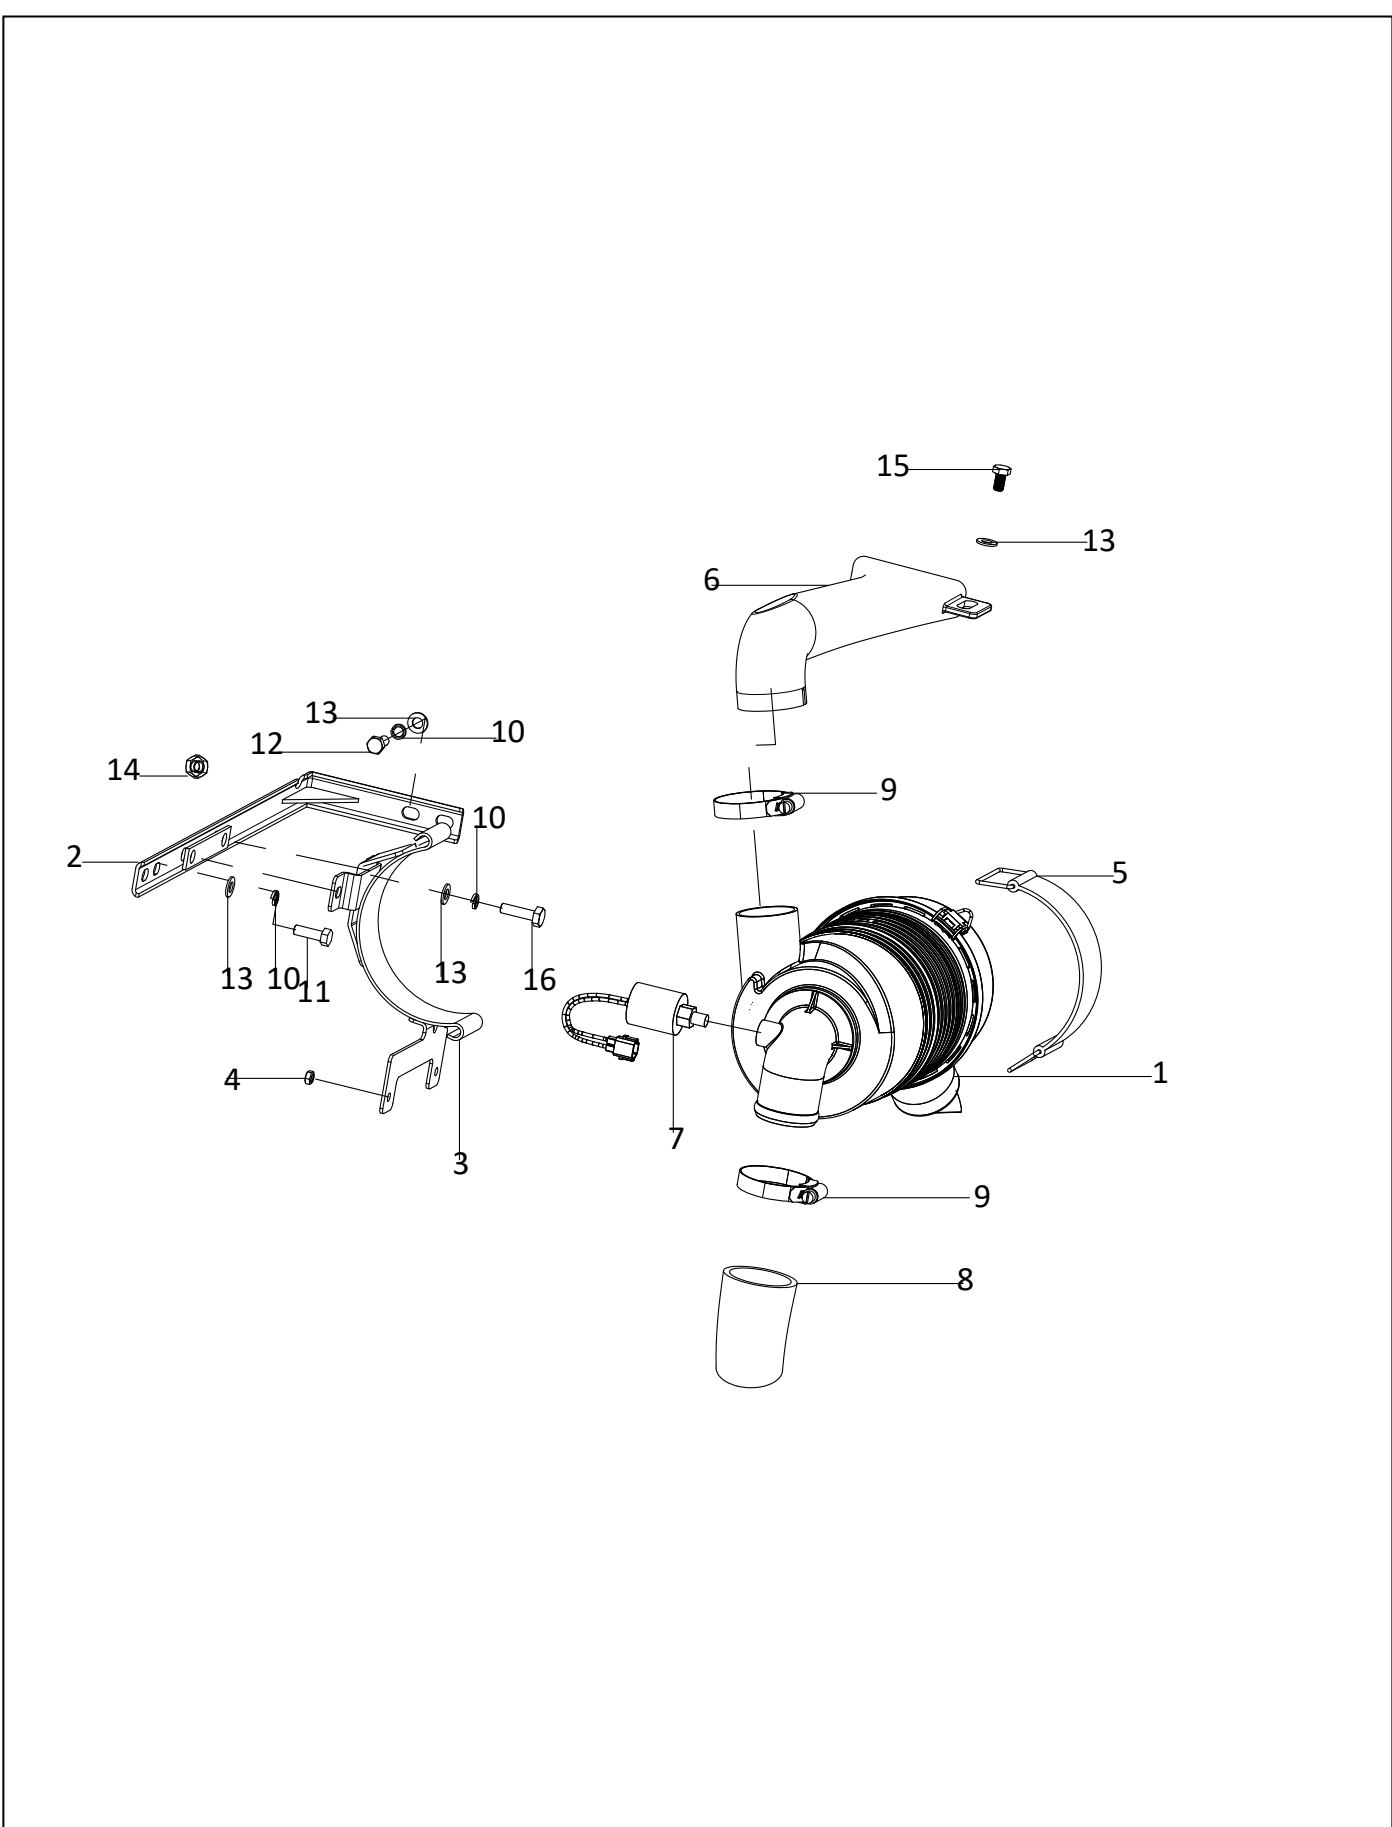


TABLE-5
AIR CLEANER SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10517880.9	CLEANER ASSEMBLY ENGINE AIR	1
2	D10522000.9	BRACKET ASSEMBLY AIR CLEANER	1
3	D10521960AD.9	BRACKET ASSEMBLY AIR CLEANER HOLDING REAR	1
4	D83500070.9	NUT M6X1.00-6 HEX	2
5	D10521990.9	RUBBER STRAP ASSEMBLY AIR CLEANER HOLDING	1
6	D10522380.9	PIPE AIR CLEANER INTAKE	1
7	D10532900.9	INDICATOR RESTRICTION AIR CLEANER	1
8	D10521950.9	HOSE AIR CLEANER TO INTAKE MANIFOLD	1
9	D10017170.9	CLAMP ASSEMBLY 70MM DIAMETER	3
10	D86500030.9	WASHER M8 SPRING LOCK	6
11	D81500590.9	BOLT M8X1.25X25-6.6 HEX HEAD	2
12	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	2
13	D85500050.9	WASHER M8 FLAT	9
14	D83500060.9	NUT M8X1.25-6 HEX	2
15	D82500070.9	SCREW M8X1.25X15-6.8 HEX HEAD	1
16	D81500310.9	SCREW M8X1.25X30-8.8 HEX HEAD	2

TABLE-6
COOLER OIL SUBASSEMBLY (HST)

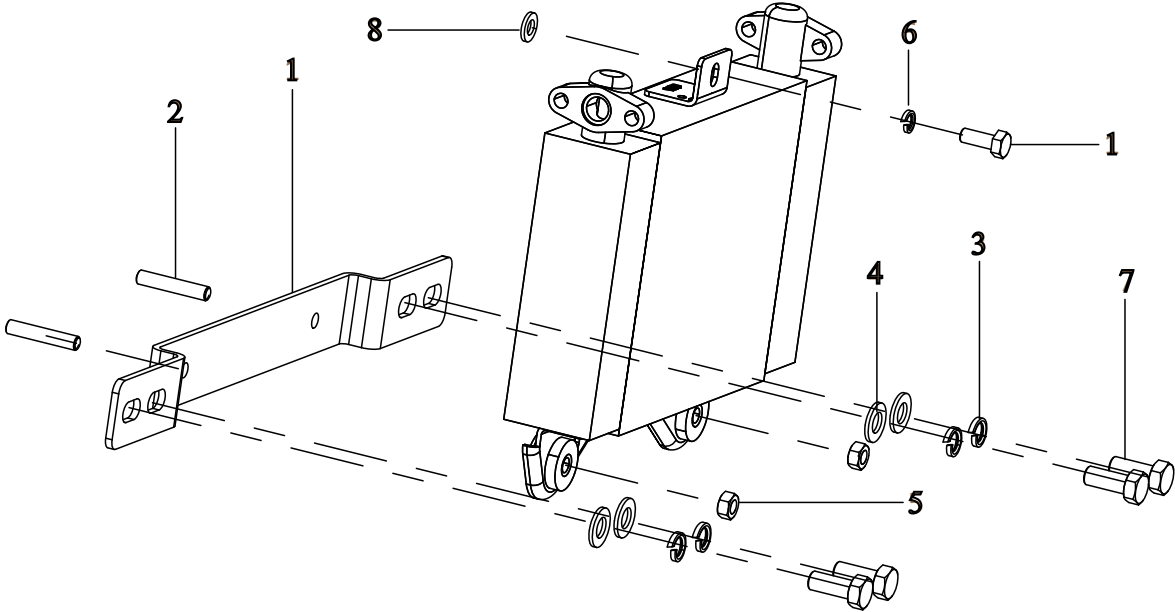


TABLE-6
COOLER OIL SUBASSEMBLY (HST)

Fig. No.	Part No.	Description	Qty
1	D10600480.9	BRACKET SUPPORT OIL COOLER ASSEMBLY	1
2	D84500230.9	STUD B M6X1X33-8.8	2
3	D86500030.9	WASHER M8 SPRING LOCK	4
4	D85500050.9	WASHER M8 FLAT	4
5	D83500220.9	NUT M6X1.00-5 HEX	2
6	D86500040.9	WASHER M6 SPRING LOCK	1
7	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	4
8	D85500040.9	WASHER M6 FLAT	1
9	D81500360.9	BOLT M6X1.00X16-9.8 HEX HEAD	1
10	D10713560.9	COOLER OIL ASSEMBLY	1

TABLE-7
FUEL SYSTEM SUBASSEMBLY

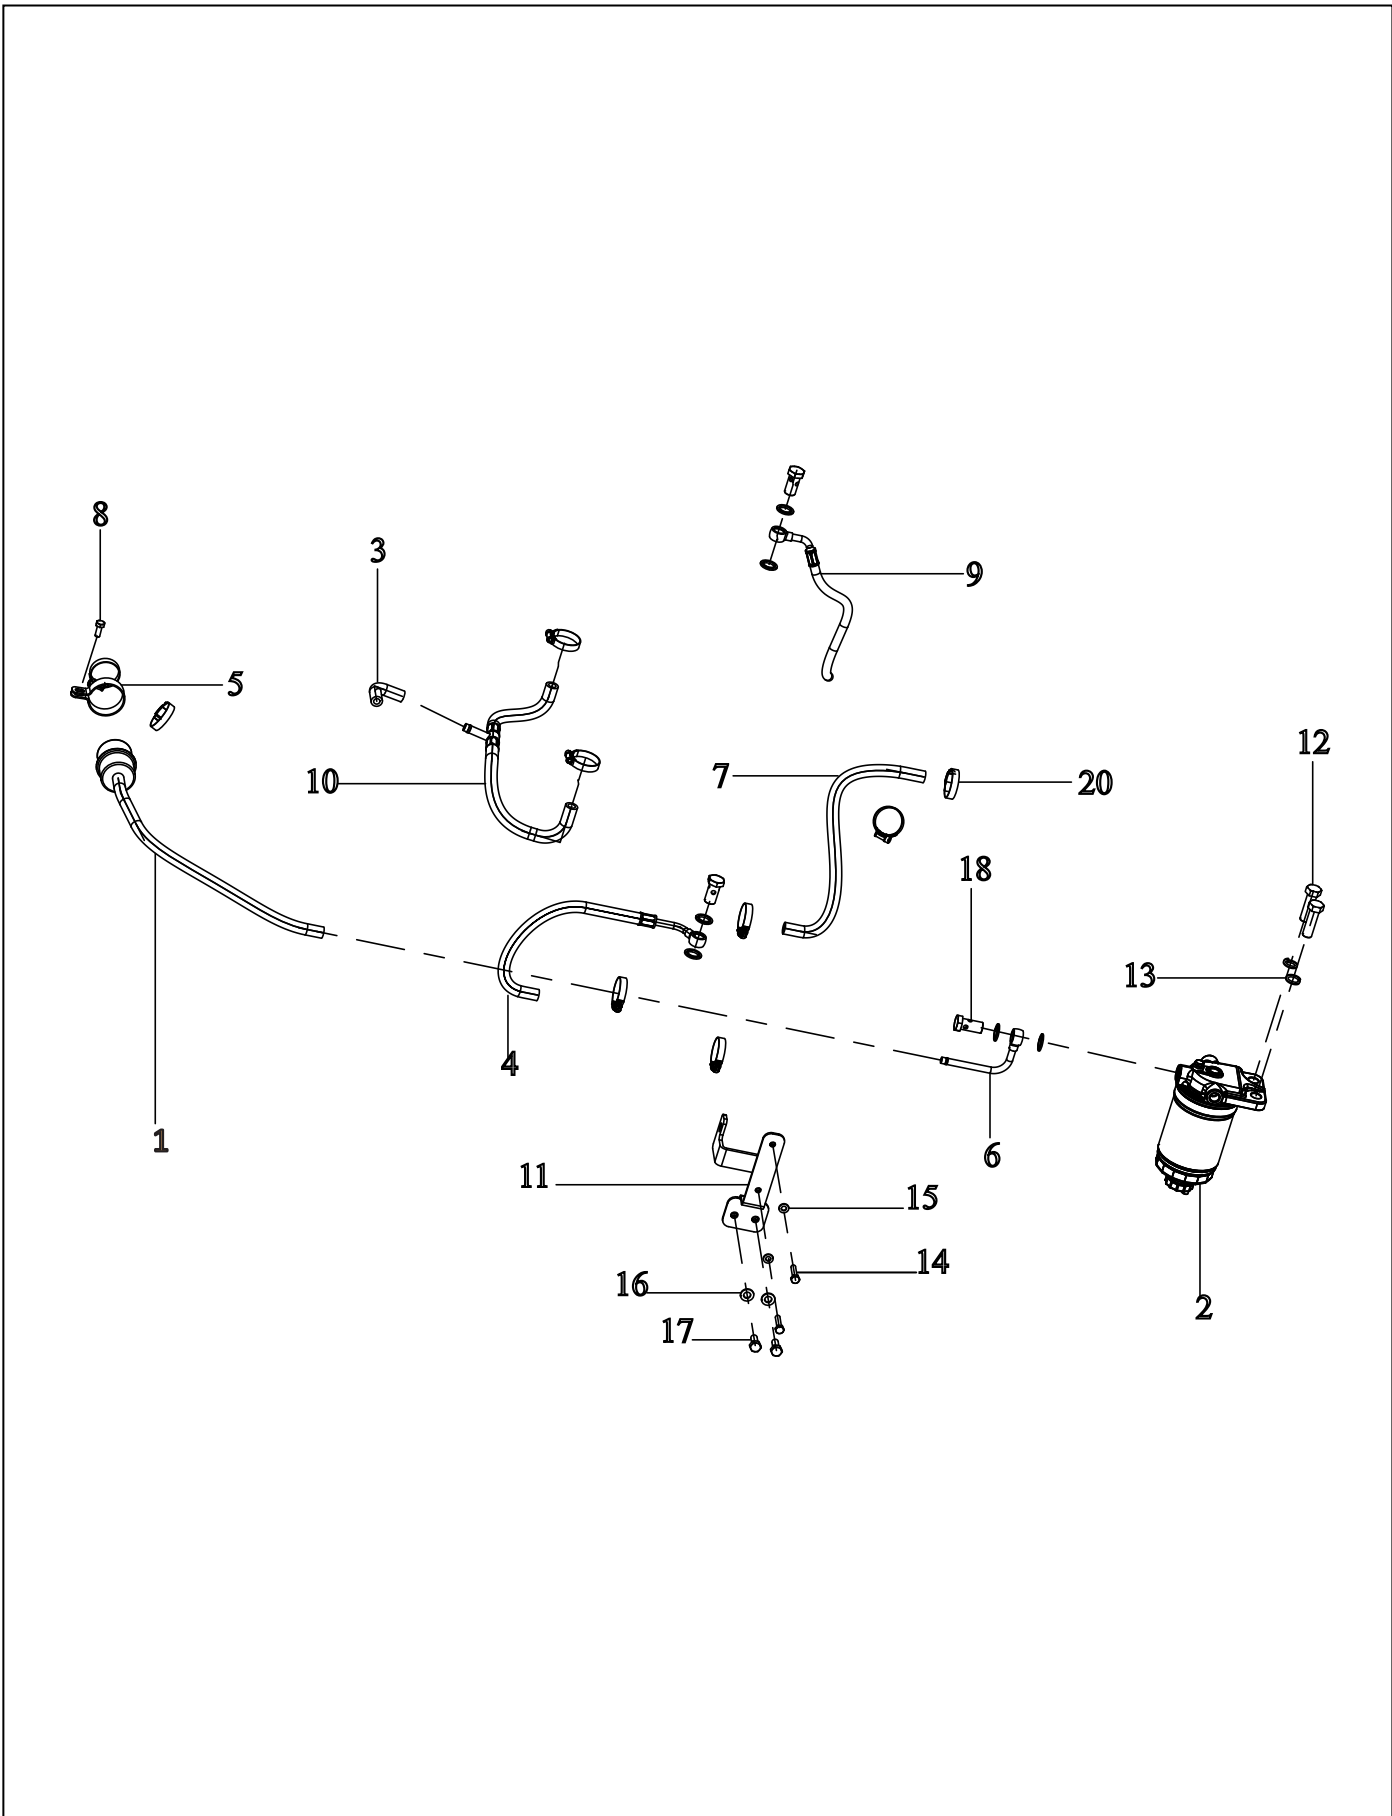


TABLE-7
FUEL SYSTEM SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10611450.9	STRAINER FUEL TANK (COMPACT HST TRACTOR)	1
2	D10562120.9	FILTER ASSEMBLY FUEL SPIN TYPE (ENGINE MITSUBISHI)	1
3	D10611470.9	HOSE TEE CONNECTOR TO FUEL STRAINER	1
4	D10750680.9	HOSE ASSEMBLY FUEL FILTER TO FUEL FEED PUMP	1
5	D10568760.9	CLAMP FUEL STRAINER MOUNTING	1
6	D10750660.9	TUBE ASSEMBLY STRAINER TO FUEL FILTER INLET	1
7	D10711080.9	HOSE ASSEMBLY FUEL PUMP TO FIP	1
8	D81500360.9	BOLT M6X1.00X16-9.8 HEX HEAD	1
9	D10567380.9	HOSE ASSEMBLY FUEL TANK RETURN	1
10	D10611460.9	HOSE ASSEMBLY FUEL TANK TO FUEL STRAINER HOSE	1
11	D10750630.9	BRACKET ASSEMBLY FUEL PUMP MOUNTING	1
12	D81500540.9	BOLT M12X1.75X40-9.8 HEX HEAD	2
13	D86500020.9	WASHER M12 SPRING LOCK	2
14	D10466130.9	BOLT M6X30-5.8 HEX HEAD (FTES SRUBA M6X30-5.8)	2
15	D85500040.9	WASHER M6 FLAT	2
16	D85500050.9	WASHER M8 FLAT	2
17	D81500660.9	BOLT M8X1.25X20-9.8 HEX HEAD	2
18	D10012590.9	BOLT M14X1.5X25.5 HEX HEAD PIPE UNION	3
19	D10513210.9	WASHER BONDED SEAL 14.7X22.0X1.5	6
20	D10017460.9	CLAMP ASSEMBLY FUEL TUBE	9

TABLE-8
FRAME FUEL TANK AND BRACKET HINGE ASSEMBLY

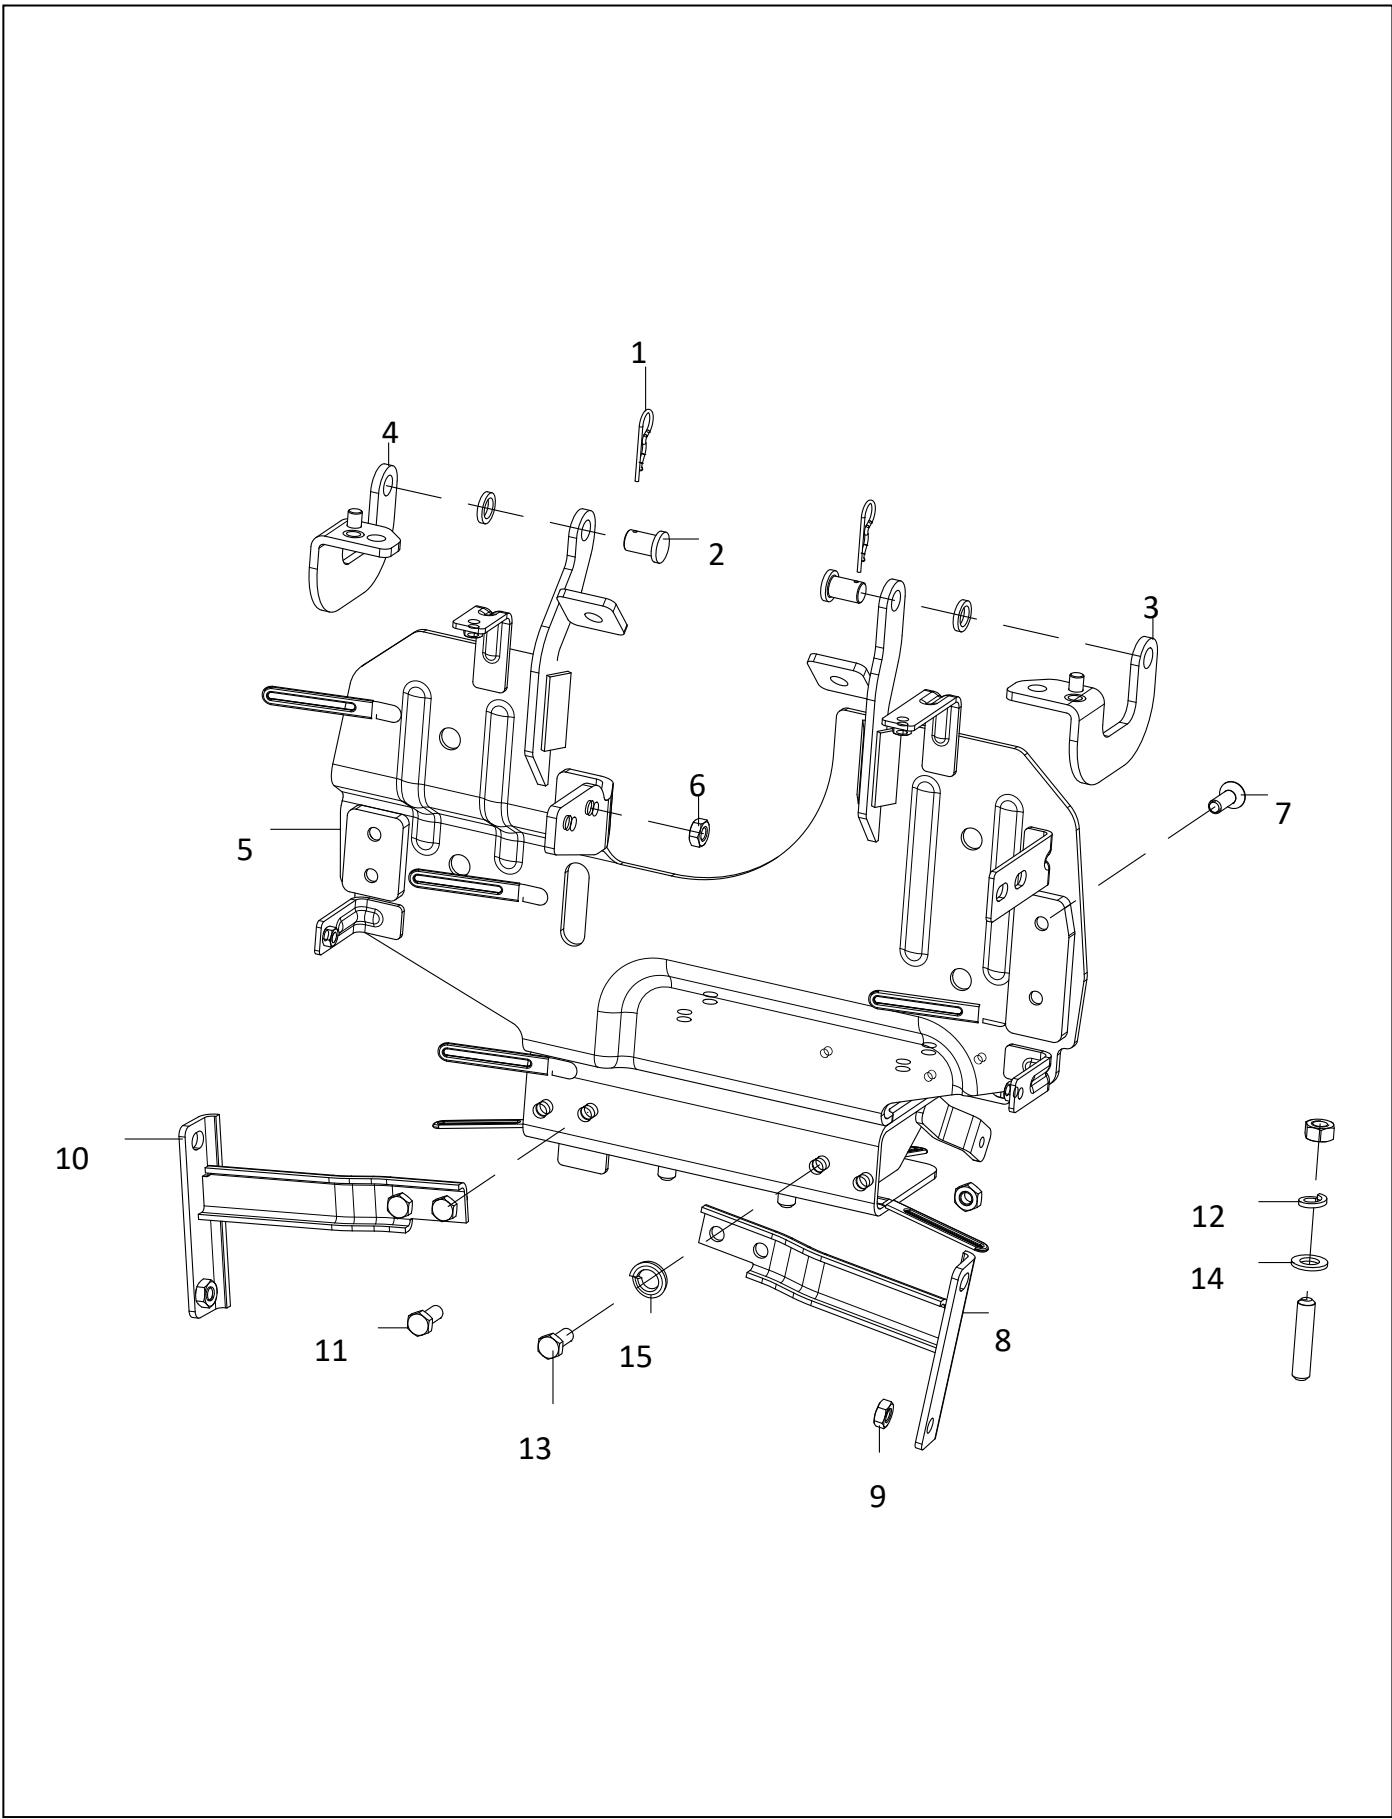


TABLE-8
FRAME FUEL TANK AND BRACKET HINGE ASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10565520.9	PIN SPRING RETAINING 2X40	2
2	D10560960.9	PIN HINGE ASSEMBLY FRONT HOOD	2
3	D10581070.9	BRACKET LH HINGE FRONT HOOD	1
4	D10581060.9	BRACKET RH HINGE FRONT HOOD	1
5	D10560480.9	FRAME ASSEMBLY FUEL TANK	1
6	D83500110.9	NUT M8X1.25-8 HEX	8
7	D82500760.9	SCREW M8X1.25X25-12.9 COUNTERSUNK HEAD	4
8	D10566450.9	BRACKET ASSEMBLY LOWER COVER MOUNTING LH	1
9	D83500060.9	NUT M8X1.25-6 HEX	2
10	D10566420.9	BRACKET ASSEMBLY LOWER COVER MOUNTING RH	1
11	D81500280.9	BOLT M10X1.50X25-9.8 HEX HEAD	4
12	D86500090.9	WASHER M10 SPRING LOCK	4
13	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	4
14	D85500140.9	WASHER M10 FLAT	4
15	D86500030.9	WASHER M8 SPRING LOCK	4

TABLE-9
FUEL TANK SUBASSEMBLY

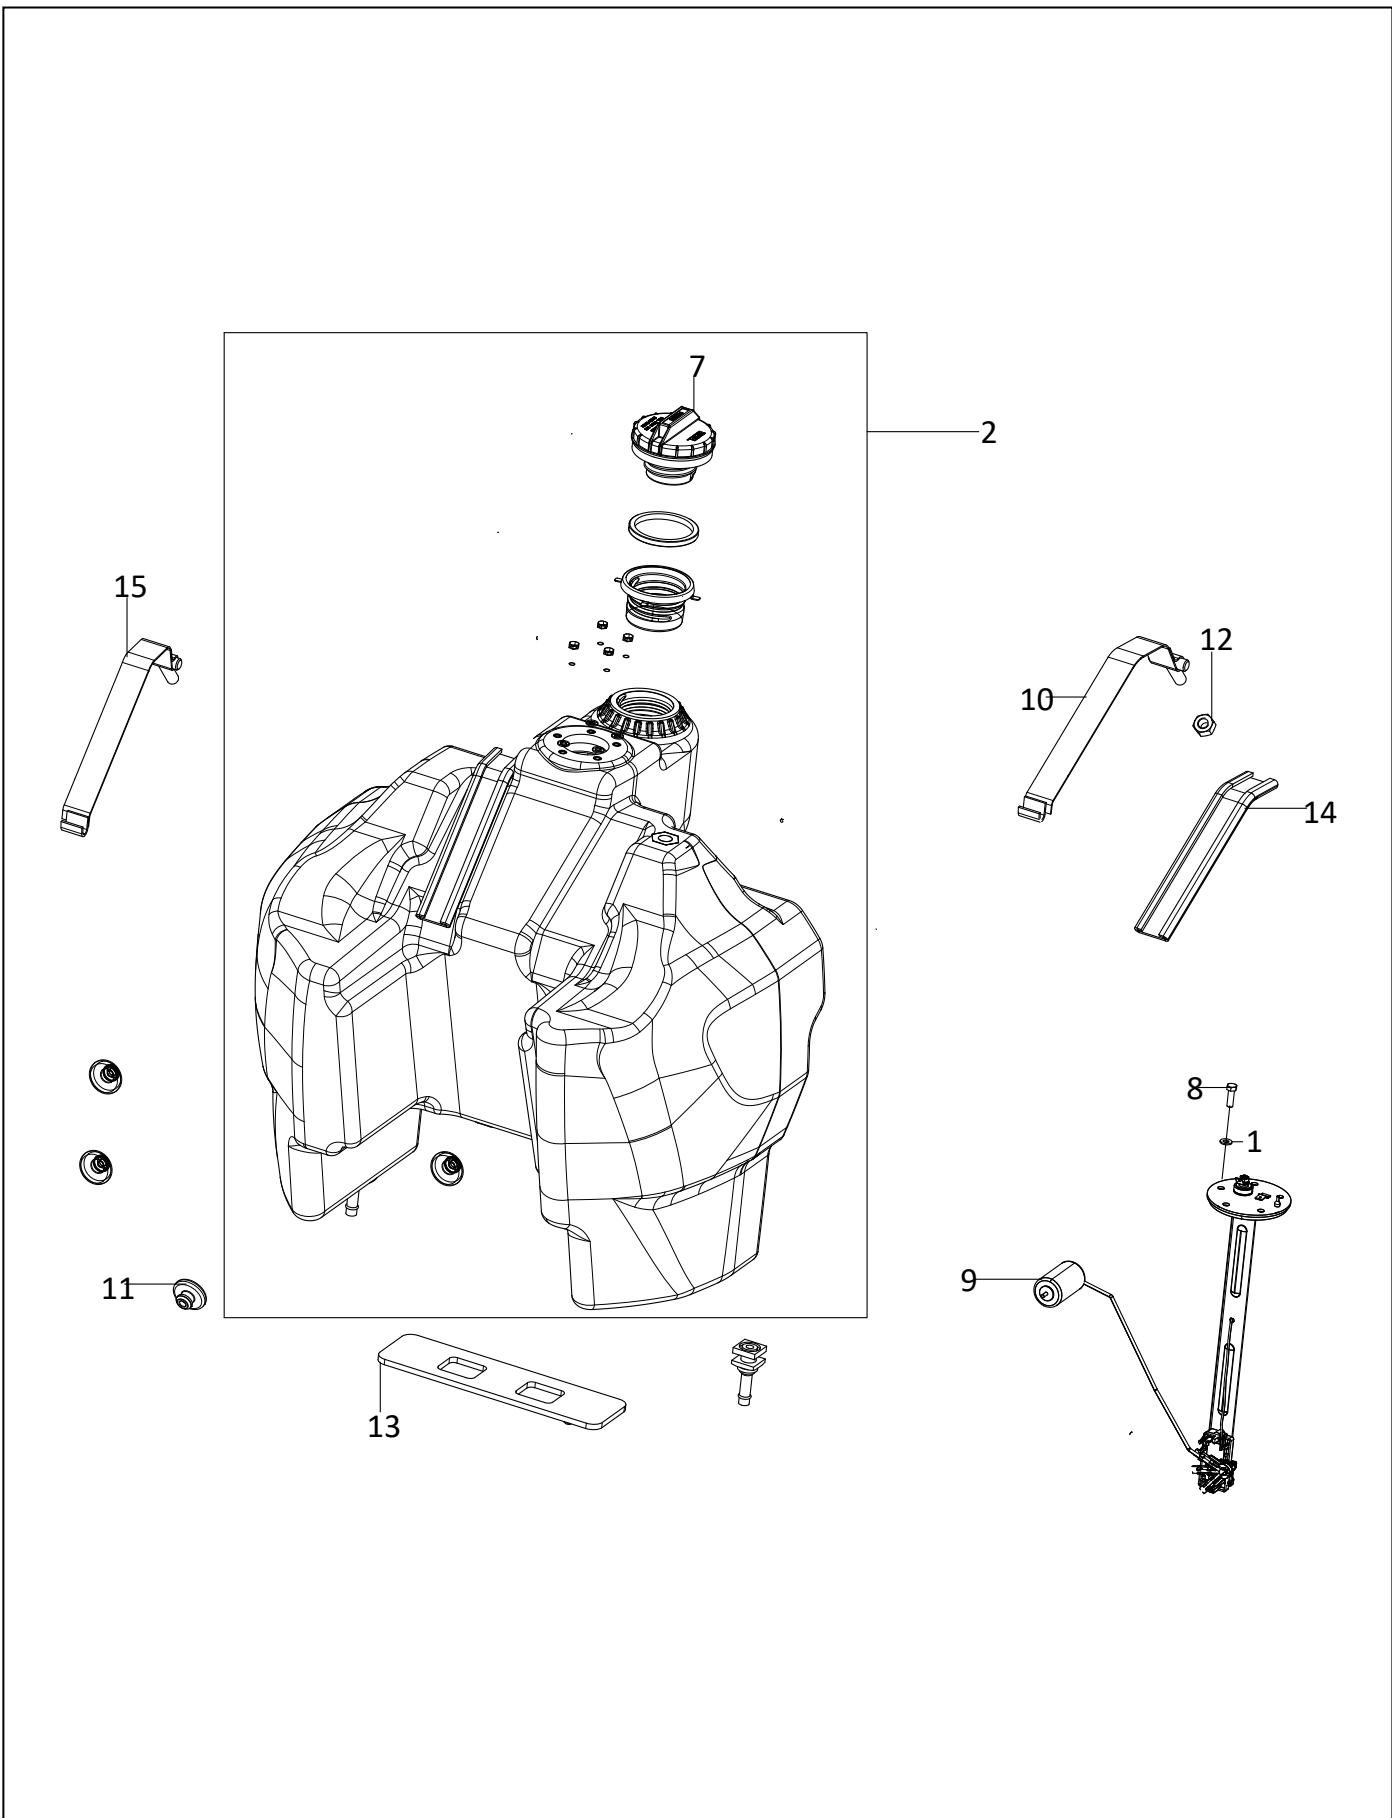


TABLE-9**FUEL TANK SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D85500090.9	WASHER M5 FLAT	5
2	D10560410.9	FUEL TANK AND CAP ASSEMBLY (PLASTIC)	1
2-1	D10560410AF.9	FUEL TANK AND CAP ASSEMBLY (PLASTIC)	1
7	D10560470.9	CAP ASSEMBLY FUEL TANK	1
8	D82501120.9	SCREW M5X0.80X16-6.6 HEX HEAD	5
9	D10562570.9	FLOAT ASSEMBLY FUEL TANK	1
10	D10583340.9	FUEL TANK STRAP ASSEMBLY RH	1
11	D10562340.9	GROMMET FUEL TANK	4
12	D83500090.9	NUT M10X1.50-8 HEX	2
13	D10562360.9	PAD FUEL TANK LOWER	1
14	D10562500.9	PAD FUEL TANK STRAP	2
15	D10562510.9	STRAP ASSEMBLY FUEL TANK	1

TABLE-10
LINKAGE THROTTLE SUBASSEMBLY

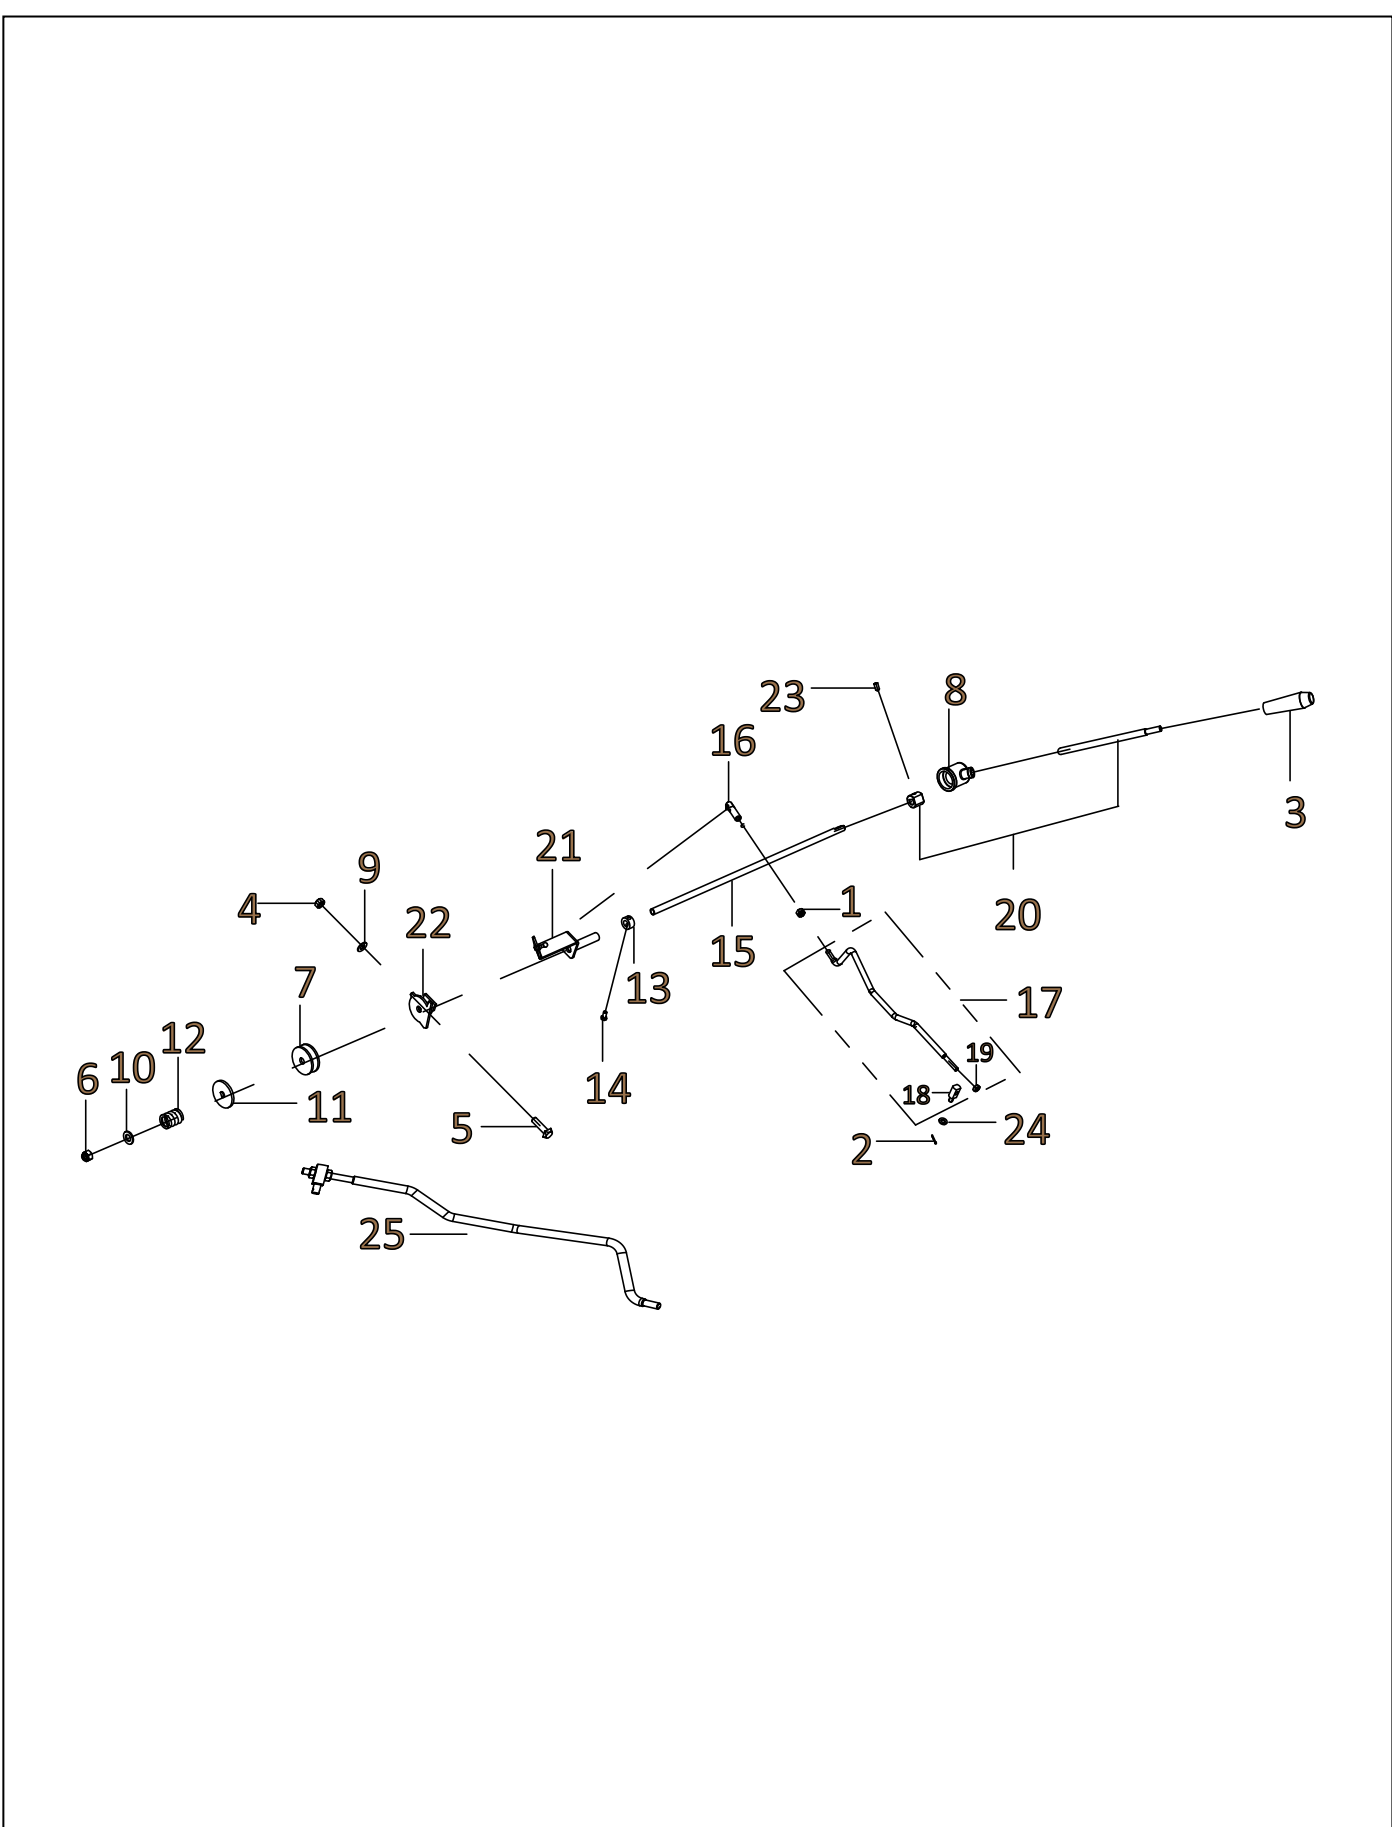


TABLE-10
LINKAGE THROTTLE SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D81000400.9	NUT 1/4"-28 HEX	1
2	D88400010.9	PIN 1.6X12.5 COTTER	1
3	D10511400.9	KNOB HAND THROTTLE CONTROL LEVER	1
4	D83000080.9	NUT 5/16"-18 HEX	1
5	D81000670.9	BOLT 5/16"-24X1.25" SQUARE HEAD	1
6	D10016890.9	NUT 3/8"-24 HEX	1
7	D10018170.9	DISC THROTTLE CONTROL	2
8	D10586270.9	CAP HAND THROTTLE	1
9	D10018690.9	WASHER 5/16" FLAT	1
10	D85000050.9	WASHER 3/8" FLAT	1
11	D10017960.9	PLATE THROTTLE CONTROL	1
12	D10016480.9	SPRING GOVERNOR MANUAL CONTROL LEVER	1
13	D10017970.9	STOP THROTTLE CONTROL LEVER	1
14	D82500030.9	SCREW M5X0.80X10-6.6 HEX HEAD	1
15	D10600190.9	LEVER HAND THROTTLE	1
16	D10614240.9	CONNECTOR ASSEMBLY THROTTLE CONTROL ROD	1
17	D10614250.9	ROD TIE AND CLEVIS ASSEMBLY HAND THROTTLE CONTROL	1
18	D10542760.9	TRUNION PULL TO STOP ROD	1
19	D83500070.9	NUT M6X1.00-6 HEX	2
20	D10586240.9	LEVER ASSEMBLY HAND THROTTLE CONTROL	1
21	D10615330.9	ARM ASSEMBLY HAND THROTTLE CONTROL	1
22	D10600610.9	PLATE ASSEMBLY THROTTLE CONTROL	1
23	D82501690.9	SCREW M6X1.00X12 GRUB (LOCTITE PRE COATED)	1
24	D85500040.9	WASHER M6 FLAT	1
25	D10614250AE.9	ROD TIE AND CLEVIS ASSEMBLY HAND THROTTLE CONTROL	1

TABLE-11
LINKAGE ASSEMBLY DIFFERENTIAL LOCK CONTROL

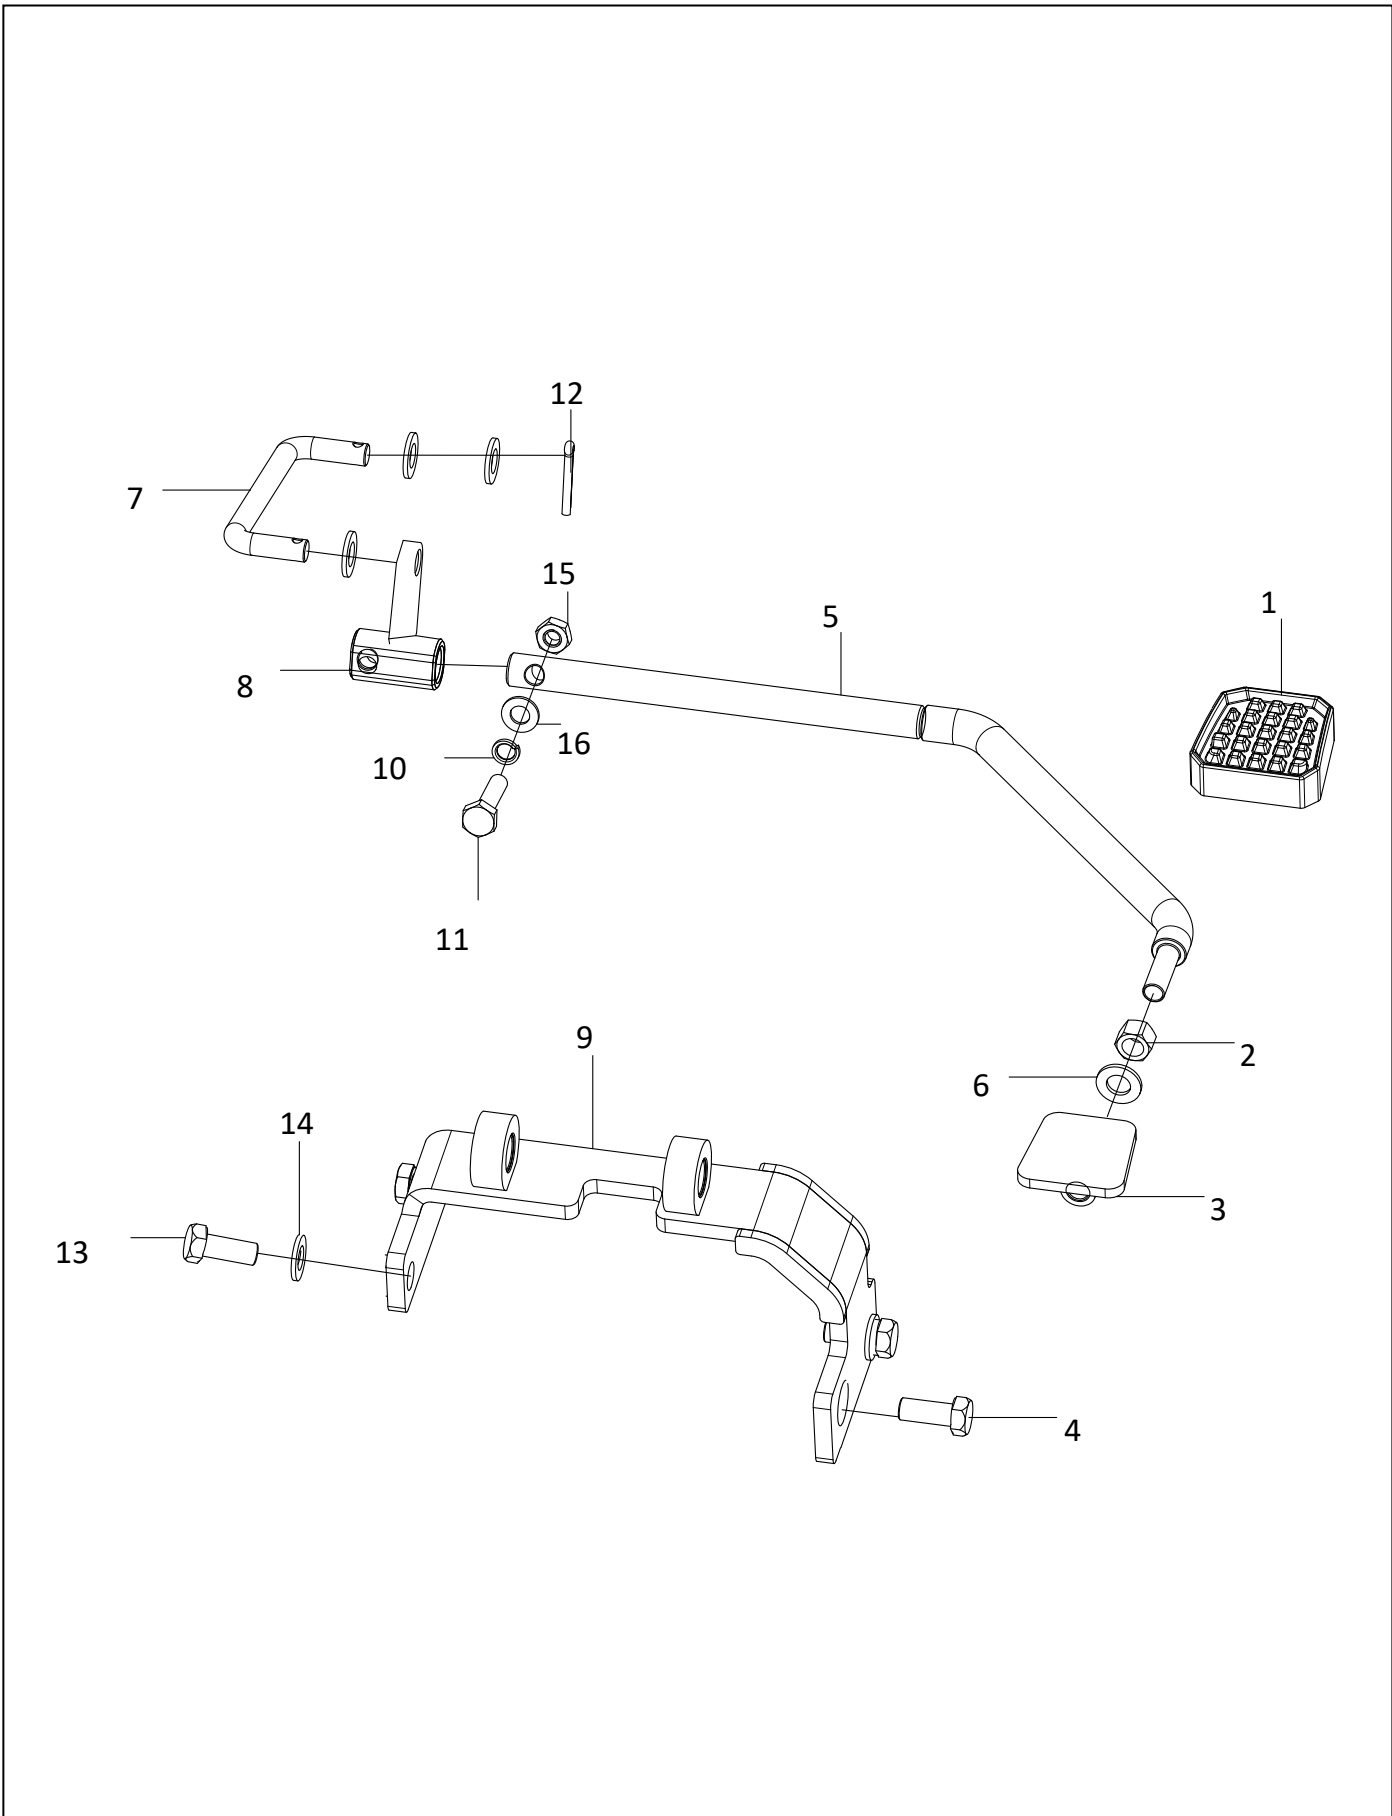


TABLE-11
LINKAGE ASSEMBLY DIFFERENTIAL LOCK CONTROL

Fig. No.	Part No.	Description	Qty
1	D10555660.9	COVER RUBBER FOOT THROTTLE PEDAL	1
2	D83500210.9	NUT M10X1.50-5 HEX	1
3	D10609630.9	PEDAL TOP ASSEMBLY DIFFERENTIAL LOCK	1
4	D10101750.9	BOLT M10X1.50X25-8.8 HEX HEAD	2
5	D10603280.9	PEDAL ASSEMBLY DIFFERENTIAL LOCK	1
6	D85500140.9	WASHER M10 FLAT	7
7	D10740930.9	ROD TIE ASSEMBLY DIFFERENTIAL LOCK	1
8	D10603400.9	LEVER ASSEMBLY DIFFERENTIAL LOCK	1
9	D10736390.9	BRACKET ASSEMBLY DIFFERENTIAL LOCK PEDAL MOUNTING	1
10	D86500030.9	WASHER M8 SPRING LOCK	1
11	D81500030.9	BOLT M8X1.25X35-6.6 HEX HEAD	1
12	D88400040.9	PIN 3.2X25.0 COTTER	2
13	D81500060.9	BOLT M10X1.50X30-8.8 HEX HEAD	2
14	D86500090.9	WASHER M10 SPRING LOCK	4
15	D83500110.9	NUT M8X1.25-8 HEX	1
16	D85500050.9	WASHER M8 FLAT	1

TABLE-12
LEVER MID PTO GEAR SHIFT SUBASSEMBLY

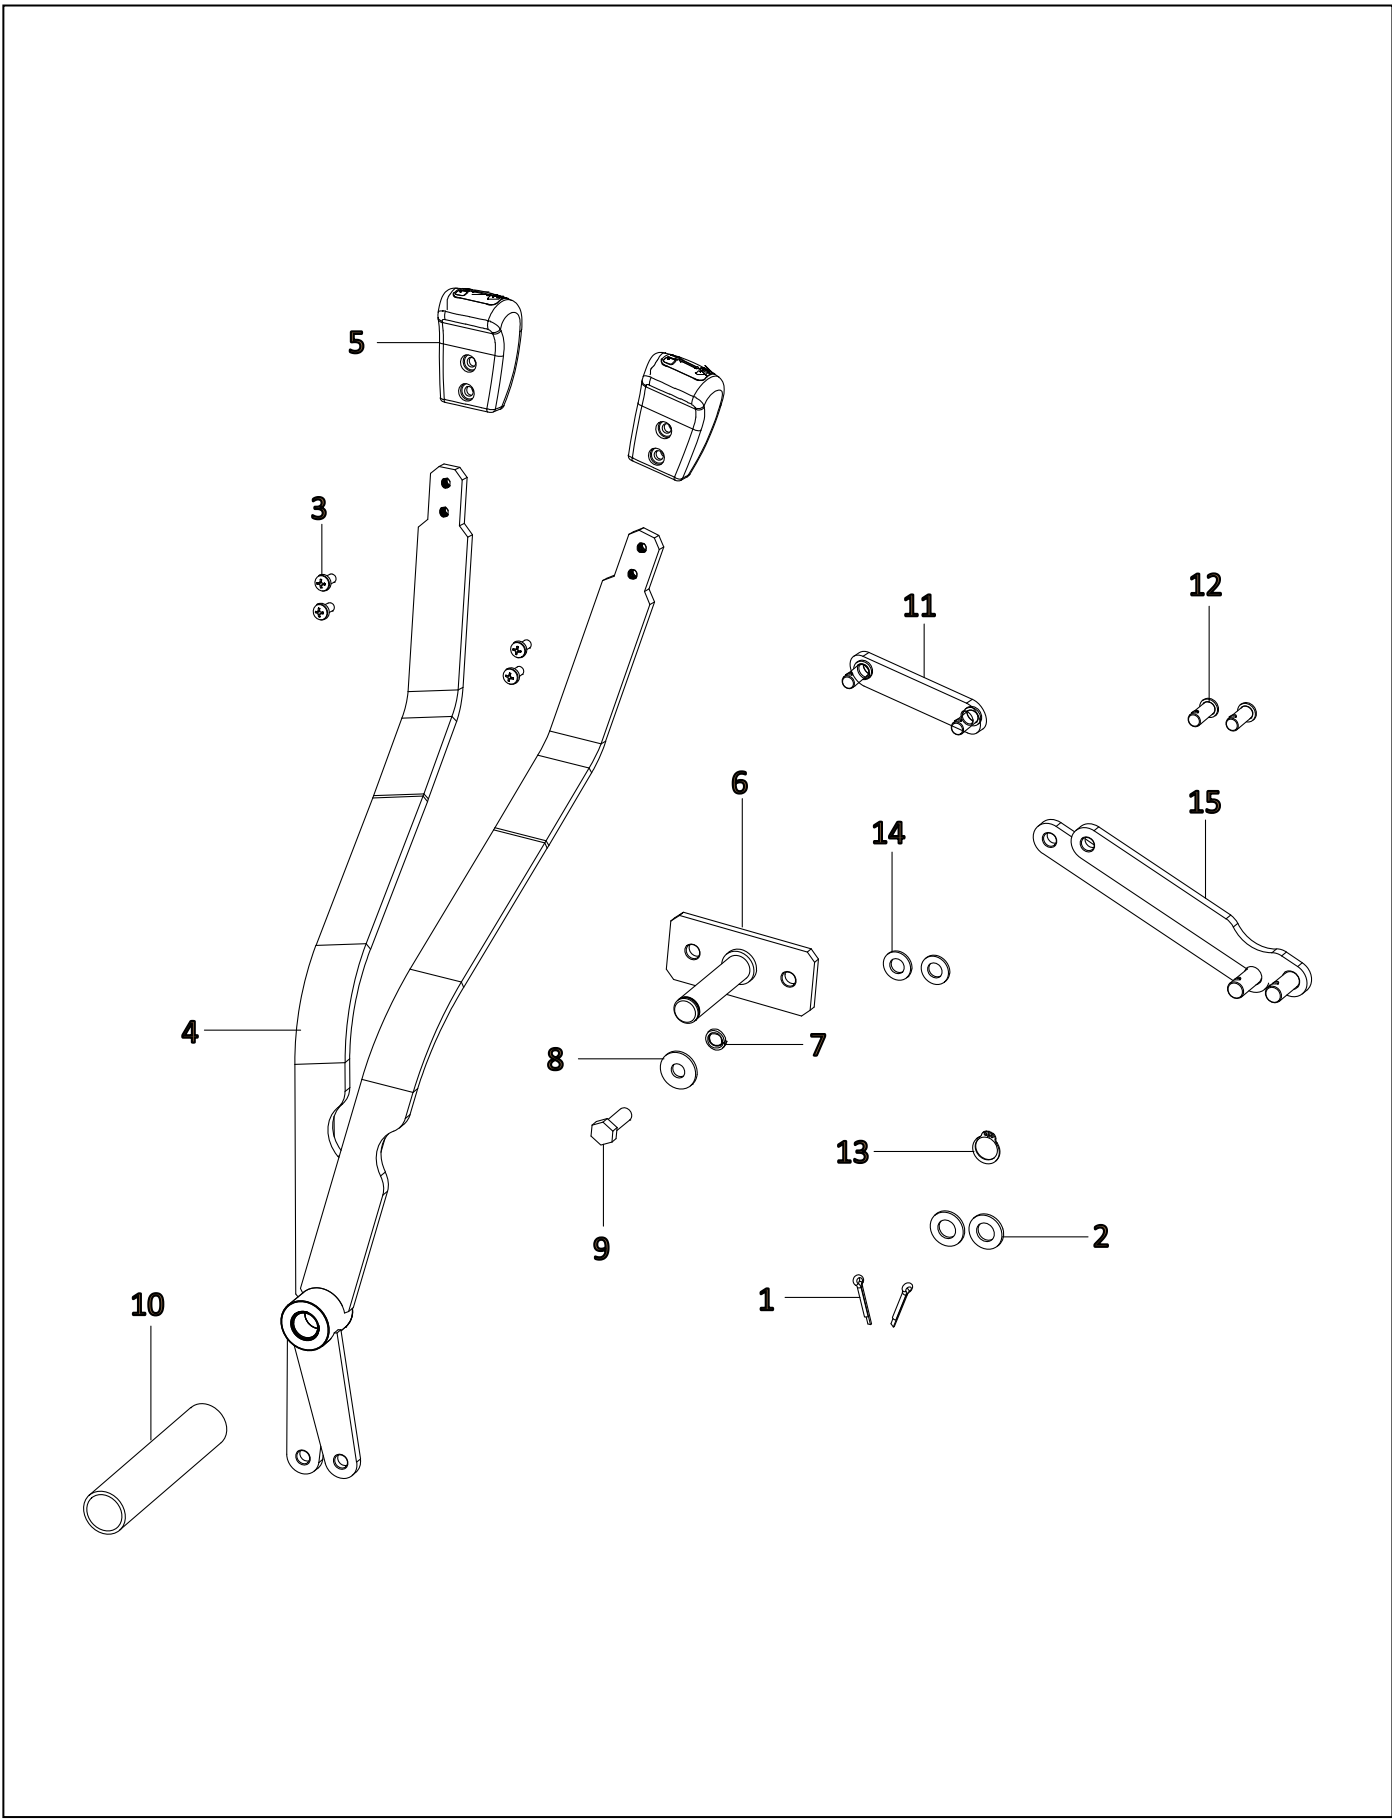


TABLE-12
LEVER MID PTO GEAR SHIFT SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10013460.9	PIN 1/8"X0.75" COTTER	2
2	D85500140.9	WASHER M10 FLAT	1
3	D82501160.9	SCREW M5X0.80X10 CROSS RECESSED PAN HEAD	2
4	D10556940.9	LEVER AND HUB POSITION CONTROL ASSEMBLY	1
5	D10609240.9	KNOB ASSEMBLY LEVER MID PTO GEAR SHIFT	1
6	D10556780.9	LEVER HOLDING BRACKET POSITION AND DRAFT CONTROL ASSEMBLY	1
7	D86500030.9	WASHER M8 SPRING LOCK	2
8	D10009600.9	WASHER 8.5X22 FLAT PHOSPHATED	2
9	D81500590.9	BOLT M8X1.25X25-6.6 HEX HEAD	2
10	D10666300.9	SLEEVE LEVER HAND OPERATED (PVC)	1
11	D10658830.9	LINK ASSEMBLY DRAFT CONTROL	1
12	D93400020.9	PIN 5/16"X.76" CLEVIS	2
13	D90000180.9	CIRCLIP A15X0.90 SB	1
14	D85500730.9	WASHER 30X15X1.2 THRUST	1
15	D10866570.9	LINK CONNECTING ASSEMBLY MID PTO GEAR SHIFT	1

TABLE-13
LEVER POSITION CONTROL SUBASSEMBLY

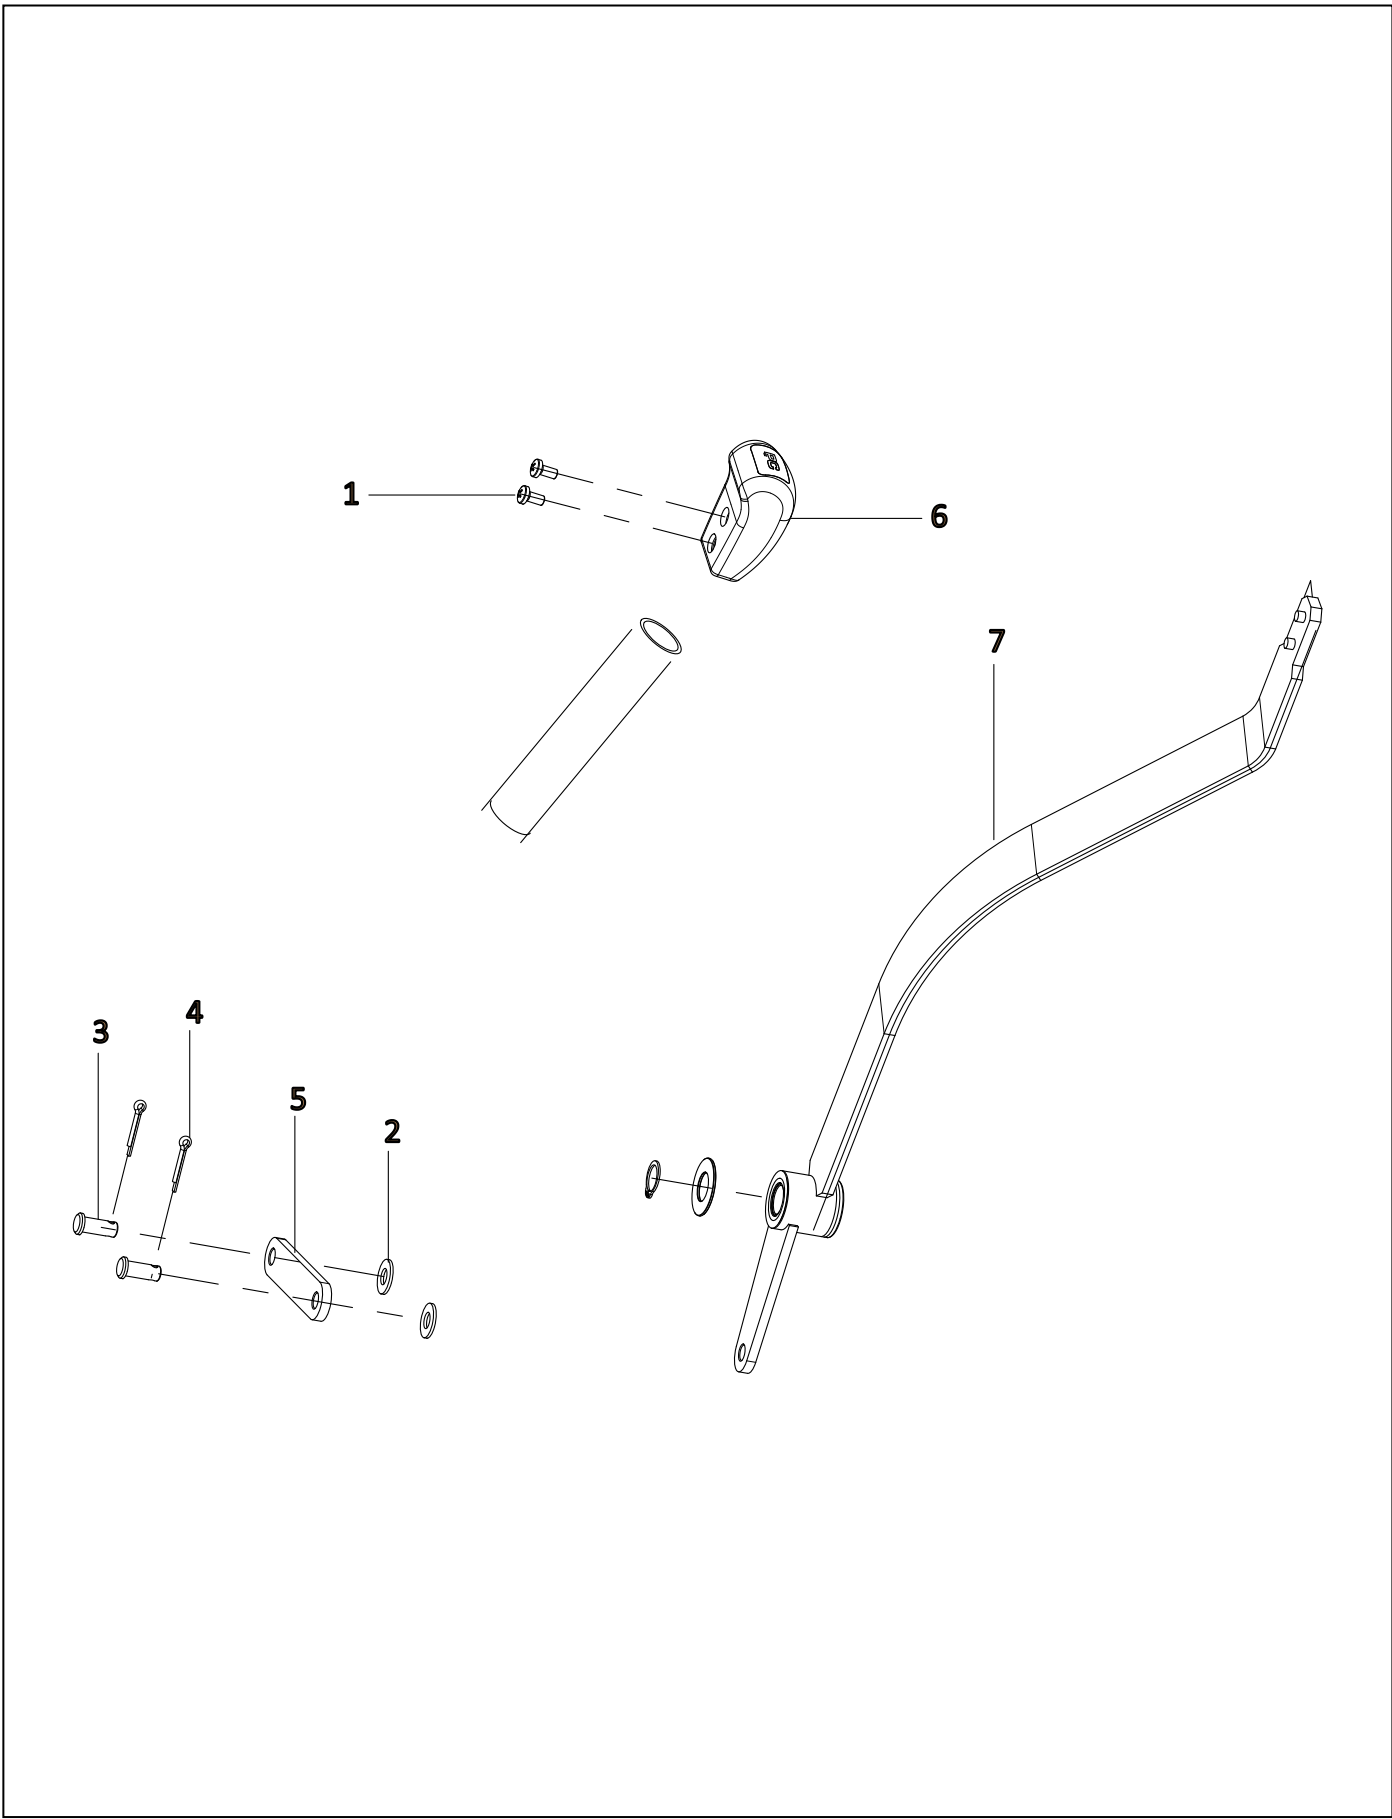


TABLE-13
LEVER POSITION CONTROL SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D82501160.9	SCREW M5X0.80X10 CROSS RECESSED PAN HEAD	2
2	D10006010.9	WASHER 8.5X18 FRICTION	4
3	D93400020.9	PIN 5/16"X.76" CLEVIS	2
4	D10013460.9	PIN 1/8"X0.75" COTTER	2
5	D10556760.9	TIE ROD LINKAGE ASSEMBLY DRAFT CONTROL	1
6	D10583360.9	KNOB ASSEMBLY LEVER POSITION CONTROL	1
7	D10556710.9	LEVER AND HUB DRAFT CONTROL ASSEMBLY	1

TABLE-14
LEVER PTO GEAR SHIFT SUBASSEMBLY

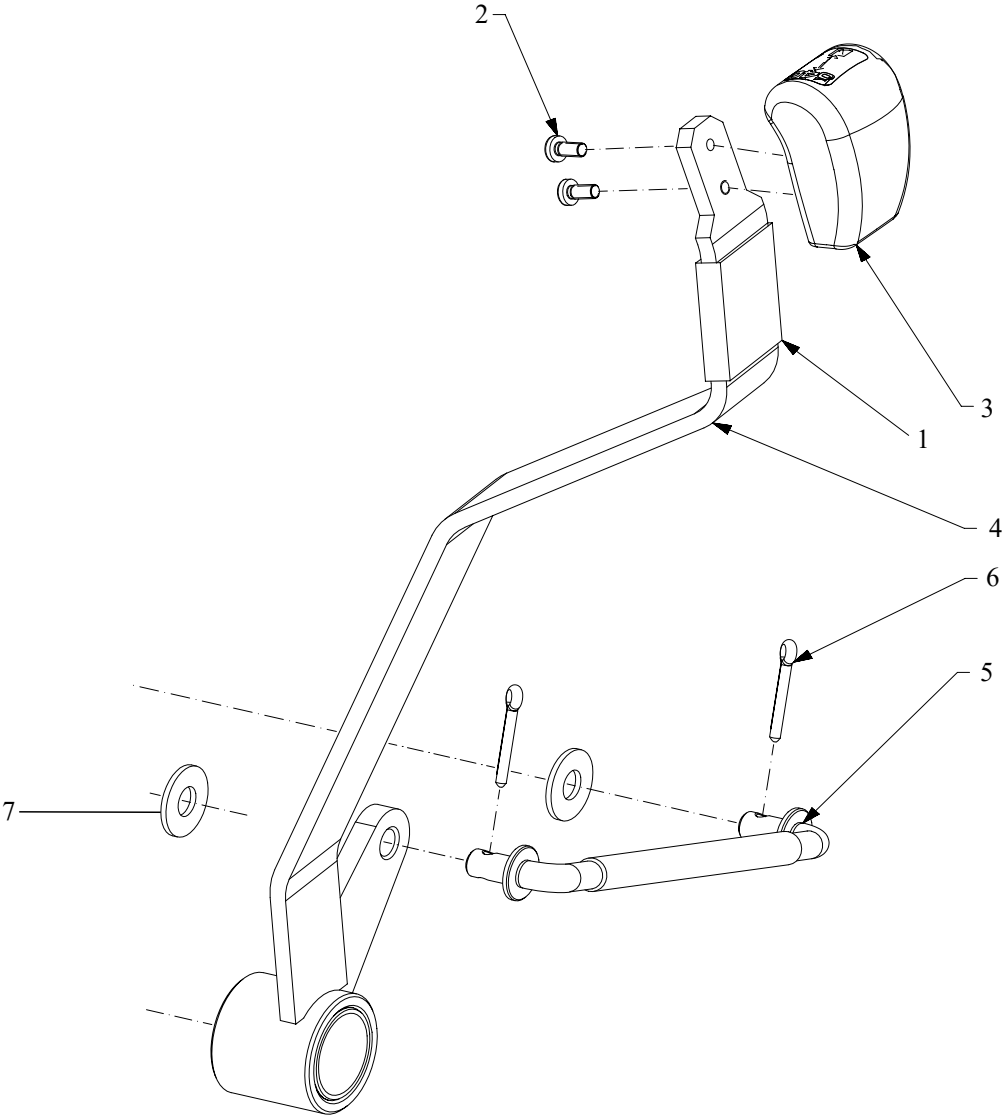


TABLE-14
LEVER PTO GEAR SHIFT SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10666300.9	SLEEVE LEVER HAND OPERATED (PVC)	1
2	D82501160.9	SCREW M5X0.80X10 CROSS RECESSED PAN HEAD	2
3	D10609260.9	KNOB ASSEMBLY LEVER PTO GEAR SHIFT	1
4	D10614840.9	LEVER AND HUB PTO GEAR SHIFT ASSEMBLY	1
5	D10663640.9	LINKAGE ASSEMBLY ROD PTO GEAR SHIFT	1
6	D88400070.9	PIN 4.0X25.0 COTTER	2
7	D85500690.9	WASHER M10X26 FLAT	2

TABLE-15
JOYSTICK CONTROL SUBASSEMBLY

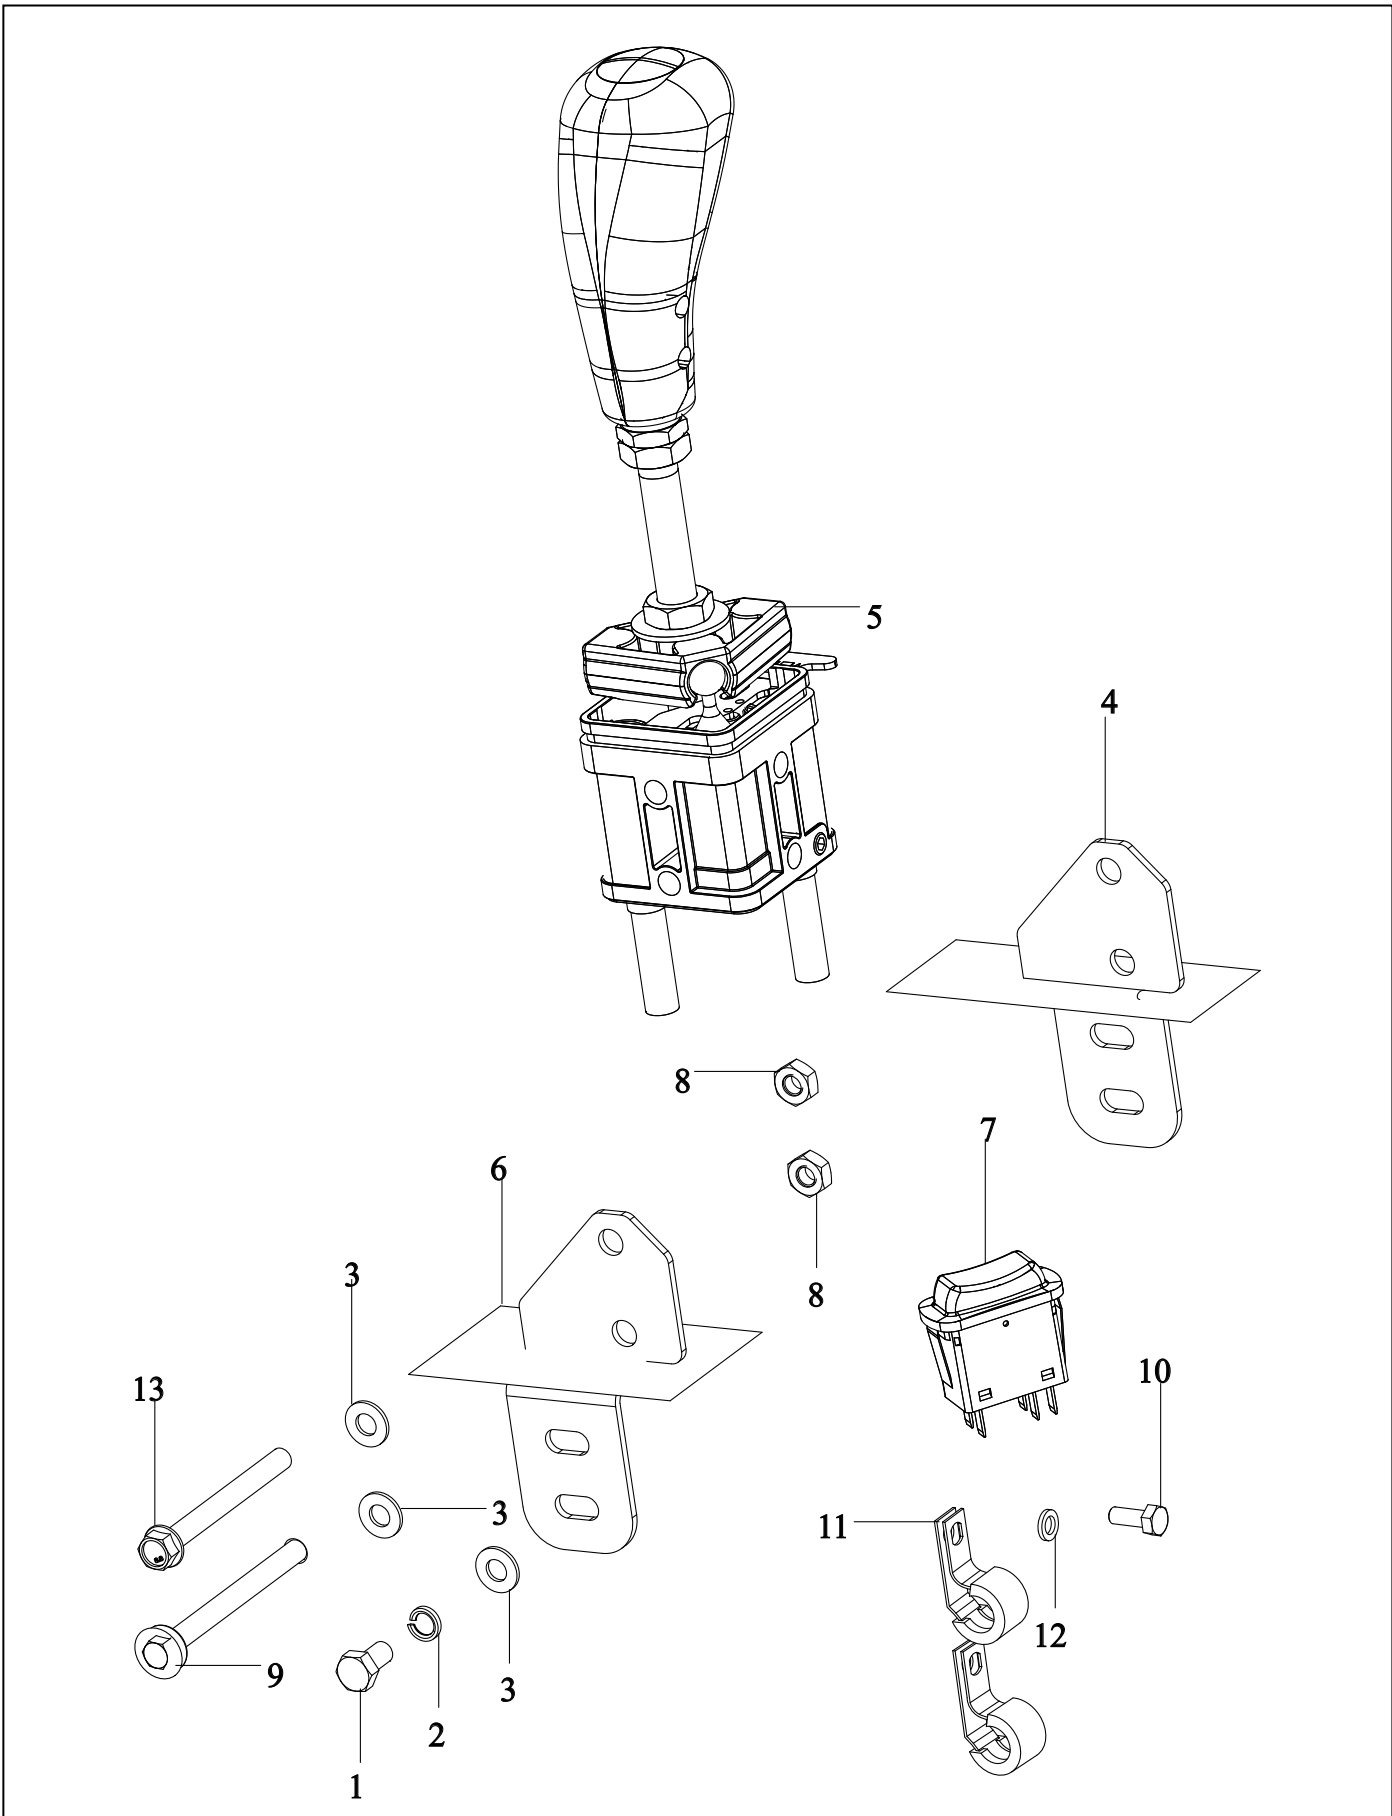


TABLE-15
JOYSTICK CONTROL SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D81503090.9	BOLT M8X1.25X16-8.8 HEX HEAD	4
2	D86500030.9	WASHER M8 SPRING LOCK	6
3	D85500130.9	WASHER M8 FLAT	8
4	D10778110.9	BRACKET JOYSTICK LOADER ACTUATION MOUNTING FRONT	1
5	D10716460.9	JOYSTICK LOADER ACTUATION	1
6	D10778100.9	BRACKET JOYSTICK LOADER ACTUATION MOUNTING REAR	1
7	D10495450.9	SWITCH ASSEMBLY BEACON LAMP	1
8	D83500060.9	NUT M8X1.25-6 HEX	2
9	D81503170.9	BOLT M8X1.25X90-10.9 HEX HEAD FLANGED	1
10	D81500360.9	BOLT M6X1.00X16-9.8 HEX HEAD	2
11	D10544390.9	CLAMP P TYPE (FOR DIA 13.5 TO 15.0)	6
12	D85500110.9	WASHER M6 FLAT	2
13	D81502520.9	BOLT M8X1.25X80-8.8 HEX HEAD FLANGED (WHITE PASSIVATED)	1

TABLE-16
LEVER CONTROL 2WD 4WD SUBASSEMBLY

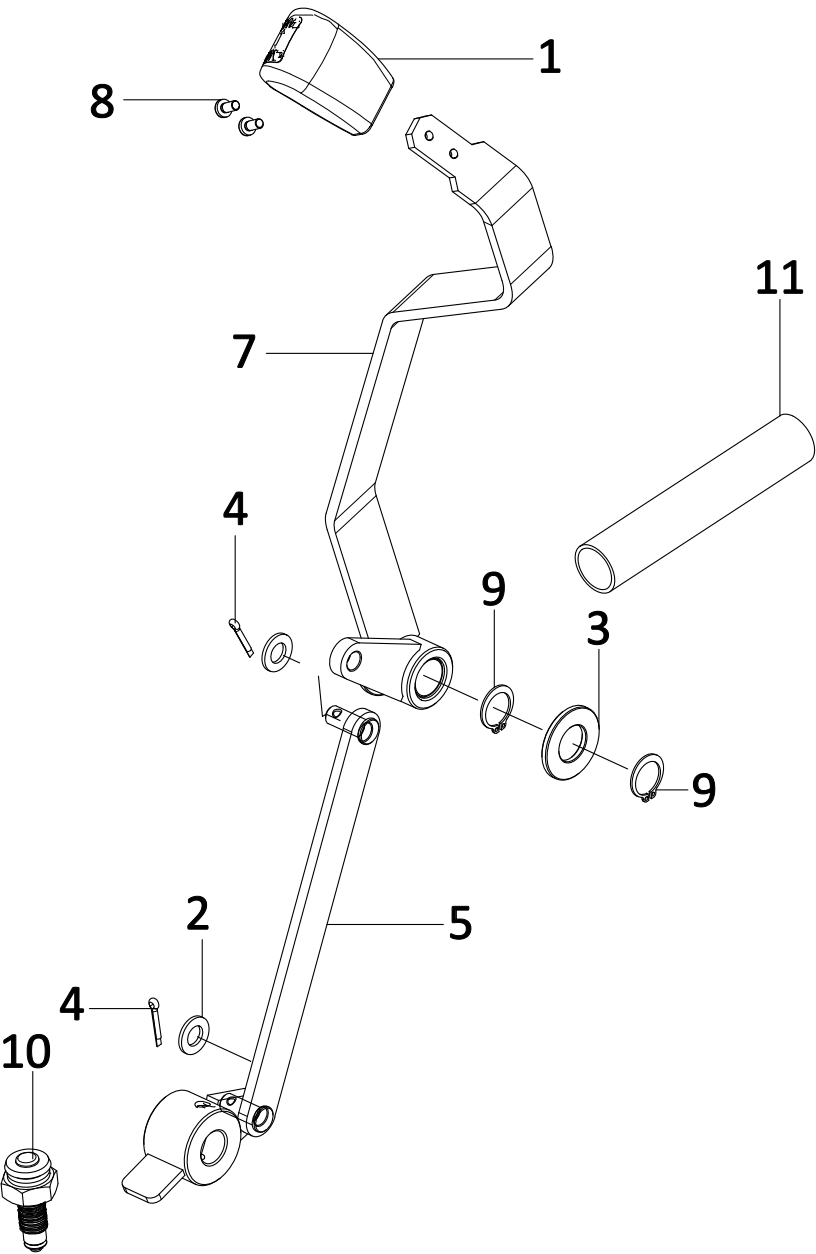


TABLE-16
LEVER CONTROL 2WD 4WD SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10552710.9	KNOB ASSEMBLY LEVER 2WD 4WD	1
2	D85500140.9	WASHER M10 FLAT	4
3	D85500720.9	WASHER 40X20X3.5 THRUST	2
4	D10013460.9	PIN 1/8"X0.75" COTTER	2
5	D10739060AB.9	LINKAGE ASSEMBLY 2WD 4WD	1
7	D10552610.9	LEVER AND HUB ASSEMBLY 2WD 4WD	1
8	D82501160.9	SCREW M5X0.80X10 CROSS RECESSED PAN HEAD	2
9	D90000620.9	CIRCLIP A20X1.2 N	1
10	D10498400.9	SWITCH ASSEMBLY STOP LAMP	1
11	D10817510.9	SLEEVE LEVER HAND OPERATED (PVC)	1

TABLE-17
LEVER RANGE HIGH LOW MEDIUM GEAR SHIFT SUBASSEMBLY

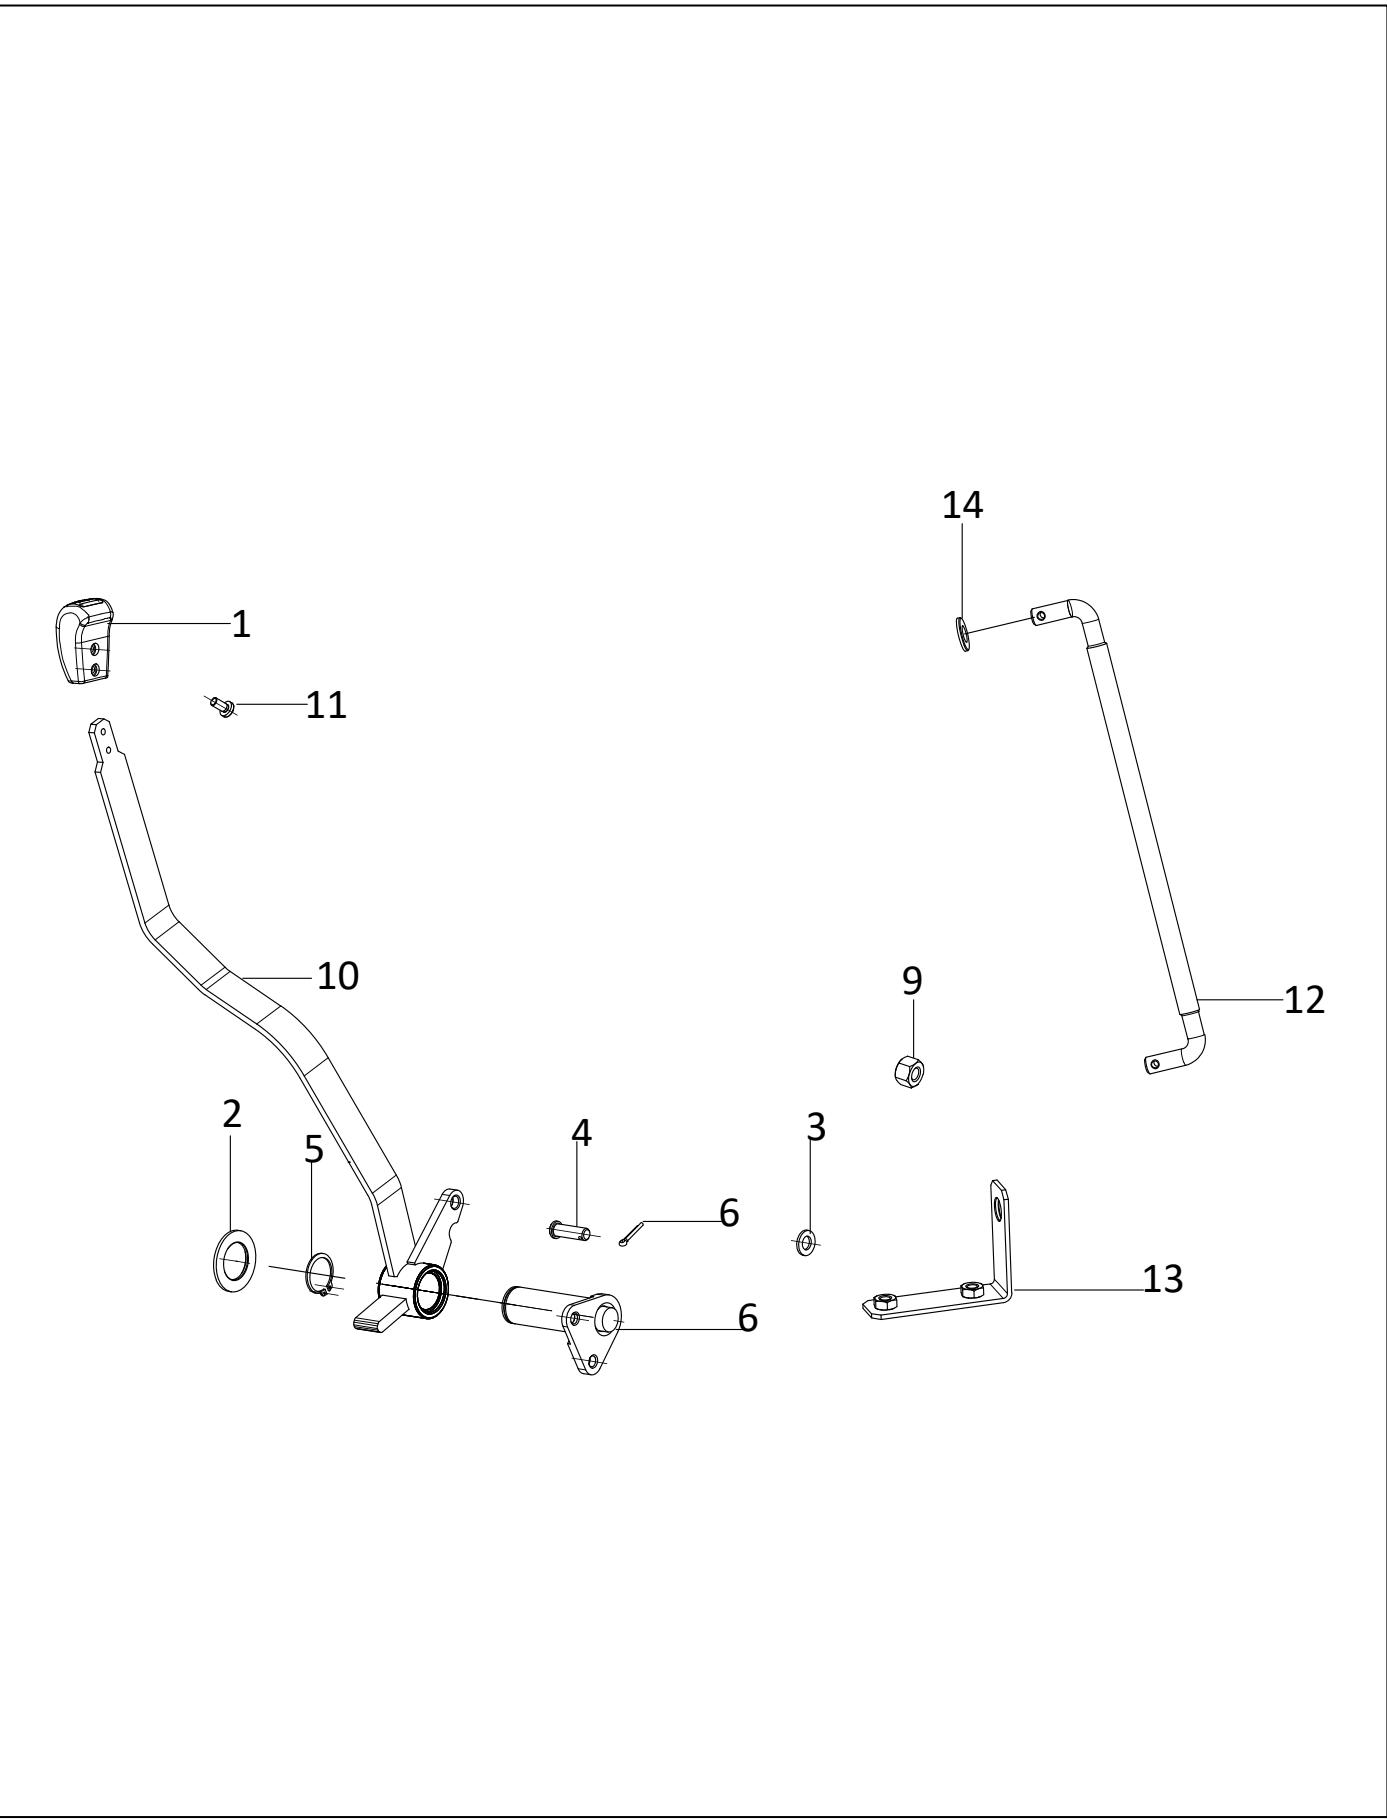


TABLE-17
LEVER RANGE HIGH LOW MEDIUM GEAR SHIFT SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10583370.9	KNOB ASSEMBLY LEVER RANGE HIGH LOW MEDIUM GEAR SHIFT	1
2	D10014630.9	WASHER NYLON 30.5X50 BRAKE SHAFT THRUST	2
3	D85500140.9	WASHER M10 FLAT	4
4	D10020810.9	PIN 10X31.5 CLEVIS	2
5	D90000080.9	CIRCLIP A30X1.5 N	1
6	D10013460.9	PIN 1/8"X0.75" COTTER	2
9	D83500060.9	NUT M8X1.25-6 HEX	2
10	D10552730.9	LEVER AND HUB RANGE HIGH LOW MEDIUM GEAR SHIFT ASSEMBLY	1
11	D82501370.9	SCREW M5X0.80X10 CROSS RECESSED PAN HEAD (ZINC PLATED)	2
12	D10663660.9	LINKAGE ASSEMBLY ROD RANGE GEAR SHIFT	1
13	D10664480.9	BRACKET ASSEMBLY HOLDING GEAR SHIFT SWITCH	1
14	D85500690.9	WASHER M10X26 FLAT	2

TABLE-18
SHAFT PROPELLER ASSEMBLY (4WD COMPACT HST)

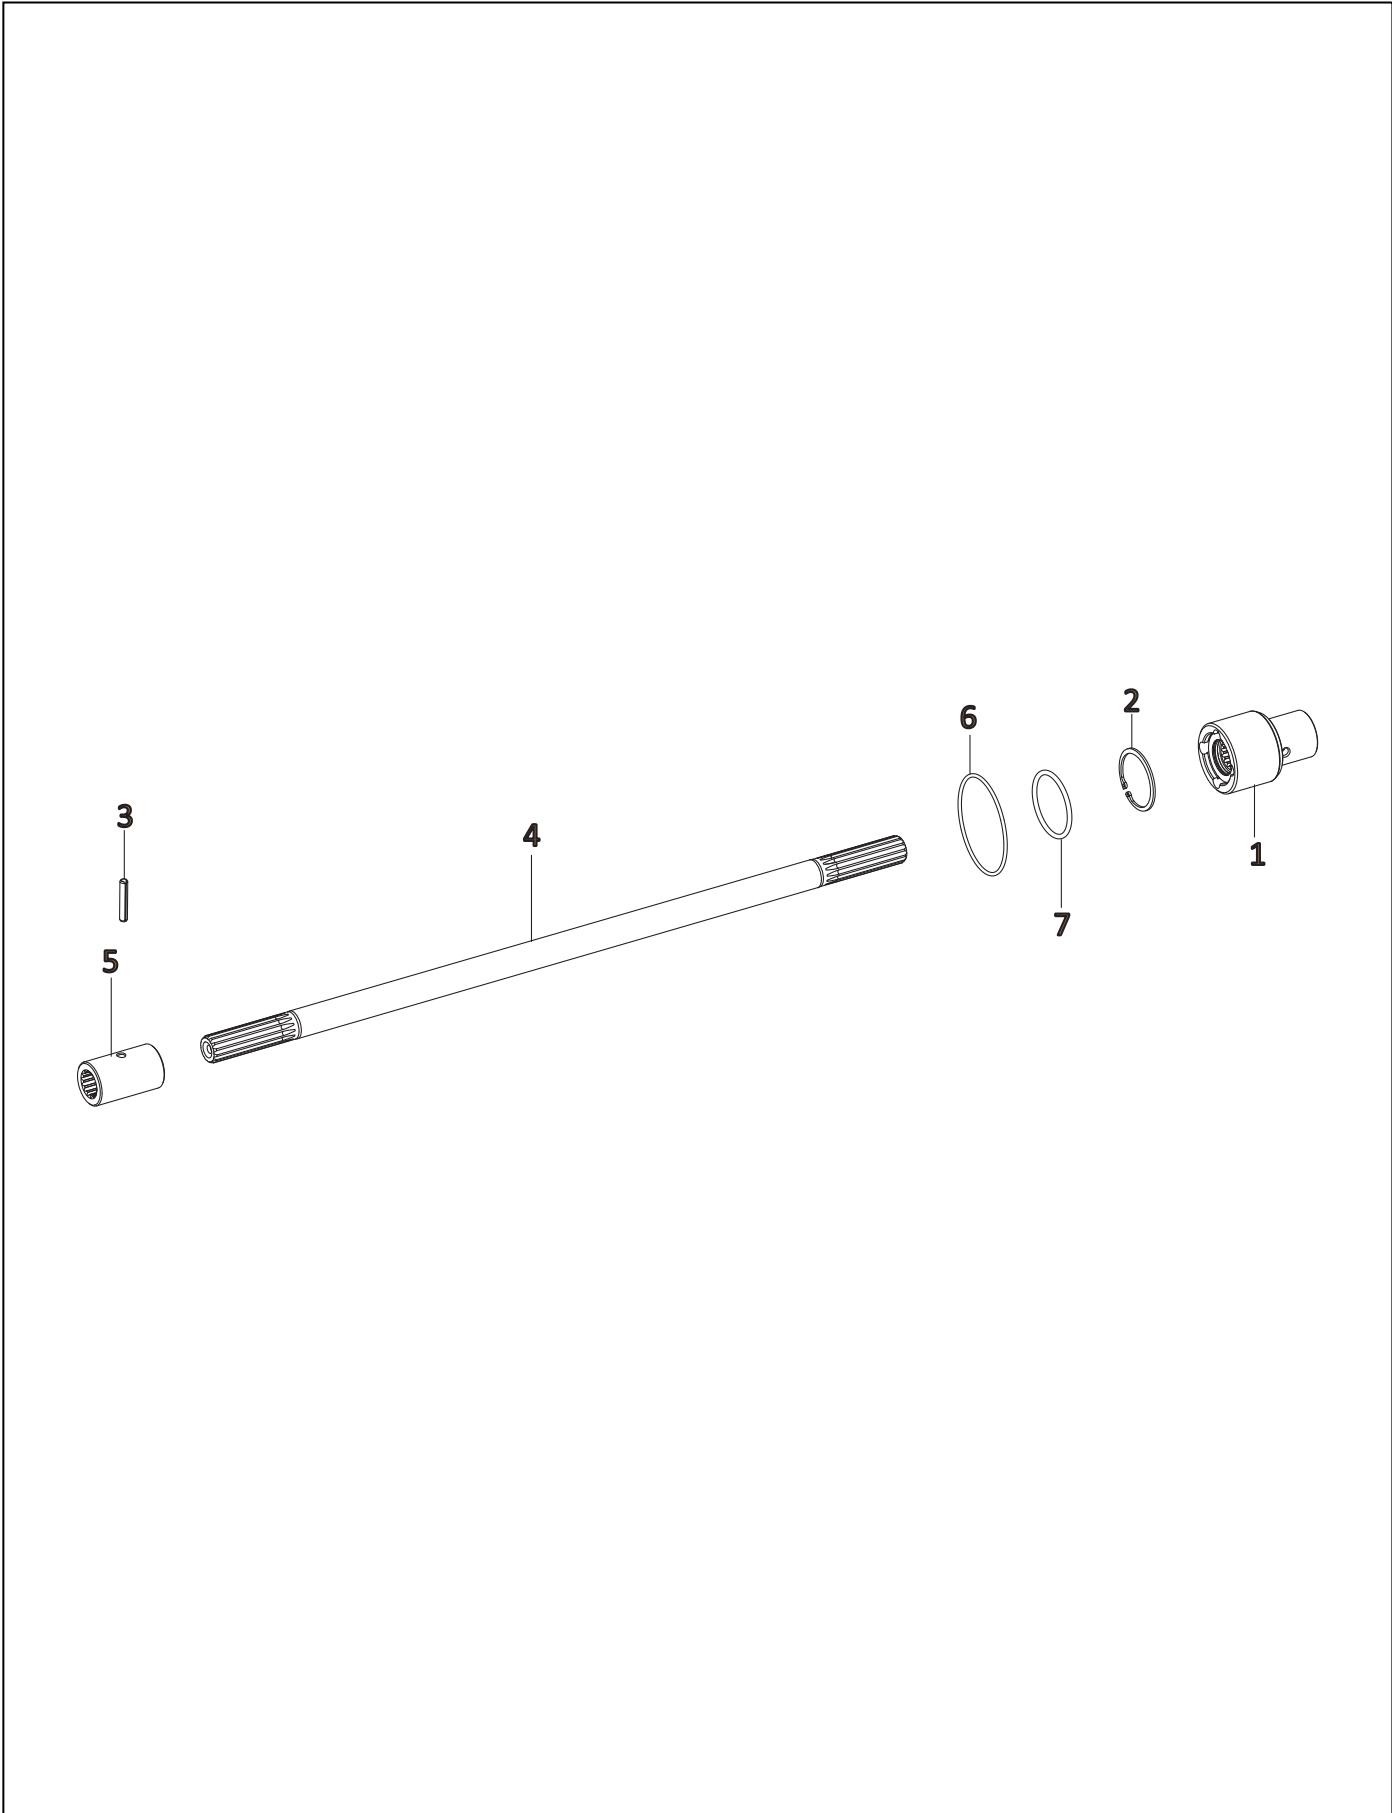


TABLE-18
SHAFT PROPELLER ASSEMBLY (4WD COMPACT HST)

Fig. No.	Part No.	Description	Qty
1	D10554580.9	COUPLING ASSEMBLY PROPELLER SHAFT	1
2	D90500100.9	CIRCLIP B40X1.75 N	1
3	D87500510.9	PIN 6.0X35.0 SPRING DOWEL	2
4	D10599880.9	SHAFT PROPELLER (4WD HST)	1
5	D10548310.9	COUPLING PROPELLER SHAFT (4WD)	1
6	D93601070.9	SEAL O RING 2.62X75.87	1
7	D93601260.9	SEAL O RING 0.139"X1.859"	1

TABLE-19
GUARD ASSEMBLY PROPELLER SHAFT

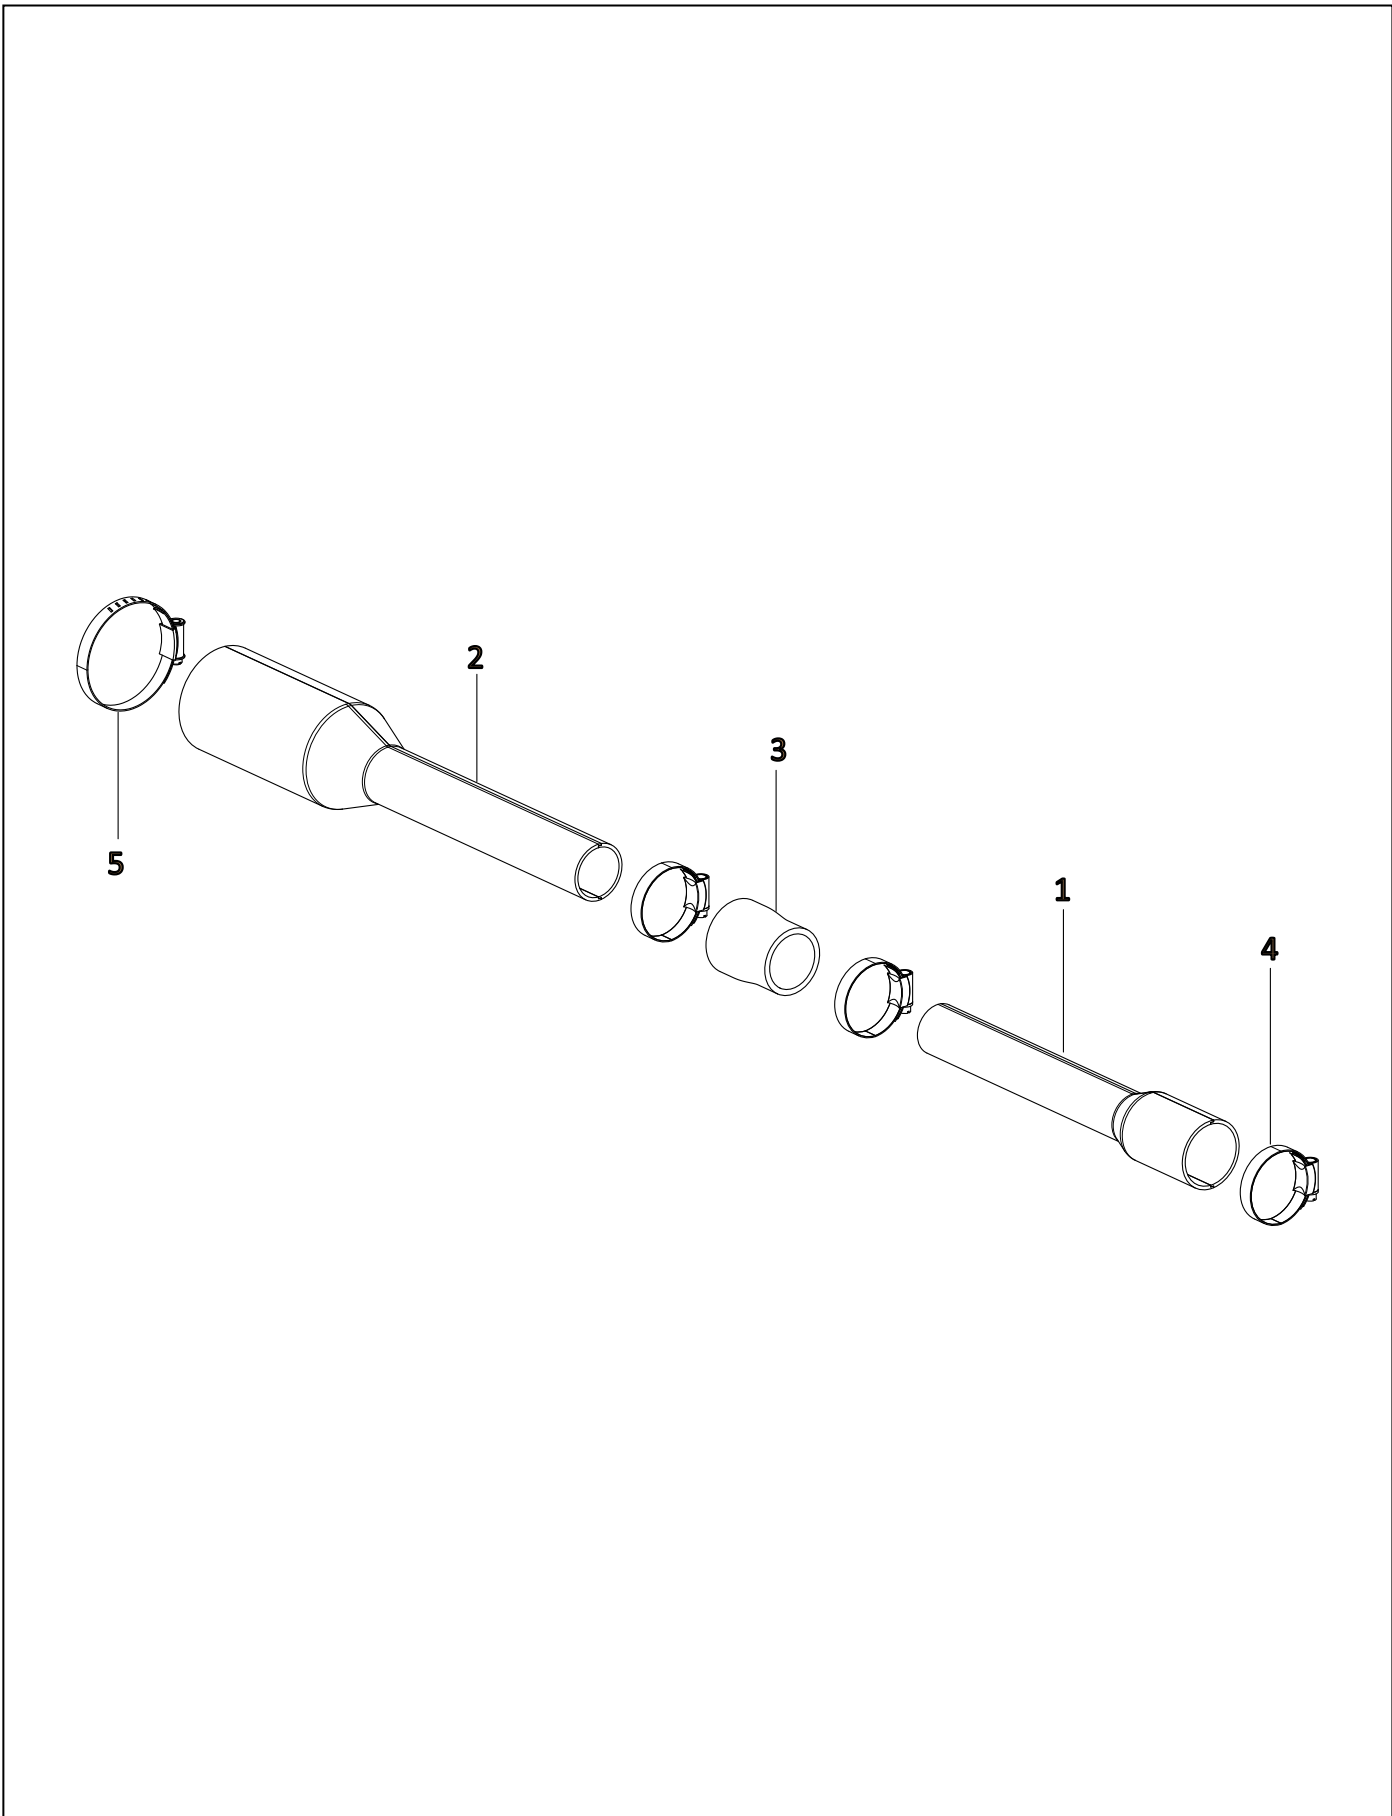


TABLE-19
GUARD ASSEMBLY PROPELLER SHAFT

Fig. No.	Part No.	Description	Qty
1	D10615800.9	GUARD ASSEMBLY PROPELLER SHAFT REAR	1
2	D10561500.9	GUARD ASSEMBLY PROPELLER SHAFT FRONT	1
3	D10656670.9	HOSE GUARD ASSEMBLY PROPELLER SHAFT	1
4	D10017170.9	CLAMP ASSEMBLY 70MM DIAMETER	3
5	D10046730.9	CLAMP ASSEMBLY INTAKE MANIFOLD FT80	1

TABLE-20

HOUSING ASSEMBLY SWIVEL FRONT AXLE RH WITH HARDWARE SUBASSEMBLY (4WD COMPACT)

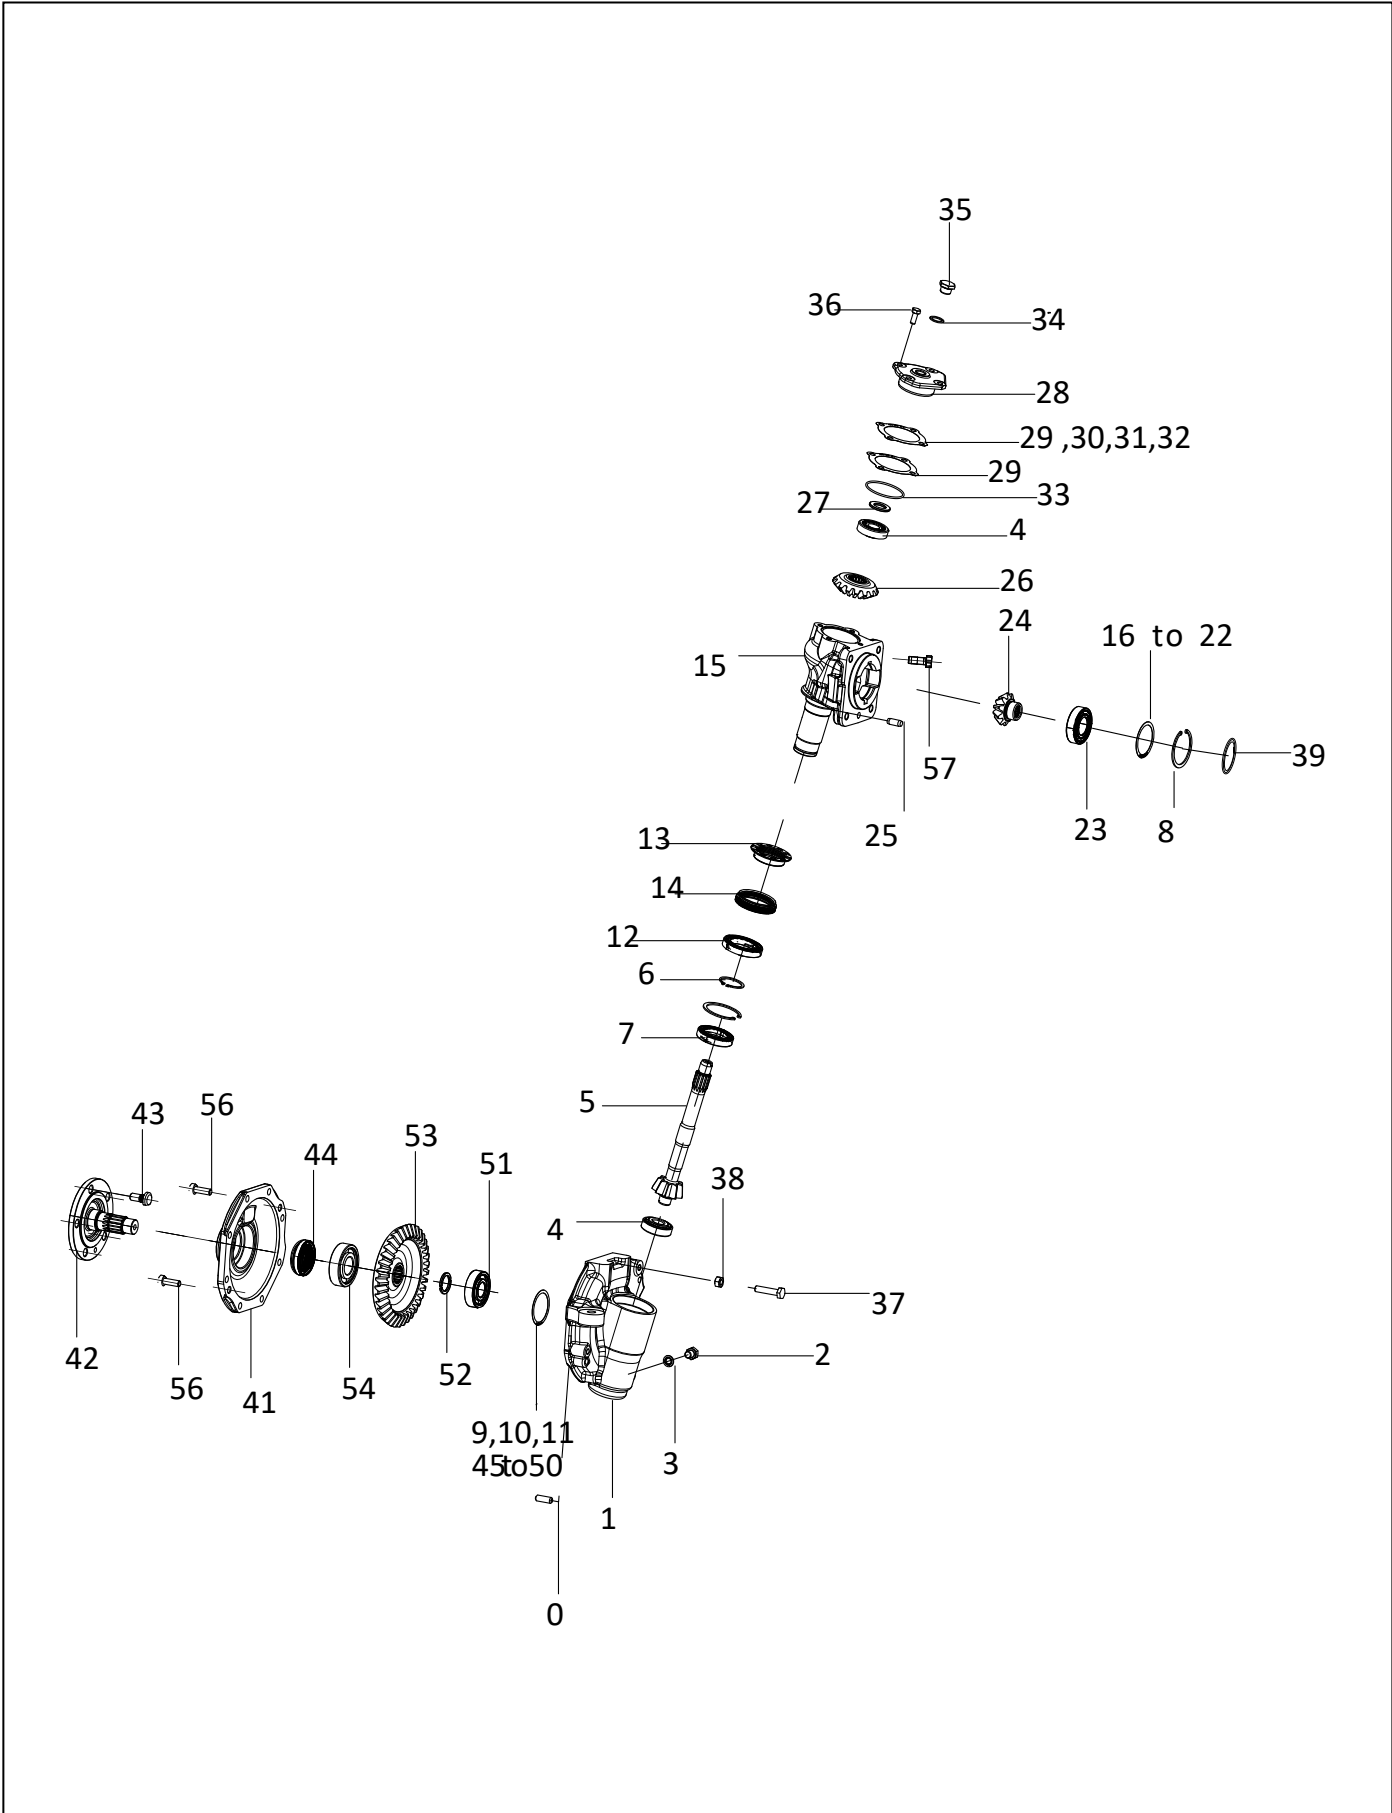


TABLE-20**HOUSING ASSEMBLY SWIVEL FRONT AXLE RH WITH HARDWARE SUBASSEMBLY (4WD COMPACT)**

Fig. No.	Part No.	Description	Qty
1	D10528120.9	HOUSING SWIVEL FRONT AXLE RH	1
2	D82501210.9	SCREW M12X1.75X12-8.8 HEX HEAD	1
3	D10161480.9	WASHER 12.0X22.0 SCREW RAIL	1
4	D10533270.9	BEARING TAPER ROLLER 30304	2
5	D10528100.9	SHAFT DRIVER BEVEL GEAR Z-9	1
6	D90000660.9	CIRCLIP A40X2.5 H	1
7	D10538670.9	BEARING BALL 6908	1
8	D90500410.9	CIRCLIP B62X2.0 N (IS 3075 PART-II)	2
9	D10542380.9	SHIM 60X50 (0.075 MM)	1
10	D10542390.9	SHIM 60X50 (0.2285 MM)	1
11	D10542400.9	SHIM 60.X50 (0.4065 MM)	1
12	D10538680.9	BEARING BALL 6909	1
13	D10550290.9	SLEEVE OIL SEAL SWIVEL HOUSING	1
14	D10550300.9	SEAL OIL SWIVEL HOUSING 52X70X10	1
15	D10528130.9	HOUSING KNUCKLE FRONT AXLE	1
16	D10542310.9	SHIM 61.8X51 (0.2285 MM)	1
17	D10542320.9	SHIM 61.8X51 (0.4065 MM)	1
18	D10542330.9	SHIM 61.8X51 (0.5335 MM)	1
19	D10542340.9	SHIM 61.8X51 (0.7875 MM)	1
20	D10542350.9	SHIM 61.8X51 (1 MM)	1
21	D10542360.9	SHIM 61.8X51 (1.2 MM)	1
22	D10542370.9	SHIM 61.8X51 (1.5 MM)	1
23	D10170200.9	BEARING BALL 6206	1
24	D10528150.9	GEAR DRIVER BEVEL KNUCKLE Z-10	1
25	D10159950.9	DOWEL POSITIONING 10X25	3
26	D10528140.9	GEAR DRIVEN BEVEL KNUCKLE Z-16	1
27	D85500450.9	WASHER 36.0X20.0X3.0	1
28	D10542450.9	COVER KNUCKLE HOUSING	1
29	D10544670.9	SHIM COVER KNUCKLE (0.075 MM)	1
30	D10544680.9	SHIM COVER KNUCKLE (0.125 MM)	1
31	D10544690.9	SHIM COVER KNUCKLE (0.2285 MM)	1
32	D10544700.9	SHIM COVER KNUCKLE (0.4065 MM)	1
33	D93601100.9	SEAL O RING 2.62X62.00	1
34	D10005880.9	WASHER M18 FLAT COPPER	1
35	D10006500.9	PLUG M18X1.5X12-6.8 HEX HEAD	1
36	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	4
37	D81503330.9	BOLT M10X1.50X45-8.8 HEX HEAD WITH ROUNDED TOP	1
38	D83500090.9	NUT M10X1.50-8 HEX	1
39	D10547400.9	SEAL O RING 3.53X95.0	1
40	D95000410.9	LOCTITE 574	AR

TABLE-20
HOUSING ASSEMBLY SWIVEL FRONT AXLE RH WITH HARDWARE SUBASSEMBLY (4WD COMPACT)

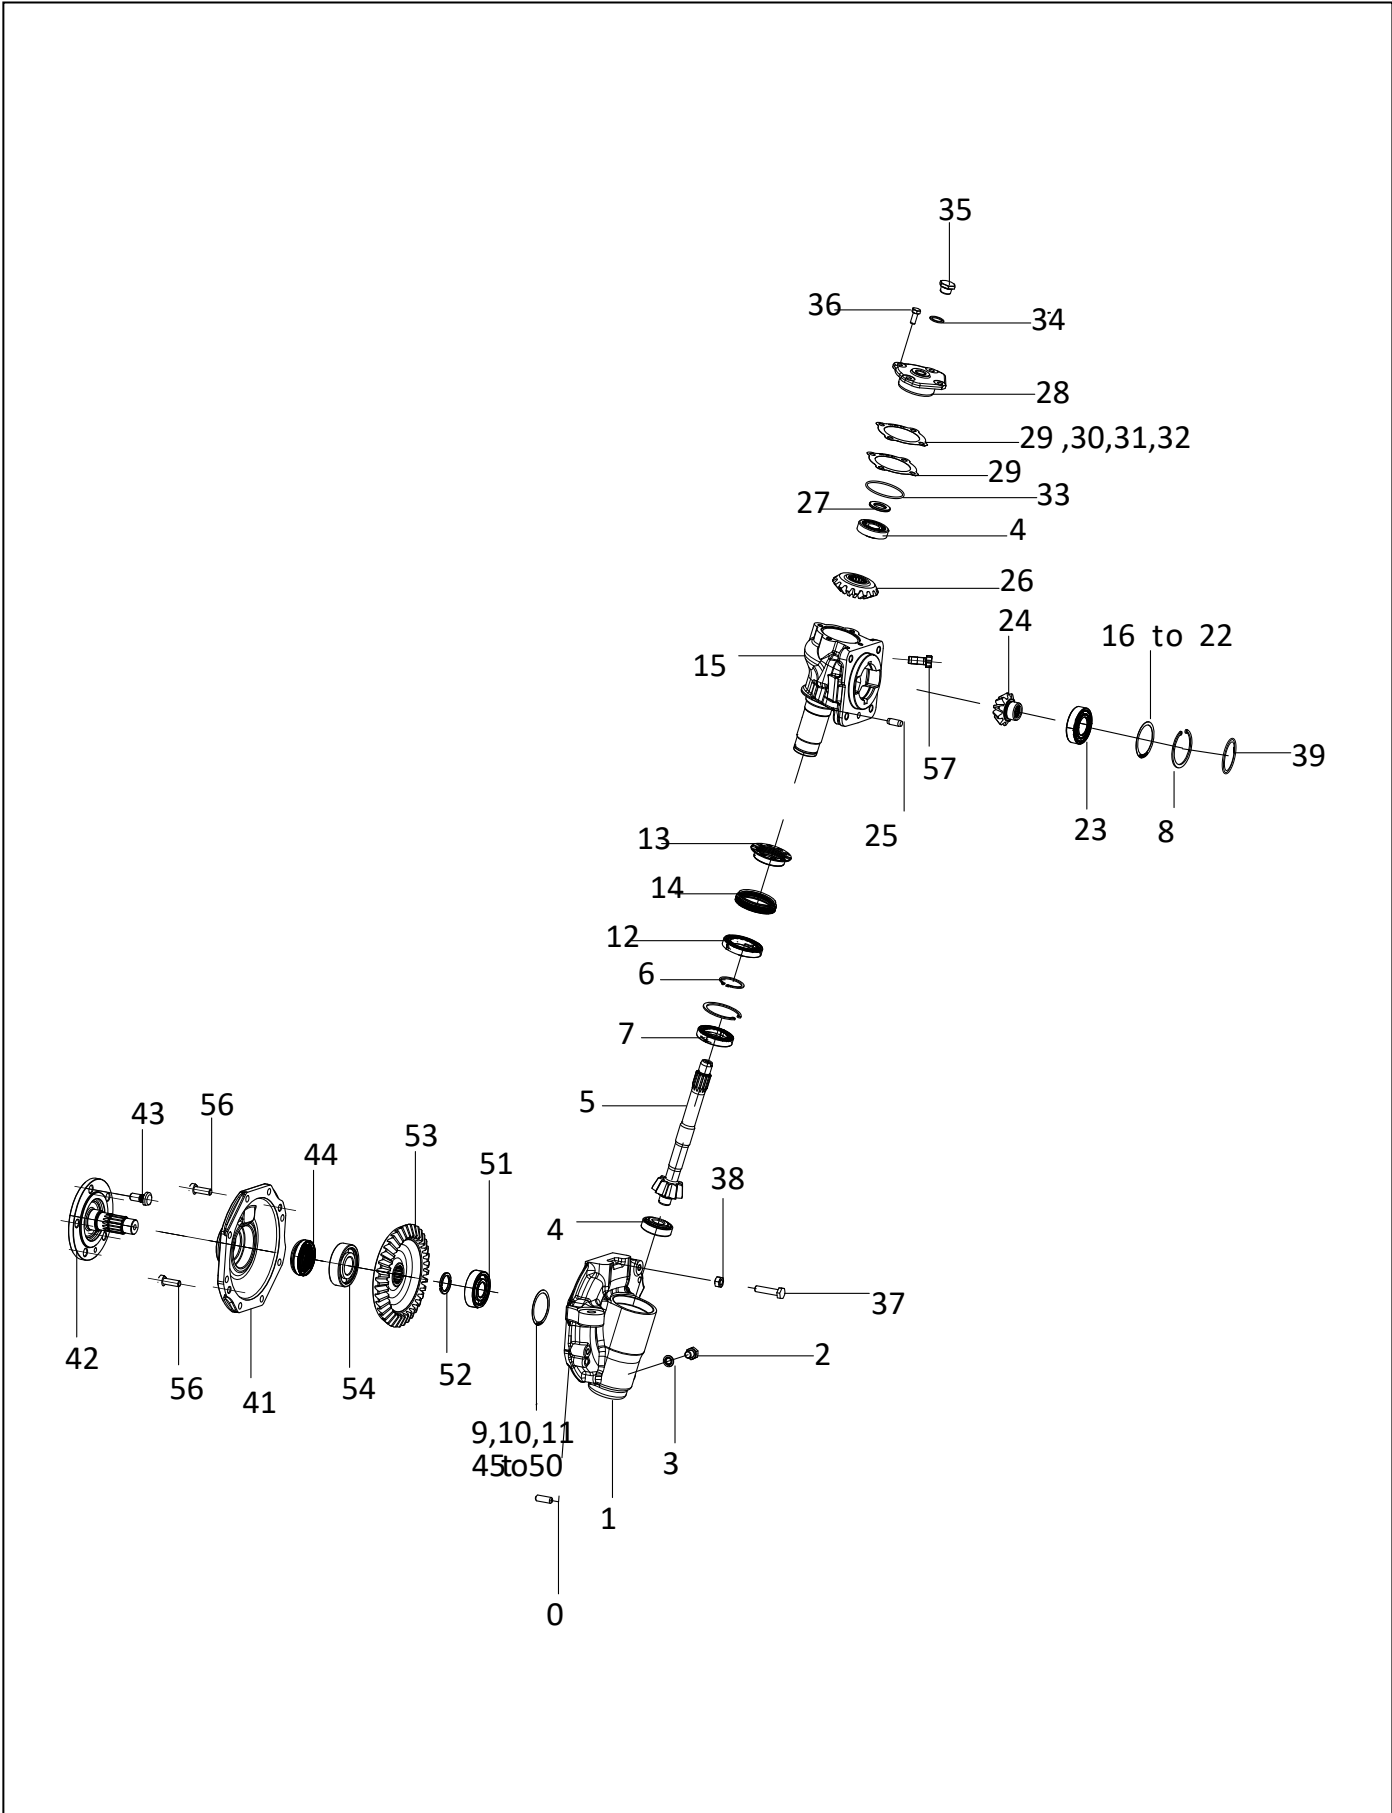


TABLE-20**HOUSING ASSEMBLY SWIVEL FRONT AXLE RH WITH HARDWARE SUBASSEMBLY (4WD COMPACT)**

Fig. No.	Part No.	Description	Qty
41	D10528080.9	HOUSING WHEEL FRONT AXLE	1
42	D10528070.9	SHAFT FRONT AXLE WHEEL	1
43	D10541620.9	BOLT M12X1.5 FRONT WHEEL HUB	5
44	D10452820.9	SEAL OIL 35X60X14.5 PTO OUTPUT SHAFT	1
45	D10537800.9	SHIM REAR AXLE SHAFT (0.075 MM)	1
46	D10537810.9	SHIM REAR AXLE SHAFT (0.125 MM)	1
47	D10537820.9	SHIM REAR AXLE SHAFT (0.2285 MM)	1
48	D10537830.9	SHIM REAR AXLE SHAFT (0.4065 MM)	1
49	D10537840.9	SHIM REAR AXLE SHAFT (0.5335 MM)	1
50	D10537850.9	SHIM REAR AXLE SHAFT (0.7875 MM)	1
51	D10533260.9	BEARING BALL 6306	1
52	D10542420.9	WASHER SPLIT WHEEL END	2
53	D10528090.9	GEAR DRIVEN BEVEL WHEEL Z-37	1
54	D10170170.9	BEARING BALL 6305	1
55	D95000410.9	LOCTITE 574	2
56	D81502320.9	BOLT M10X1.50X30-10.9 HEX HEAD	8
57	D82500610.9	SCREW M12X1.75X30-10.9	4

TABLE-21
HOUSING ASSEMBLY SWIVEL FRONT AXLE LH WITH HARDWARE SUBASSEMBLY (4WD COMPACT)

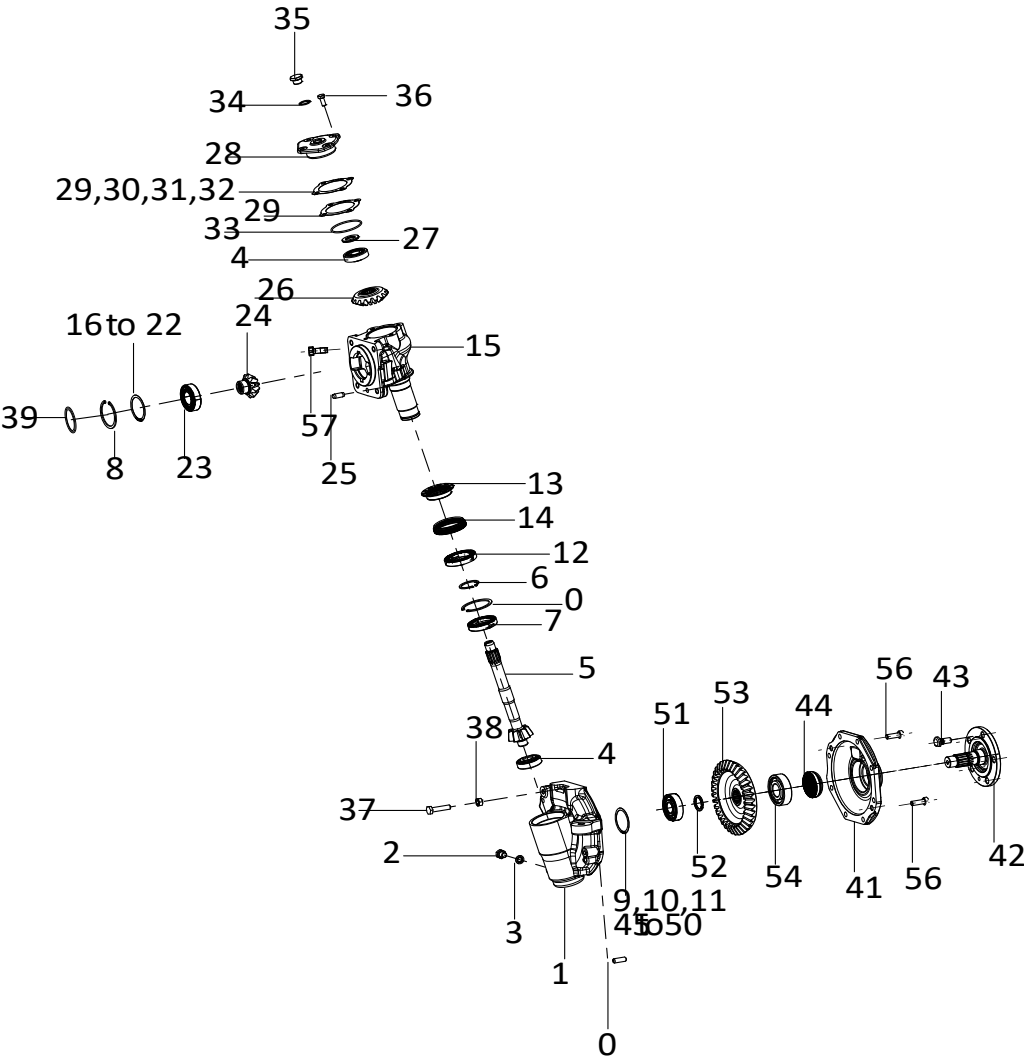


TABLE-21**HOUSING ASSEMBLY SWIVEL FRONT AXLE LH WITH HARDWARE SUBASSEMBLY (4WD COMPACT)**

Fig. No.	Part No.	Description	Qty
1	D10528110.9	HOUSING SWIVEL FRONT AXLE LH	1
2	D82501210.9	SCREW M12X1.75X12-8.8 HEX HEAD	1
3	D10161480.9	WASHER 12.0X22.0 SCREW RAIL	1
4	D10533270.9	BEARING TAPER ROLLER 30304	2
5	D10528100.9	SHAFT DRIVER BEVEL GEAR Z-9	1
6	D90000660.9	CIRCLIP A40X2.5 H	1
7	D10538670.9	BEARING BALL 6908	1
8	D90500410.9	CIRCLIP B62X2.0 N (IS 3075 PART-II)	2
9	D10542380.9	SHIM 60X50 (0.075 MM)	1
10	D10542390.9	SHIM 60X50 (0.2285 MM)	1
11	D10542400.9	SHIM 60.X50 (0.4065 MM)	1
12	D10538680.9	BEARING BALL 6909	1
13	D10550290.9	SLEEVE OIL SEAL SWIVEL HOUSING	1
14	D10550300.9	SEAL OIL SWIVEL HOUSING 52X70X10	1
15	D10528130.9	HOUSING KNUCKLE FRONT AXLE	1
16	D10542310.9	SHIM 61.8X51 (0.2285 MM)	1
17	D10542320.9	SHIM 61.8X51 (0.4065 MM)	1
18	D10542330.9	SHIM 61.8X51 (0.5335 MM)	1
19	D10542340.9	SHIM 61.8X51 (0.7875 MM)	1
20	D10542350.9	SHIM 61.8X51 (1 MM)	1
21	D10542360.9	SHIM 61.8X51 (1.2 MM)	1
22	D10542370.9	SHIM 61.8X51 (1.5 MM)	1
23	D10170200.9	BEARING BALL 6206	1
24	D10528150.9	GEAR DRIVER BEVEL KNUCKLE Z-10	1
25	D10159950.9	DOWEL POSITIONING 10X25	3
26	D10528140.9	GEAR DRIVEN BEVEL KNUCKLE Z-16	1
27	D85500450.9	WASHER 36.0X20.0X3.0	1
28	D10542450.9	COVER KNUCKLE HOUSING	1
29	D10544670.9	SHIM COVER KNUCKLE (0.075 MM)	1
30	D10544680.9	SHIM COVER KNUCKLE (0.125 MM)	1
31	D10544690.9	SHIM COVER KNUCKLE (0.2285 MM)	1
32	D10544700.9	SHIM COVER KNUCKLE (0.4065 MM)	1
33	D93601100.9	SEAL O RING 2.62X62.00	1
34	D10005880.9	WASHER M18 FLAT COPPER	1
35	D10006500.9	PLUG M18X1.5X12-6.8 HEX HEAD	1
36	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	4
37	D81503330.9	BOLT M10X1.50X45-8.8 HEX HEAD WITH ROUNDED TOP	1
38	D83500090.9	NUT M10X1.50-8 HEX	1
39	D10547400.9	SEAL O RING 3.53X95.0	1
40	D95000410.9	LOCTITE 574	AR

TABLE-21
HOUSING ASSEMBLY SWIVEL FRONT AXLE LH WITH HARDWARE SUBASSEMBLY (4WD COMPACT)

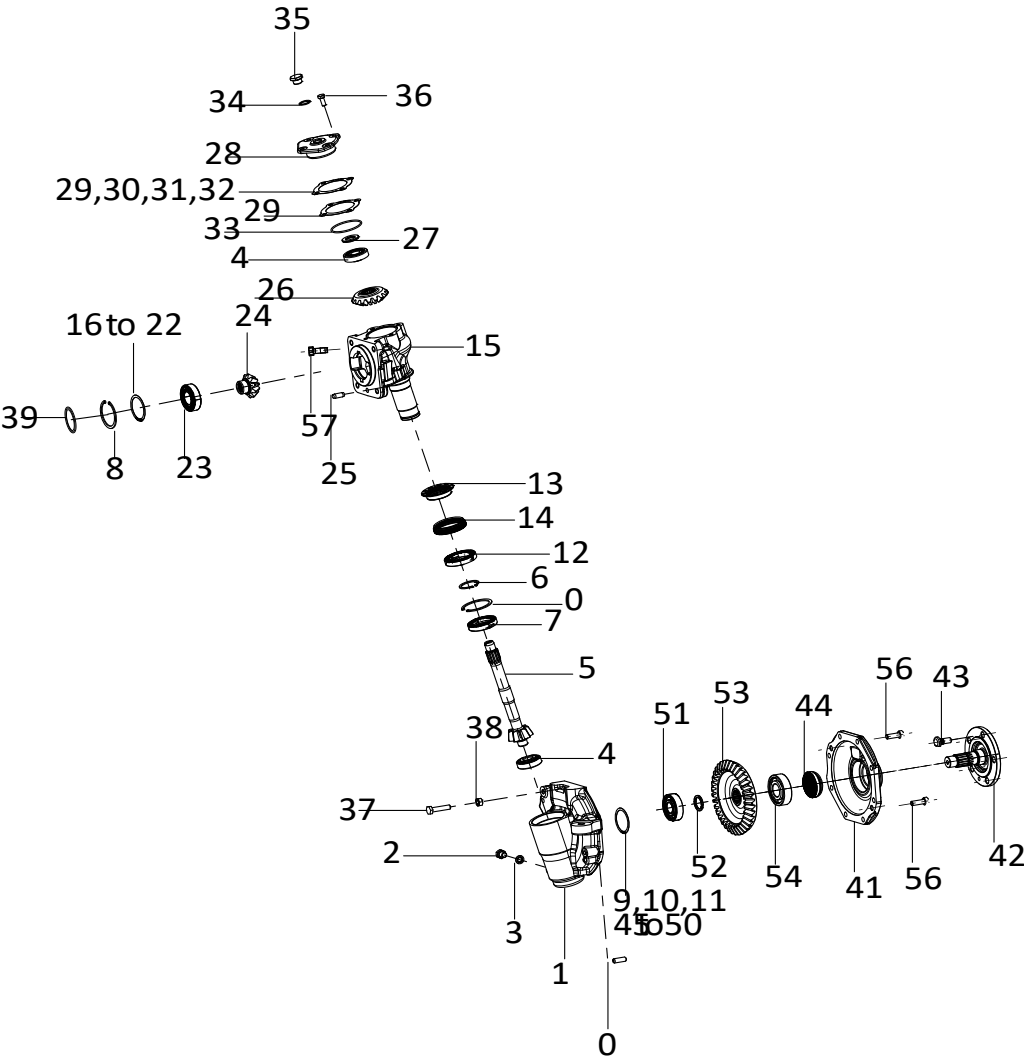


TABLE-21**HOUSING ASSEMBLY SWIVEL FRONT AXLE LH WITH HARDWARE SUBASSEMBLY (4WD COMPACT)**

Fig. No.	Part No.	Description	Qty
41	D10528080.9	HOUSING WHEEL FRONT AXLE	1
42	D10528070.9	SHAFT FRONT AXLE WHEEL	1
43	D10541620.9	BOLT M12X1.5 FRONT WHEEL HUB	5
44	D10452820.9	SEAL OIL 35X60X14.5 PTO OUTPUT SHAFT	1
45	D10537800.9	SHIM REAR AXLE SHAFT (0.075 MM)	1
46	D10537810.9	SHIM REAR AXLE SHAFT (0.125 MM)	1
47	D10537820.9	SHIM REAR AXLE SHAFT (0.2285 MM)	1
48	D10537830.9	SHIM REAR AXLE SHAFT (0.4065 MM)	1
49	D10537840.9	SHIM REAR AXLE SHAFT (0.5335 MM)	1
50	D10537850.9	SHIM REAR AXLE SHAFT (0.7875 MM)	1
51	D10533260.9	BEARING BALL 6306	1
52	D10542420.9	WASHER SPLIT WHEEL END	2
53	D10528090.9	GEAR DRIVEN BEVEL WHEEL Z-37	1
54	D10170170.9	BEARING BALL 6305	1
55	D95000410.9	LOCTITE 574	2
56	D81502320.9	BOLT M10X1.50X30-10.9 HEX HEAD	8
57	D82500610.9	SCREW M12X1.75X30-10.9	4

TABLE-22
PILLOW BLOCK SUBASSEMBLY FRONT

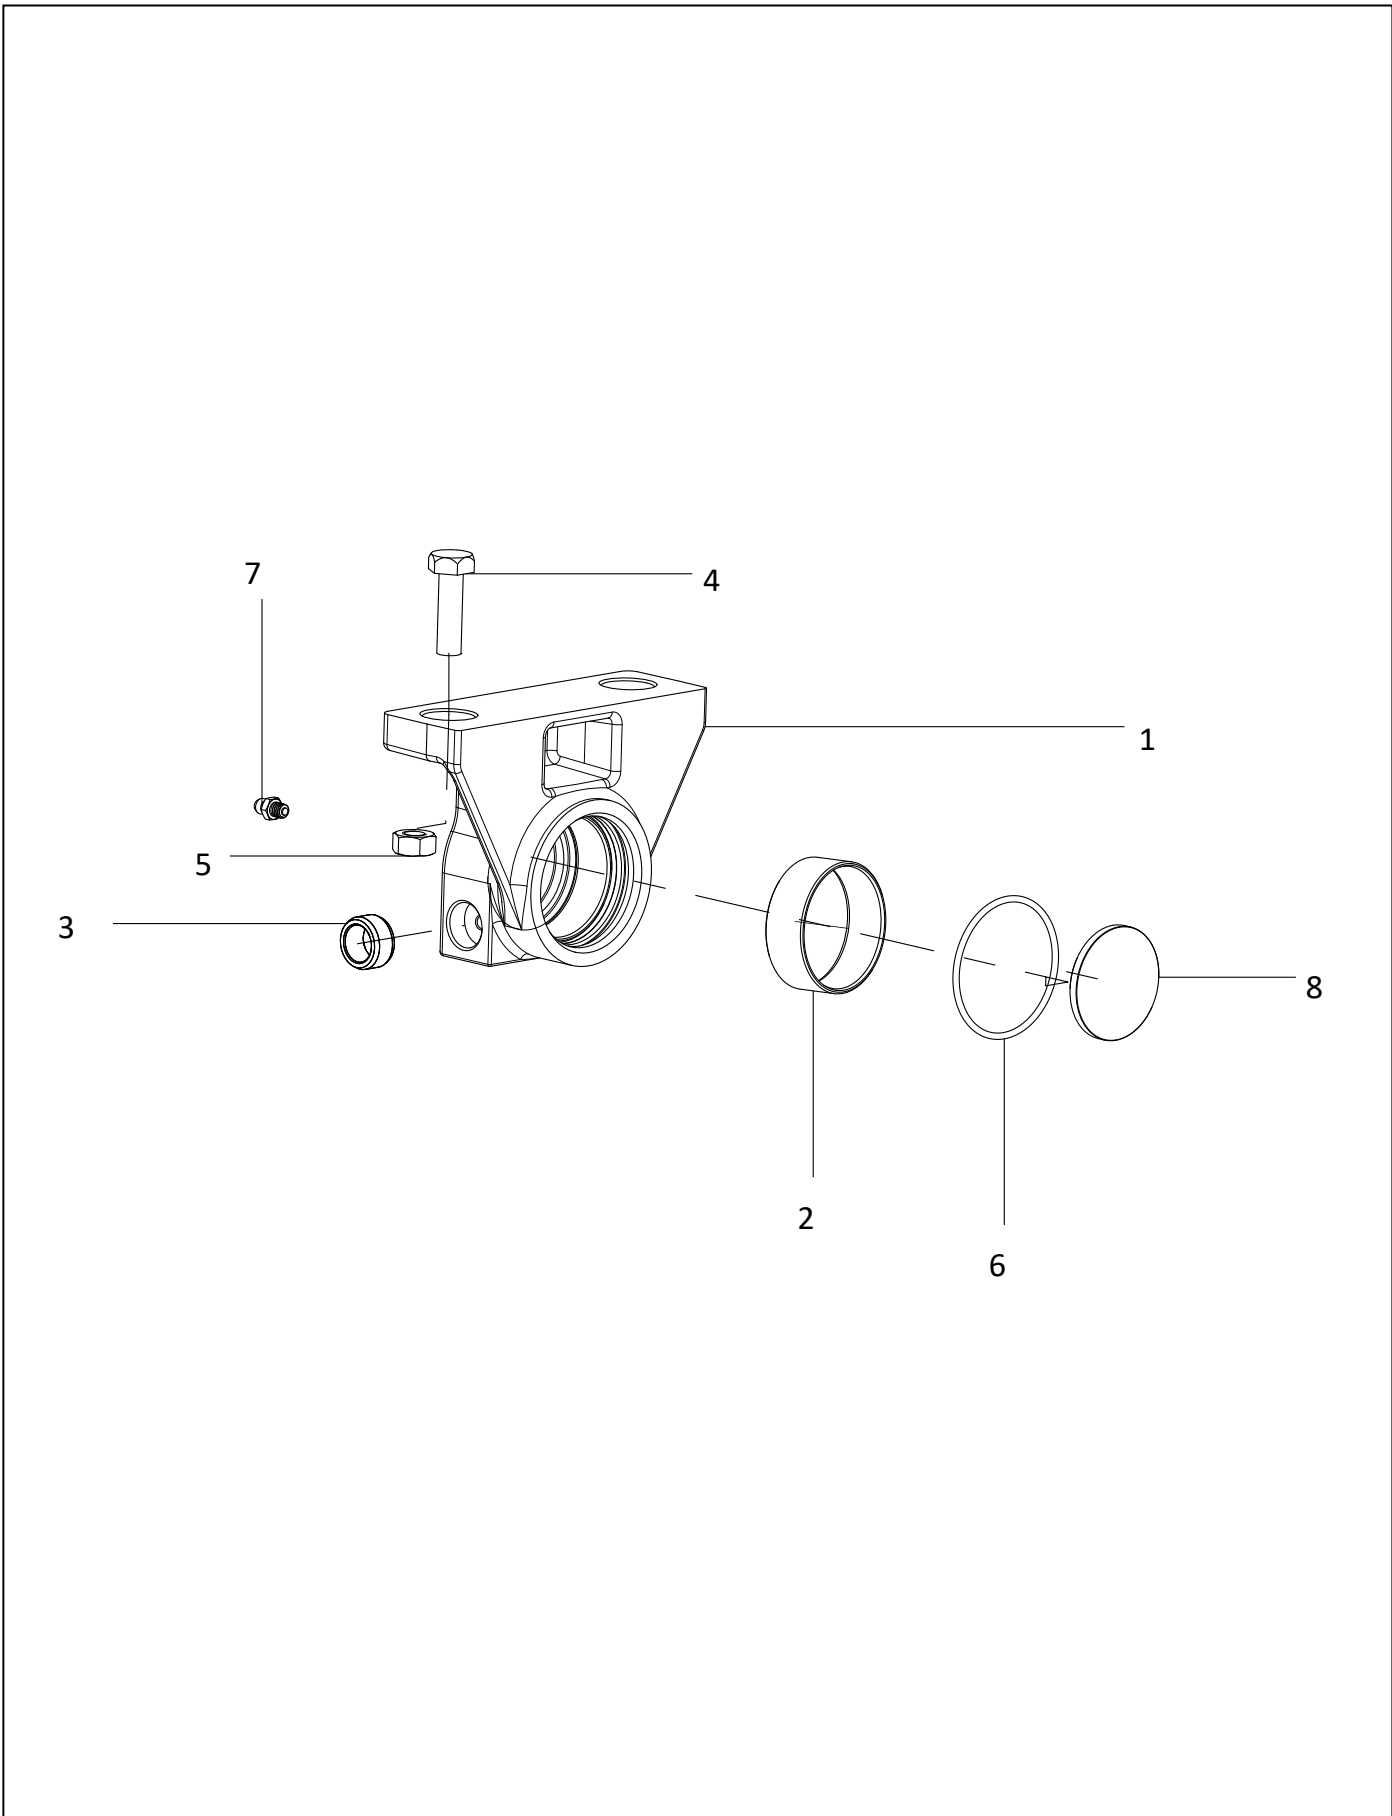


TABLE-22**PILLOW BLOCK SUBASSEMBLY FRONT**

Fig. No.	Part No.	Description	Qty
1	D10543050.9	PILLOW BLOCK ASSEMBLY FRONT	1
2	D10542430.9	BUSH PILLOW BLOCK FRONT	1
3	D10548830.9	DOWEL BUSH PILLOW BLOCK	2
4	D83500090.9	NUT M10X1.50-8 HEX	1
5	D81500210.9	BOLT M10X1.50X35-6.6P HEX HEAD	1
6	D10547380.9	SEAL O RING 2.62X55.0	1
7	D92500010.9	GREASE NIPPLE B M6	1
8	D10542460.9	WASHER 48.0X4.0 THRUST	1

TABLE-23
PILLOW BLOCK SUBASSEMBLY REAR

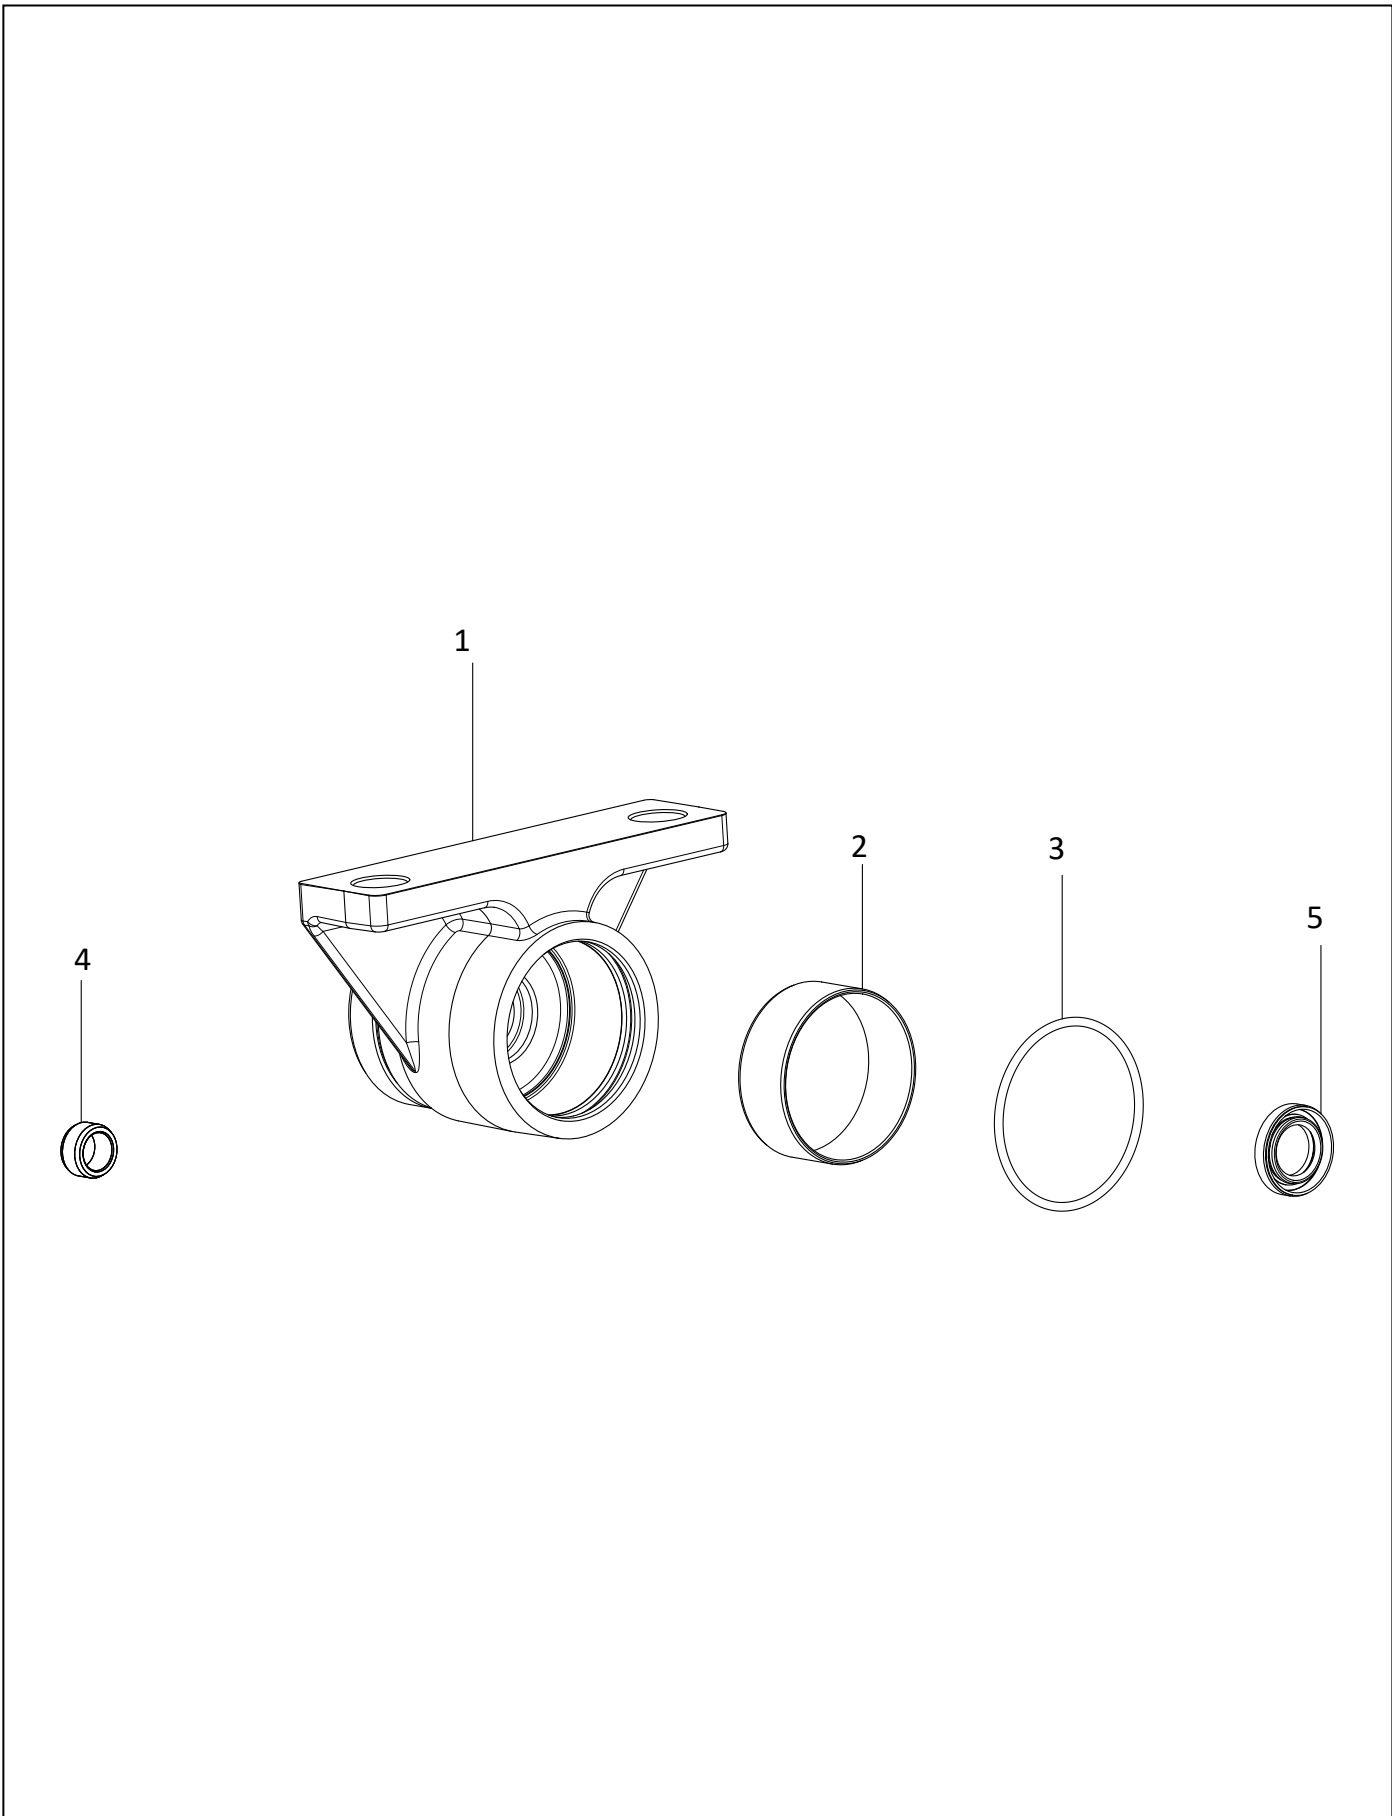


TABLE-23**PILLOW BLOCK SUBASSEMBLY REAR**

Fig. No.	Part No.	Description	Qty
1	D10543060.9	PILLOW BLOCK ASSEMBLY REAR	1
2	D10542440.9	BUSH PILLOW BLOCK REAR	1
3	D10547390.9	SEAL O RING 3.53X72.0	1
4	D10548830.9	DOWEL BUSH PILLOW BLOCK	2
5	D93601110.9	SEAL OIL 22X37X7.0	1

TABLE-24
HOUSING ASSEMBLY FRONT AXLE CENTER BEAM SUBASSEMBLY

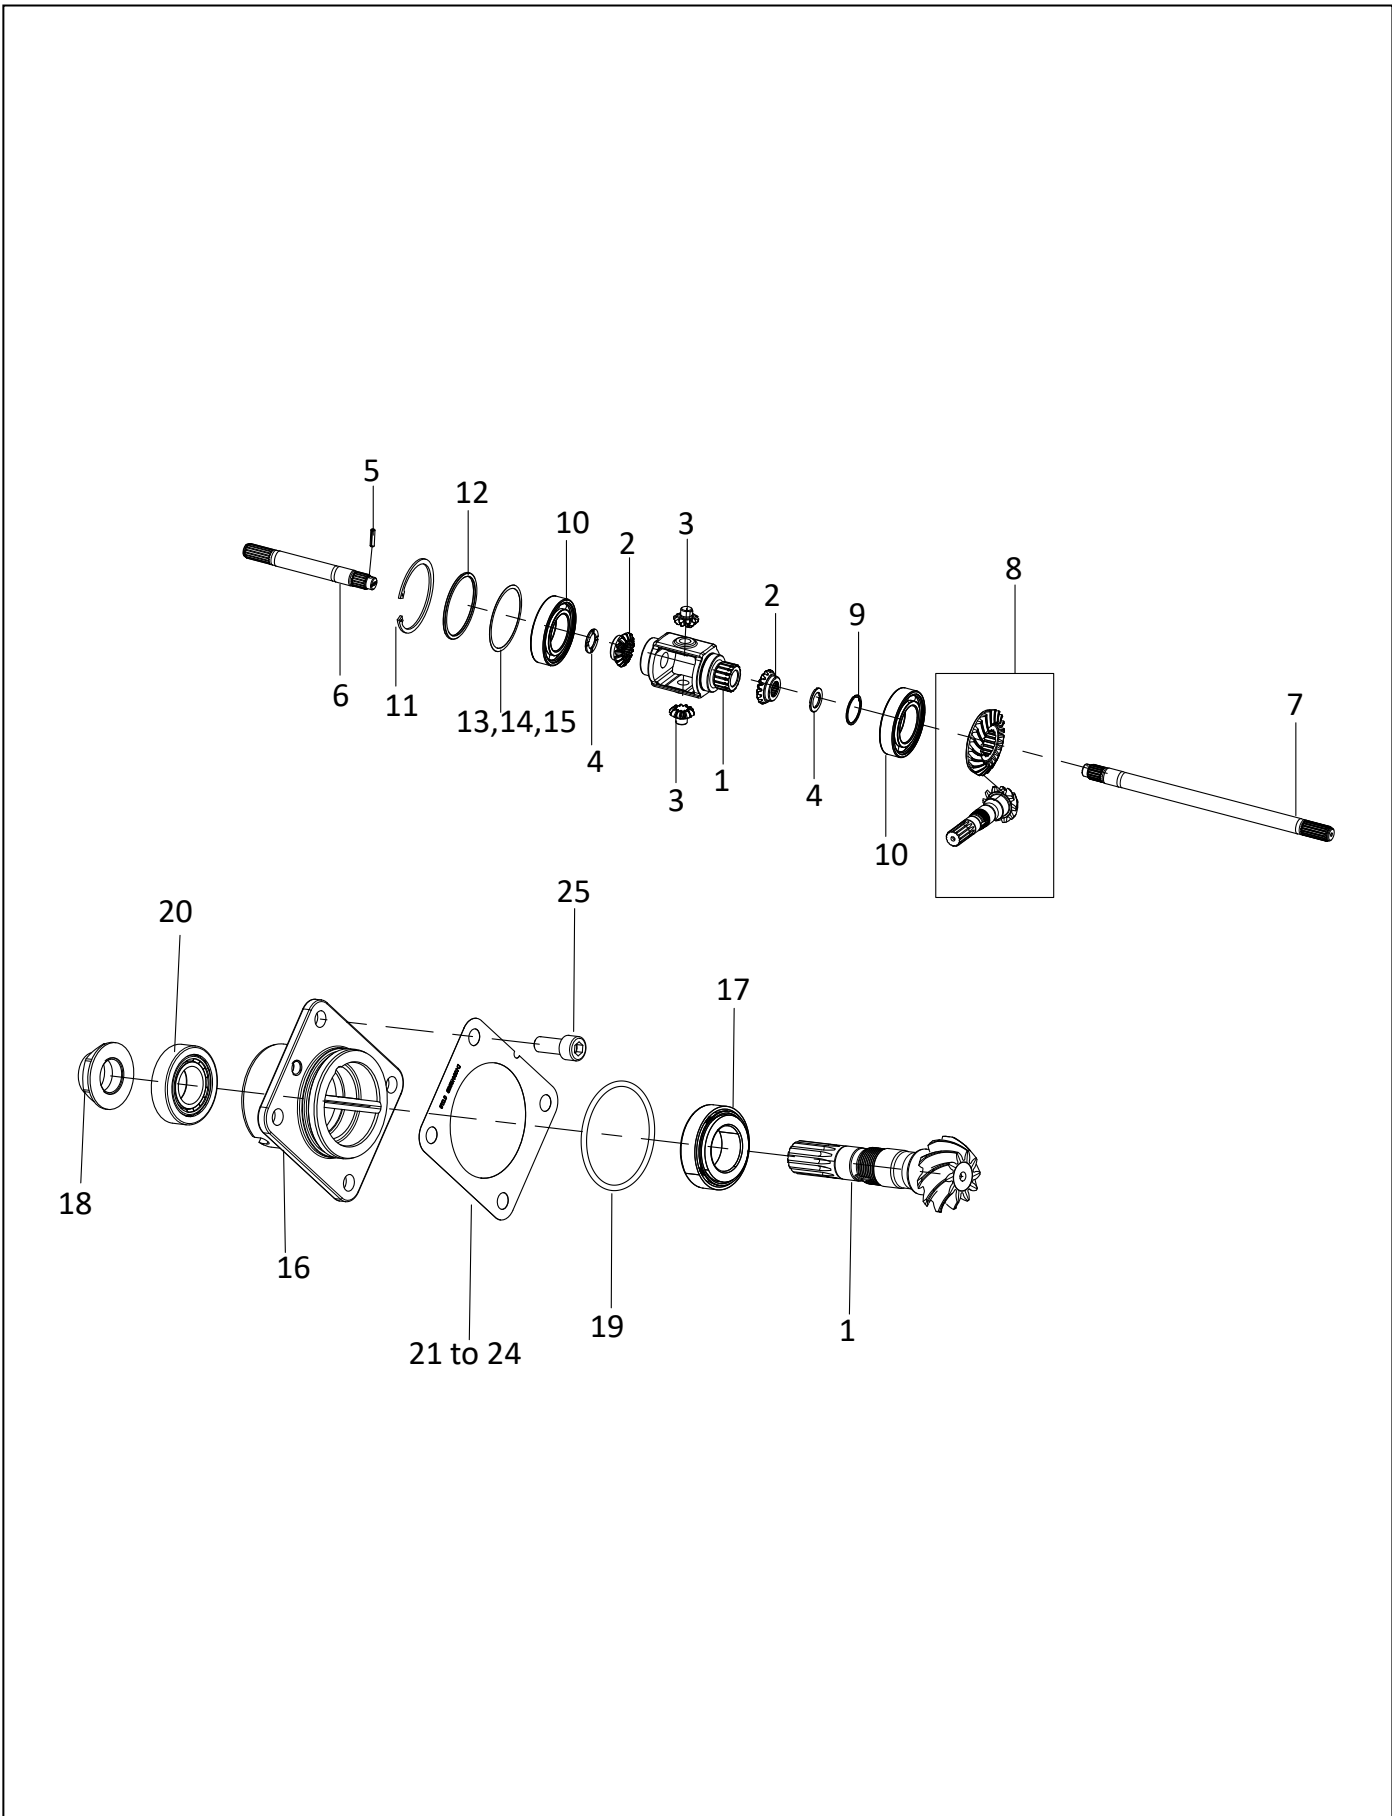


TABLE-24
HOUSING ASSEMBLY FRONT AXLE CENTER BEAM SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10528170.9	CASE DIFFERENTIAL FRONT AXLE	1
2	D10520860.9	BEVEL SIDE GEAR DIFFERENTIAL Z-16	2
3	D10520870.9	PINION GEAR DIFFERENTIAL Z-10	2
4	D10541560.9	WASHER THRUST 32X20.5X2 DIFFERENTIAL	2
5	D87500480.9	PIN 5.0X24.0 SPRING DOWEL	2
6	D10528220.9	SHAFT HALF AXLE LH	1
7	D10528230.9	SHAFT HALF AXLE RH	1
8	D10528180.9	GEAR SET BEVEL PINION AND CROWN WHEEL FRONT AXLE (10/21)	1
9	D10541630.9	RING SNAP DIFFERENTIAL FRONT AXLE	1
10	D10602220.9	BEARING BALL 6210 CN	2
11	D10106690.9	CIRCLIP B90X2.80 HB	1
12	D10546960.9	WASHER 89.90X80.0X3.0	1
13	D10546970.9	SHIM 89.90X81.0 (0.125 MM)	1
14	D10546980.9	SHIM 89.90X81.0 (0.2285 MM)	1
15	D10546990.9	SHIM 89.90X81.0 (0.4065 MM)	1
16	D10528210.9	RETAINER PINION FRONT AXLE	1
17	D10533280.9	BEARING TAPER ROLLER 32006X	1
18	D10541570.9	NUT CRIMP M24X1.5 HEX HEAD	1
19	D10154560.9	SEAL O RING 2.65X65.0	1
20	D10014260.9	BEARING TAPER ROLLER 30205	1
21	D10541580.9	SHIM RETAINER PINION (0.075 MM)	1
22	D10541590.9	SHIM RETAINER PINION (0.125 MM)	1
23	D10541600.9	SHIM RETAINER PINION (0.2285 MM)	1
24	D10541610.9	SHIM RETAINER PINION (0.4065 MM)	1
25	D81503270.9	BOLT M10X25X1.5-10.9 ALLEN	4
26	D10528160.9	HOUSING FRONT AXLE CENTER BEAM	1
27	D10673030.9	INDICATOR FRONT AXLE OIL LEVEL	1
28	D10617830.9	WASHER BONDED SEAL M20	1

TABLE-25
AXLE FRONT WITH CYLINDER AND LINK ASSEMBLY

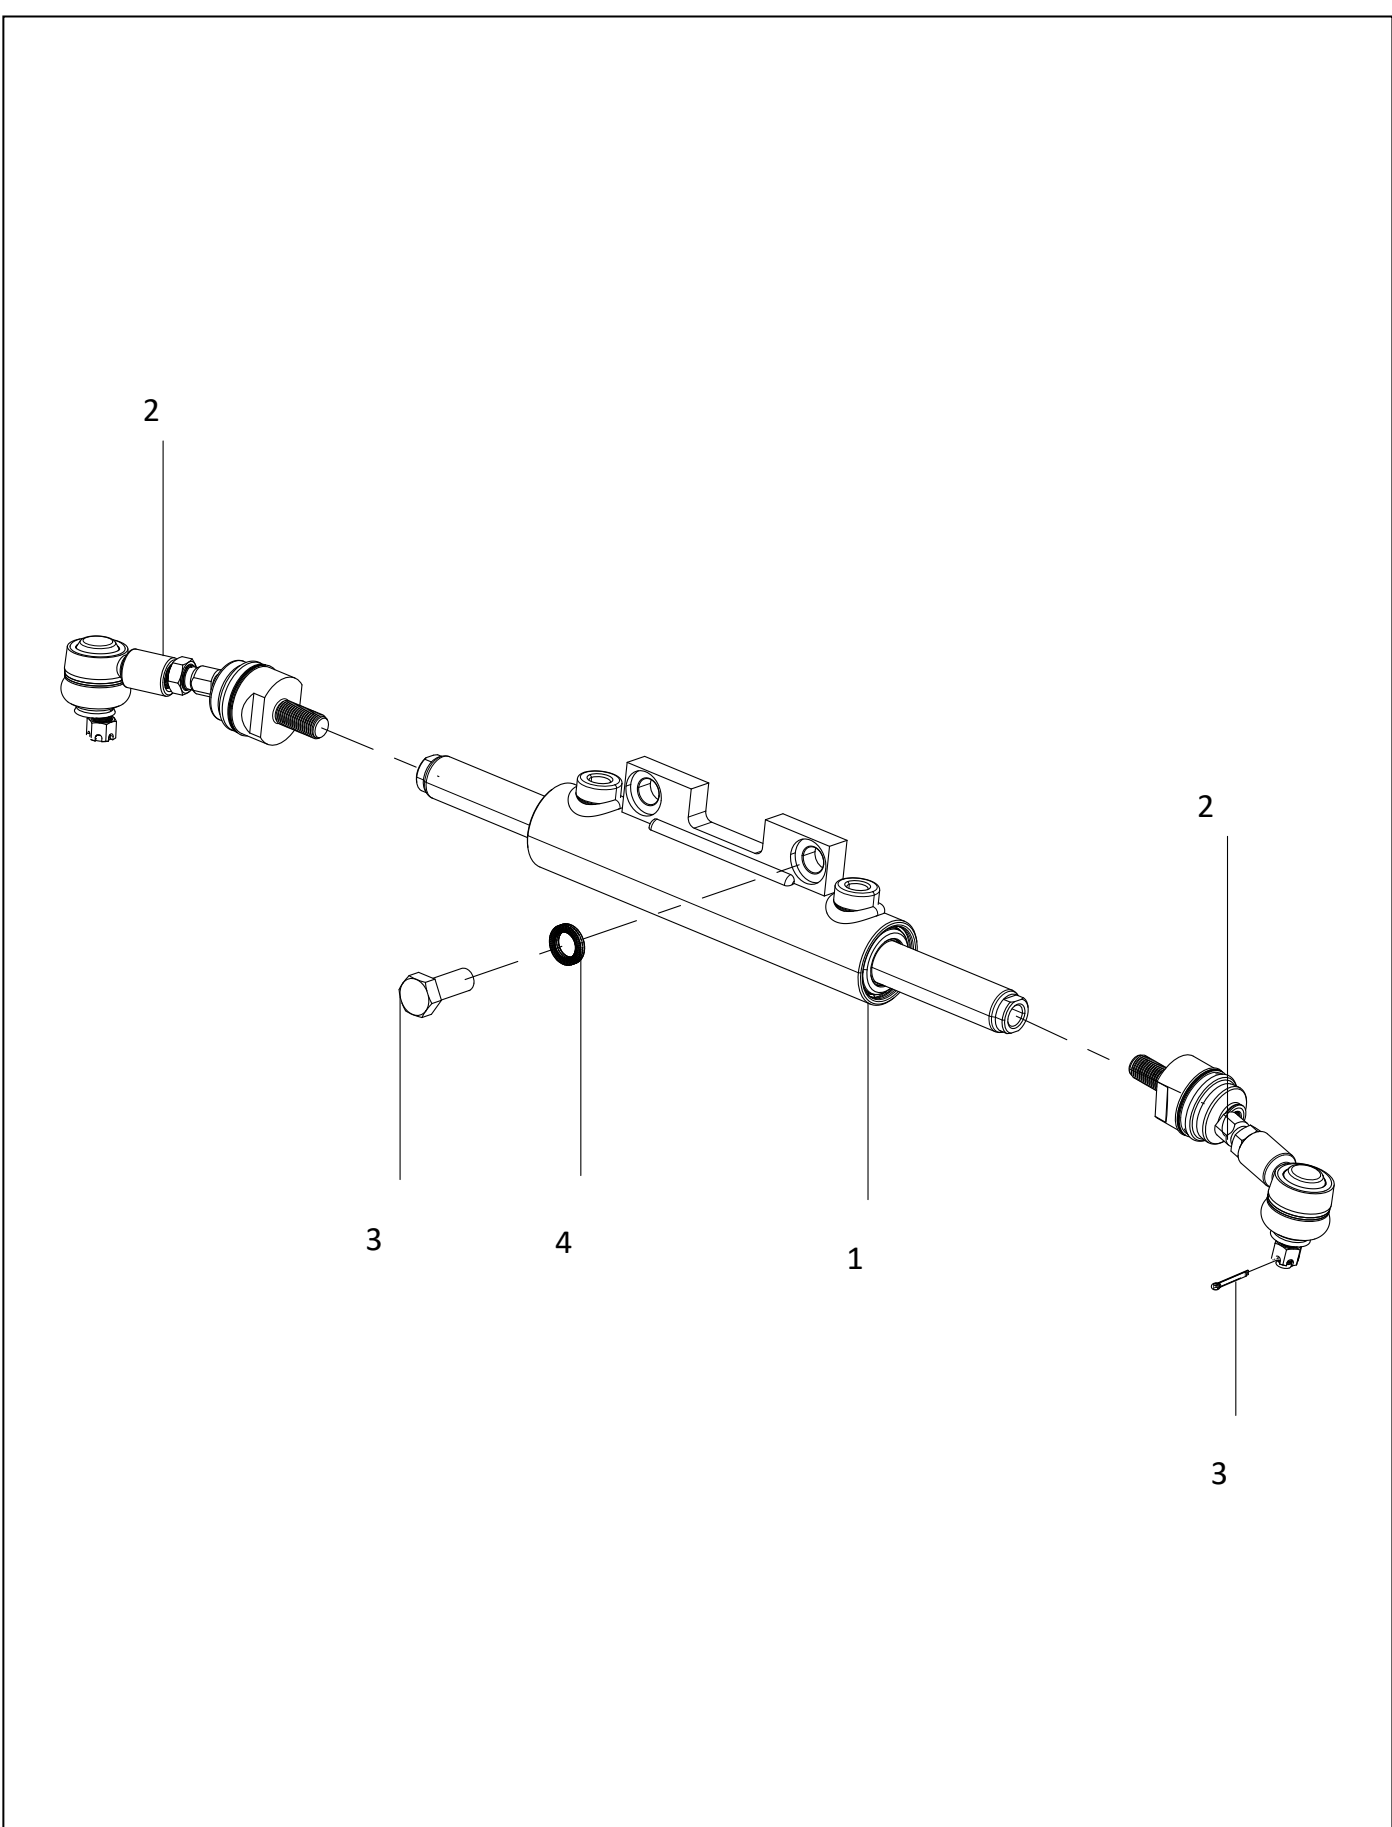


TABLE-25
AXLE FRONT WITH CYLINDER AND LINK ASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10537740.9	CYLINDER ASSEMBLY POWER STEERING	1
1A	D10615010.9	KIT SEAL STEERING CYLINDER (M/S OGNIBENE POWER PART NO 800230090)	1
2	D10537730.9	LINK ASSEMBLY POWER STEERING	2
3	D88400040.9	PIN 3.2X25.0 COTTER	2
4	D81500740.9	BOLT M14X2.00X35-10.9 HEX HEAD LOCK	2
5	D85500520.9	WASHER M14 LOCK (NORD TYPE)	2

TABLE-26
AXLE FRONT SUBASSEMBLY

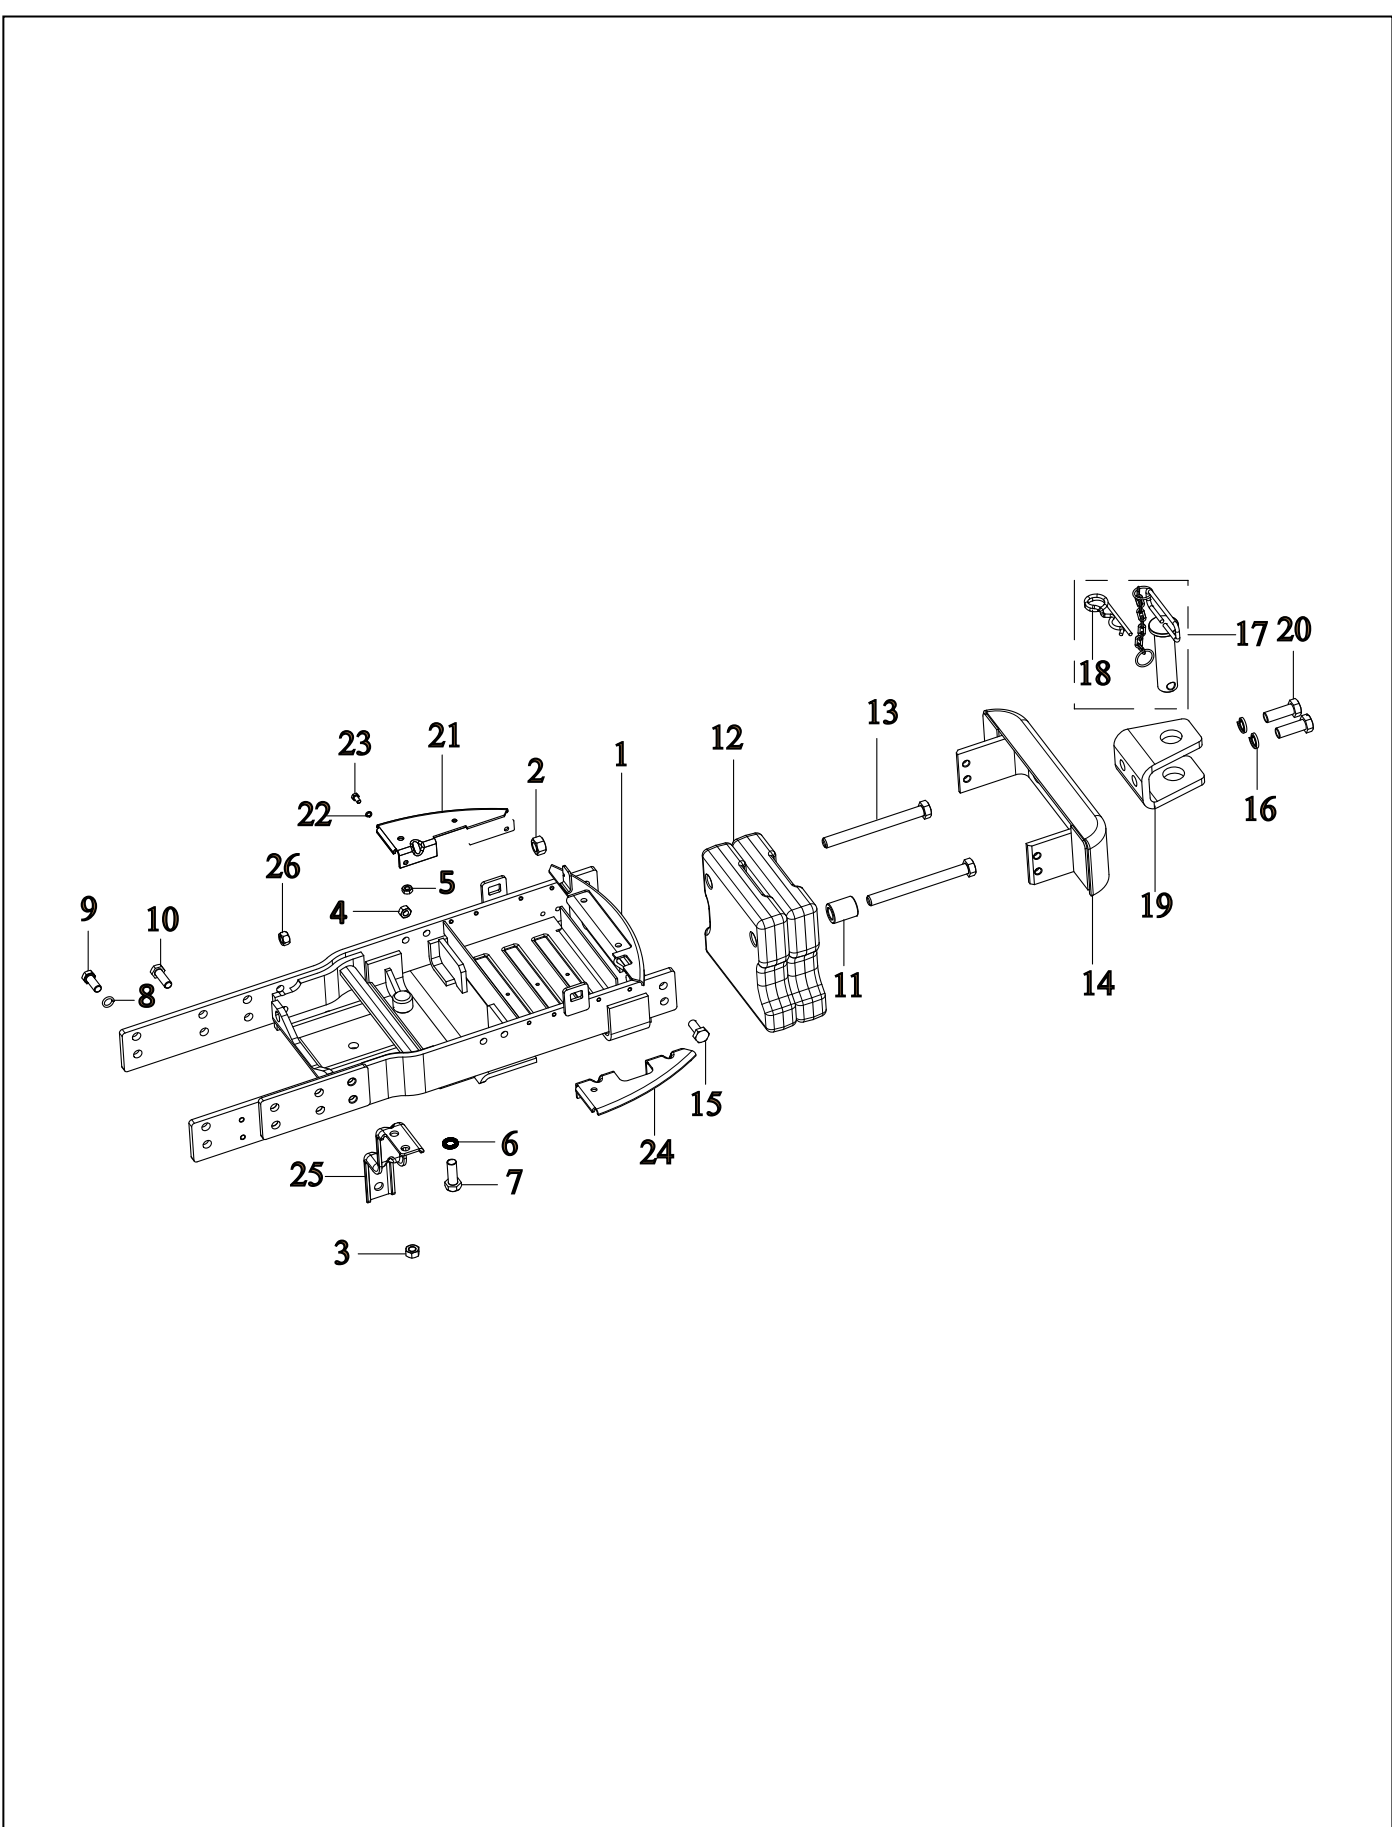


TABLE-26
AXLE FRONT SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10537650.9	SUPPORT ASSEMBLY FRONT AXLE	1
2	D83500030.9	NUT M16X2.00-8 HEX	6
3	D83500250.9	NUT M12X1.75-10 HEX	6
4	D83500090.9	NUT M10X1.50-8 HEX	1
5	D83500060.9	NUT M8X1.25-6 HEX	2
6	D85500520.9	WASHER M14 LOCK (NORD TYPE)	4
7	D81501630.9	BOLT M14X2.00X40-10.9 HEX HEAD	4
8	D86500020.9	WASHER M12 SPRING LOCK	18
9	D81503200.9	BOLT M12X1.25X30-10.9 HEX HEAD	4
10	D10009920.9	BOLT M12X1.25X36-10.9P HEX HEAD	8
11	D10546540.9	BUSH FRONT BUMPER C TYPE	2
12	D10546520.9	WEIGHT FRONT END	2
13	D10047810.9	BOLT M16X2.0X165-8.8 HEX HEAD	2
14	D10546490.9	BUMPER C TYPE AND PLATE ASSEMBLY FRONT	1
15	D81501910.9	BOLT M12X1.75X30-10.9 HEX HEAD	4
16	D86500060.9	WASHER M16 SPRING LOCK	2
17	D10546550.9	PIN ASSEMBLY TOW HOOK FRONT	1
18	D87500470.9	PIN 5X105 SPRING R TYPE (IS:6483)	1
19	D10546530.9	TOW HOOK FRONT	1
20	D81502100.9	BOLT M16X2.00X45-12.9 HEX HEAD	2
21	D10557740AD.9	PLATE BONNET MOUNTING LH SUPPORT FRONT AXLE	1
22	D86500040.9	WASHER M6 SPRING LOCK	4
23	D82500050.9	SCREW M6X1.00X12-6.8 HEX HEAD	4
24	D10610780AC.9	PLATE BONNET MOUNTING RH SUPPORT FRONT AXLE	1
25	D10565990.9	BRACKET ASSEMBLY FUEL FILTER MOUNTING	1
26	D83501120.9	NUT M12X1.25-10.9 HEX HEAD	2

TABLE-27
COVER ASSEMBLY GUARD STEERING CYLINDER

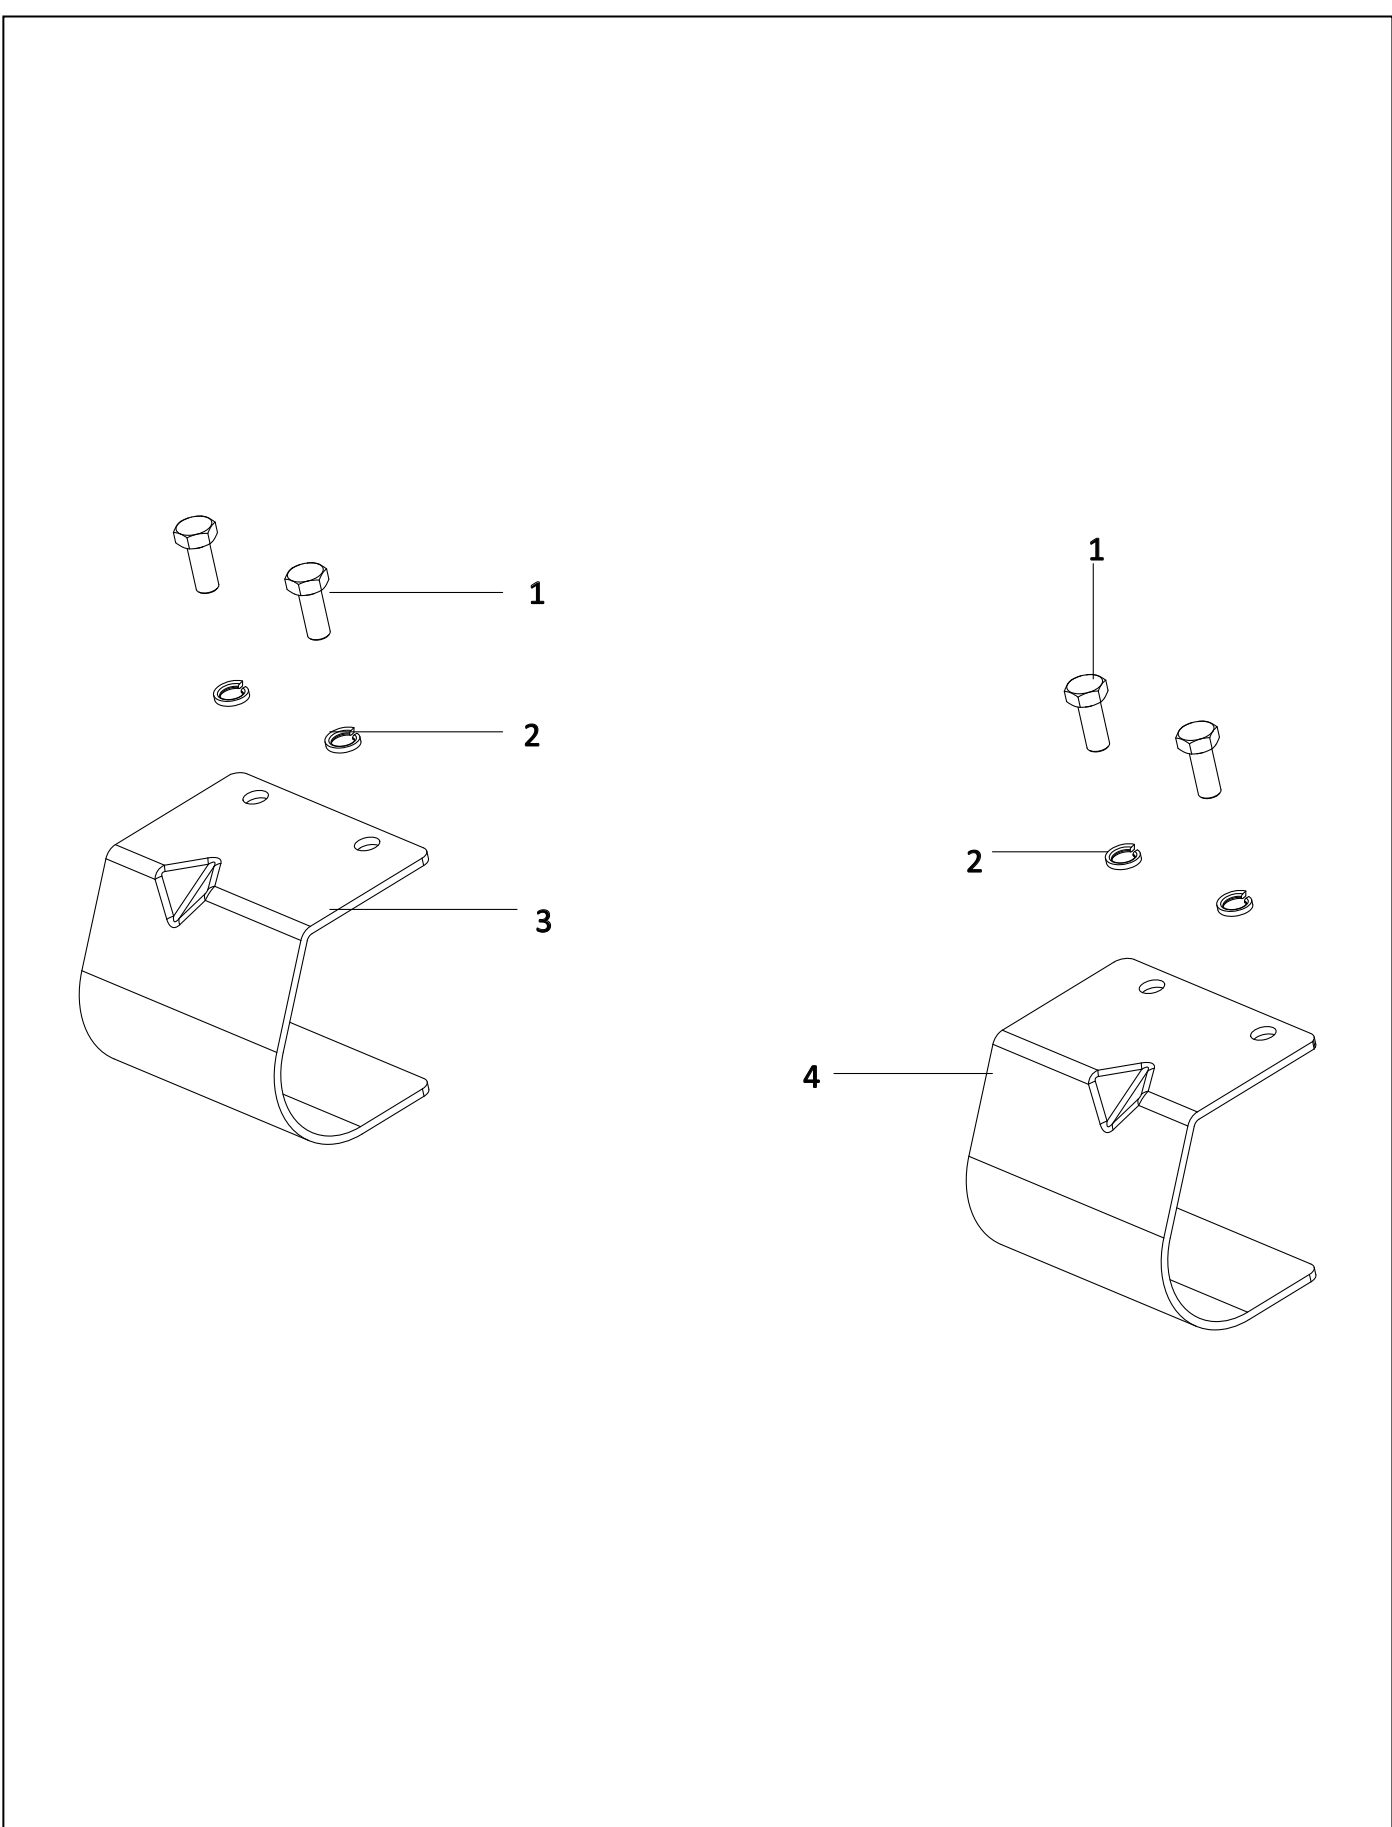


TABLE-27
COVER ASSEMBLY GUARD STEERING CYLINDER

Fig. No.	Part No.	Description	Qty
1	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	4
2	D86500030.9	WASHER M8 SPRING LOCK	4
3	D10537750.9	GUARD STEERING CYLINDER RH	1
4	D10537760.9	GUARD STEERING CYLINDER LH	1

TABLE-28
WHEEL STEERING AND UNIT STEERING SUBASSEMBLY

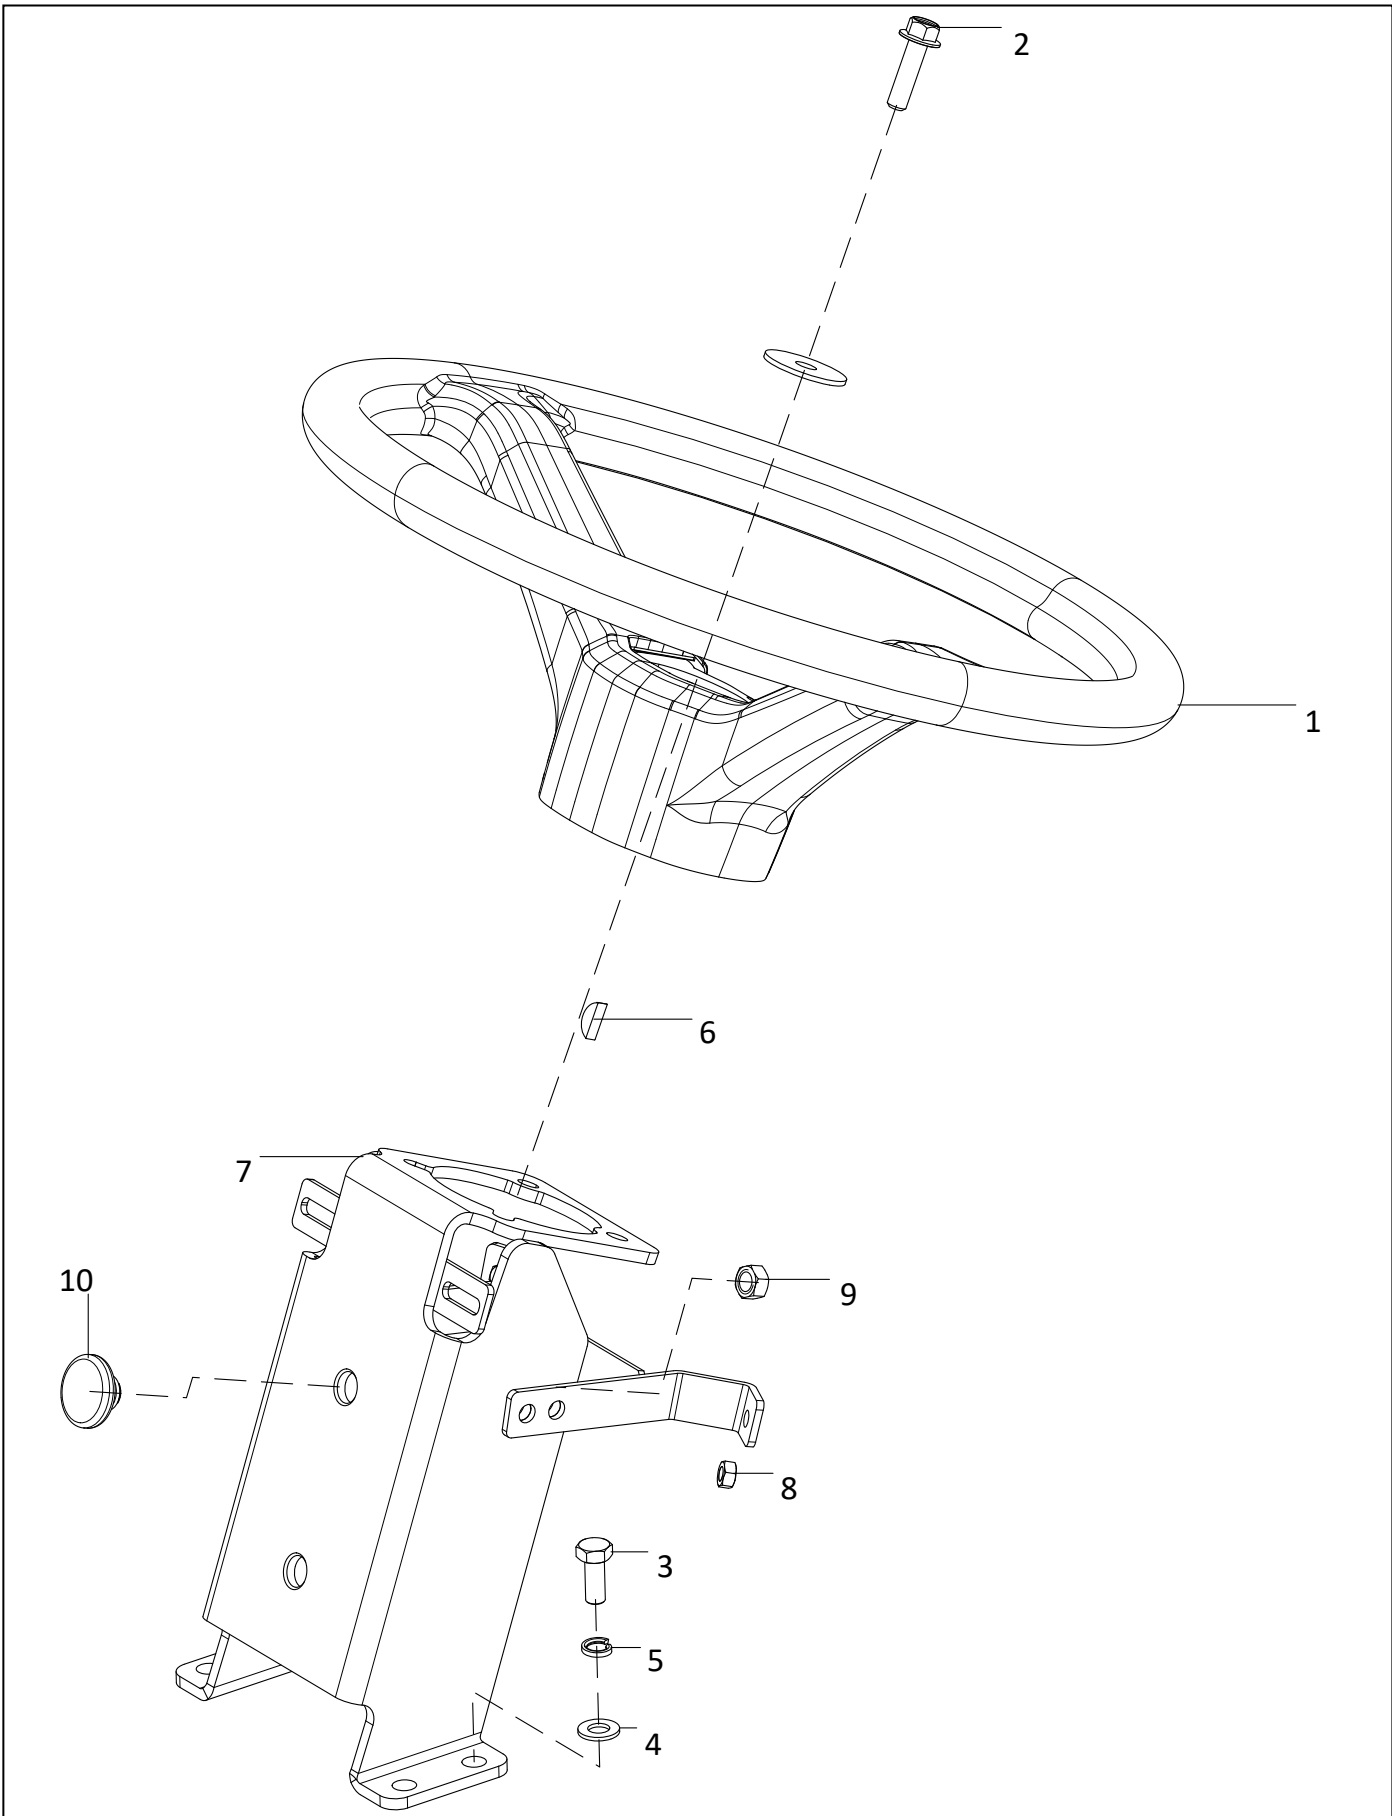


TABLE-28
WHEEL STEERING AND UNIT STEERING SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10569180.9	WHEEL ASSEMBLY STEERING	1
2	D81502240.9	BOLT M8X1.25X30-10.9 HEX HEAD FLANGED	1
3	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	4
4	D85500050.9	WASHER M8 FLAT	5
5	D86500030.9	WASHER M8 SPRING LOCK	4
6	D91000280.9	KEY 5.0X6.5 WOODRUFF	1
7	D10564510.9	BRACKET ASSEMBLY STEERING COLUMN MOUNTING	1
8	D83500220.9	NUT M6X1.00-5 HEX	2
9	D10053080.9	NUT M8X1.25-6 HEX	1
10	D10562340.9	GROMMET FUEL TANK	2

TABLE-29
WHEEL AND TYRE ASSEMBLY FRONT 23x8.50-12 (M/s BKT -TURF)

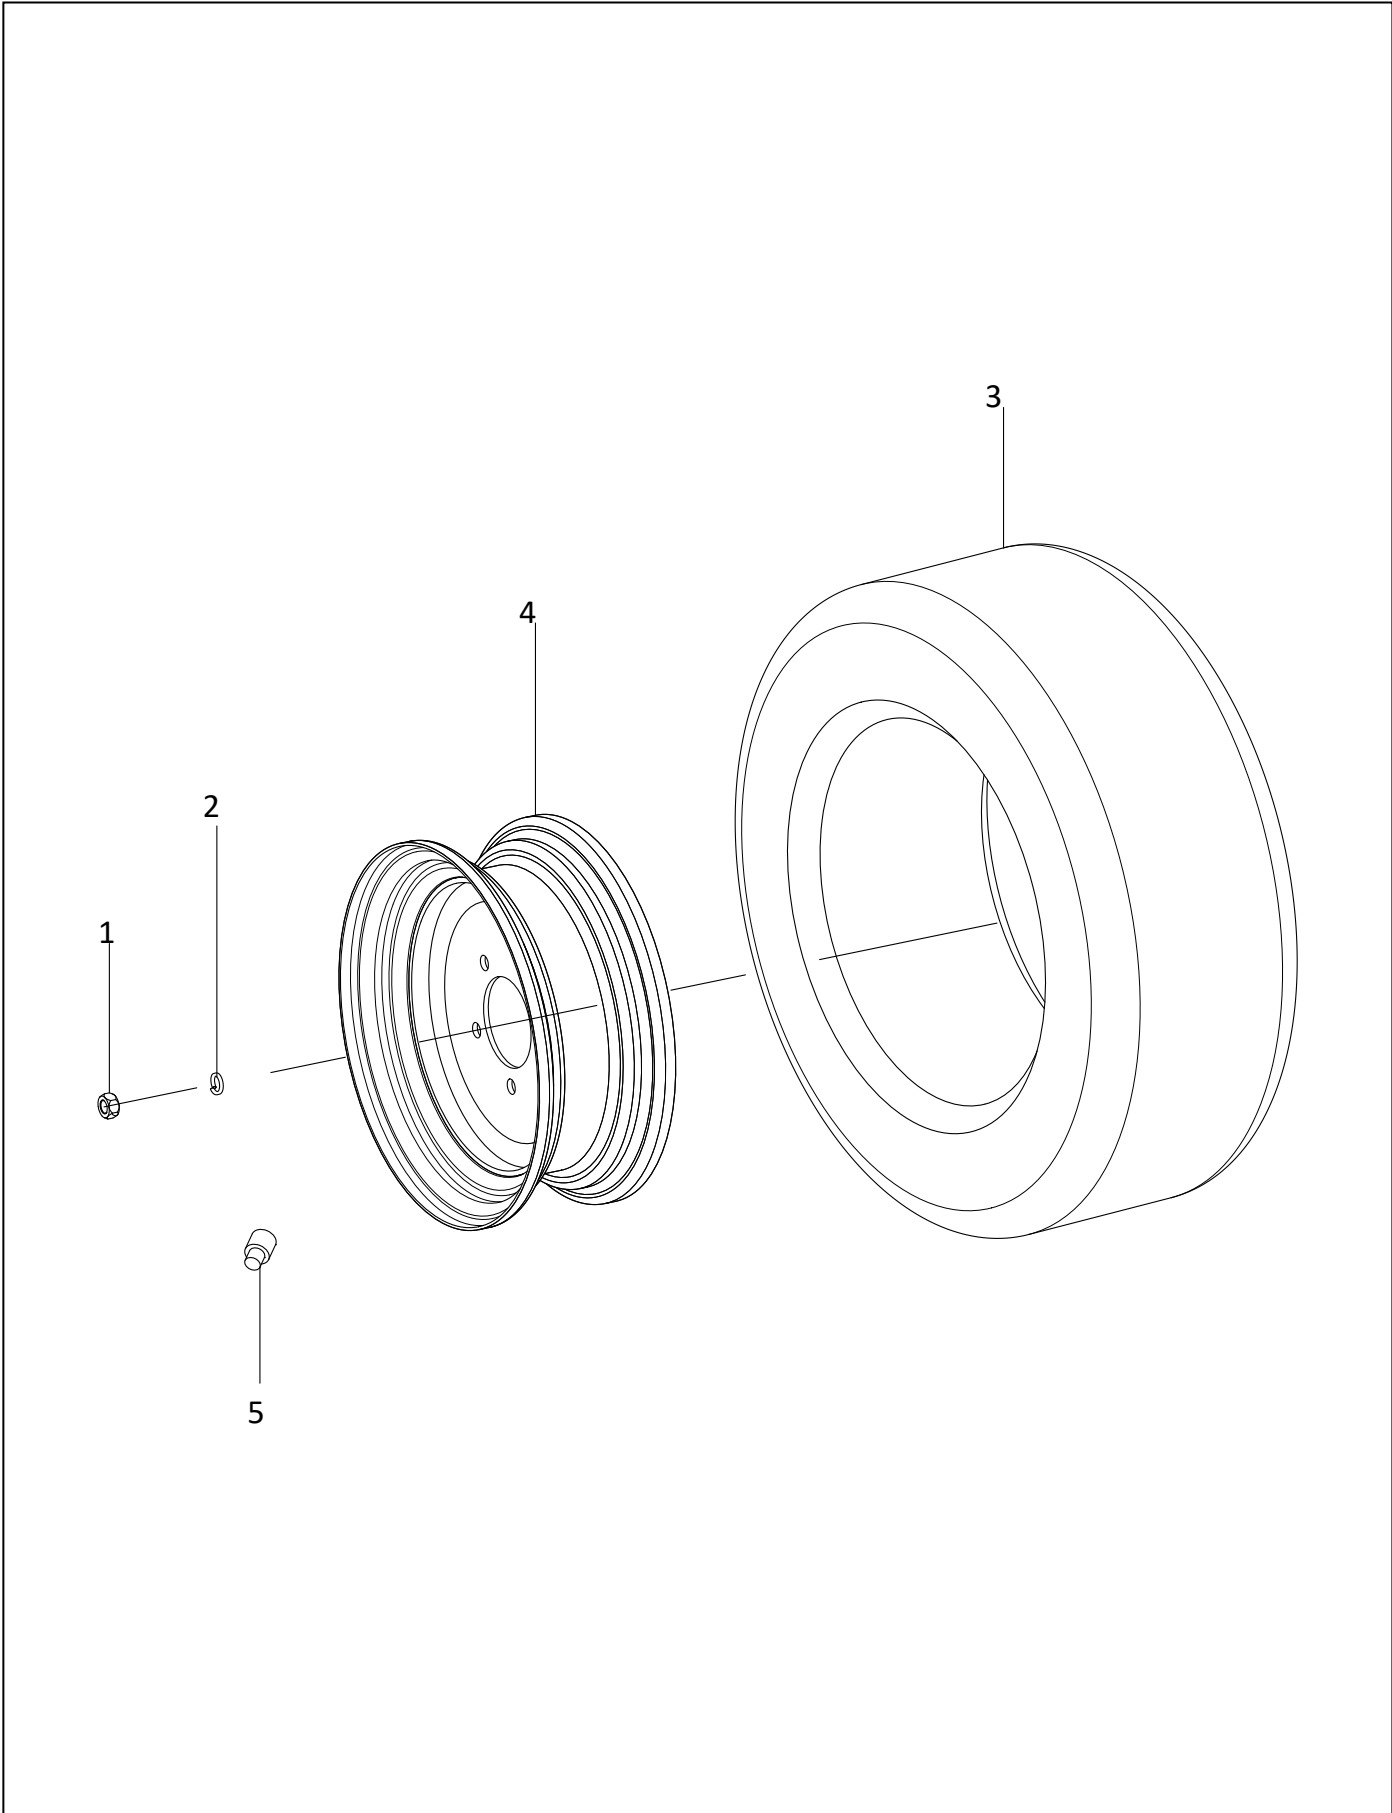


TABLE-29**WHEEL AND TYRE ASSEMBLY FRONT 23x8.50-12 (M/s BKT -TURF)**

Fig. No.	Part No.	Description	Qty
1	D83501030.9	NUT M12X1.5-10.9 HEX HEAD	10
2	D86500020.9	WASHER M12 SPRING LOCK	10
3	D10517730.9	TYRE ASSEMBLY FRONT WHEEL 23X8.50-12 12PR TL (LG306)	2
4	D10538490.9	RIM ASSEMBLY FRONT WHEEL 7.00IX12 (ANTIQUE SILVER)	2
5	D10538650.9	VALVE TYRE FRONT WHEEL 23X8.50-12 (TR412,TR413)	2

TABLE-30
TUBING POWER STEERING SUBASSEMBLY

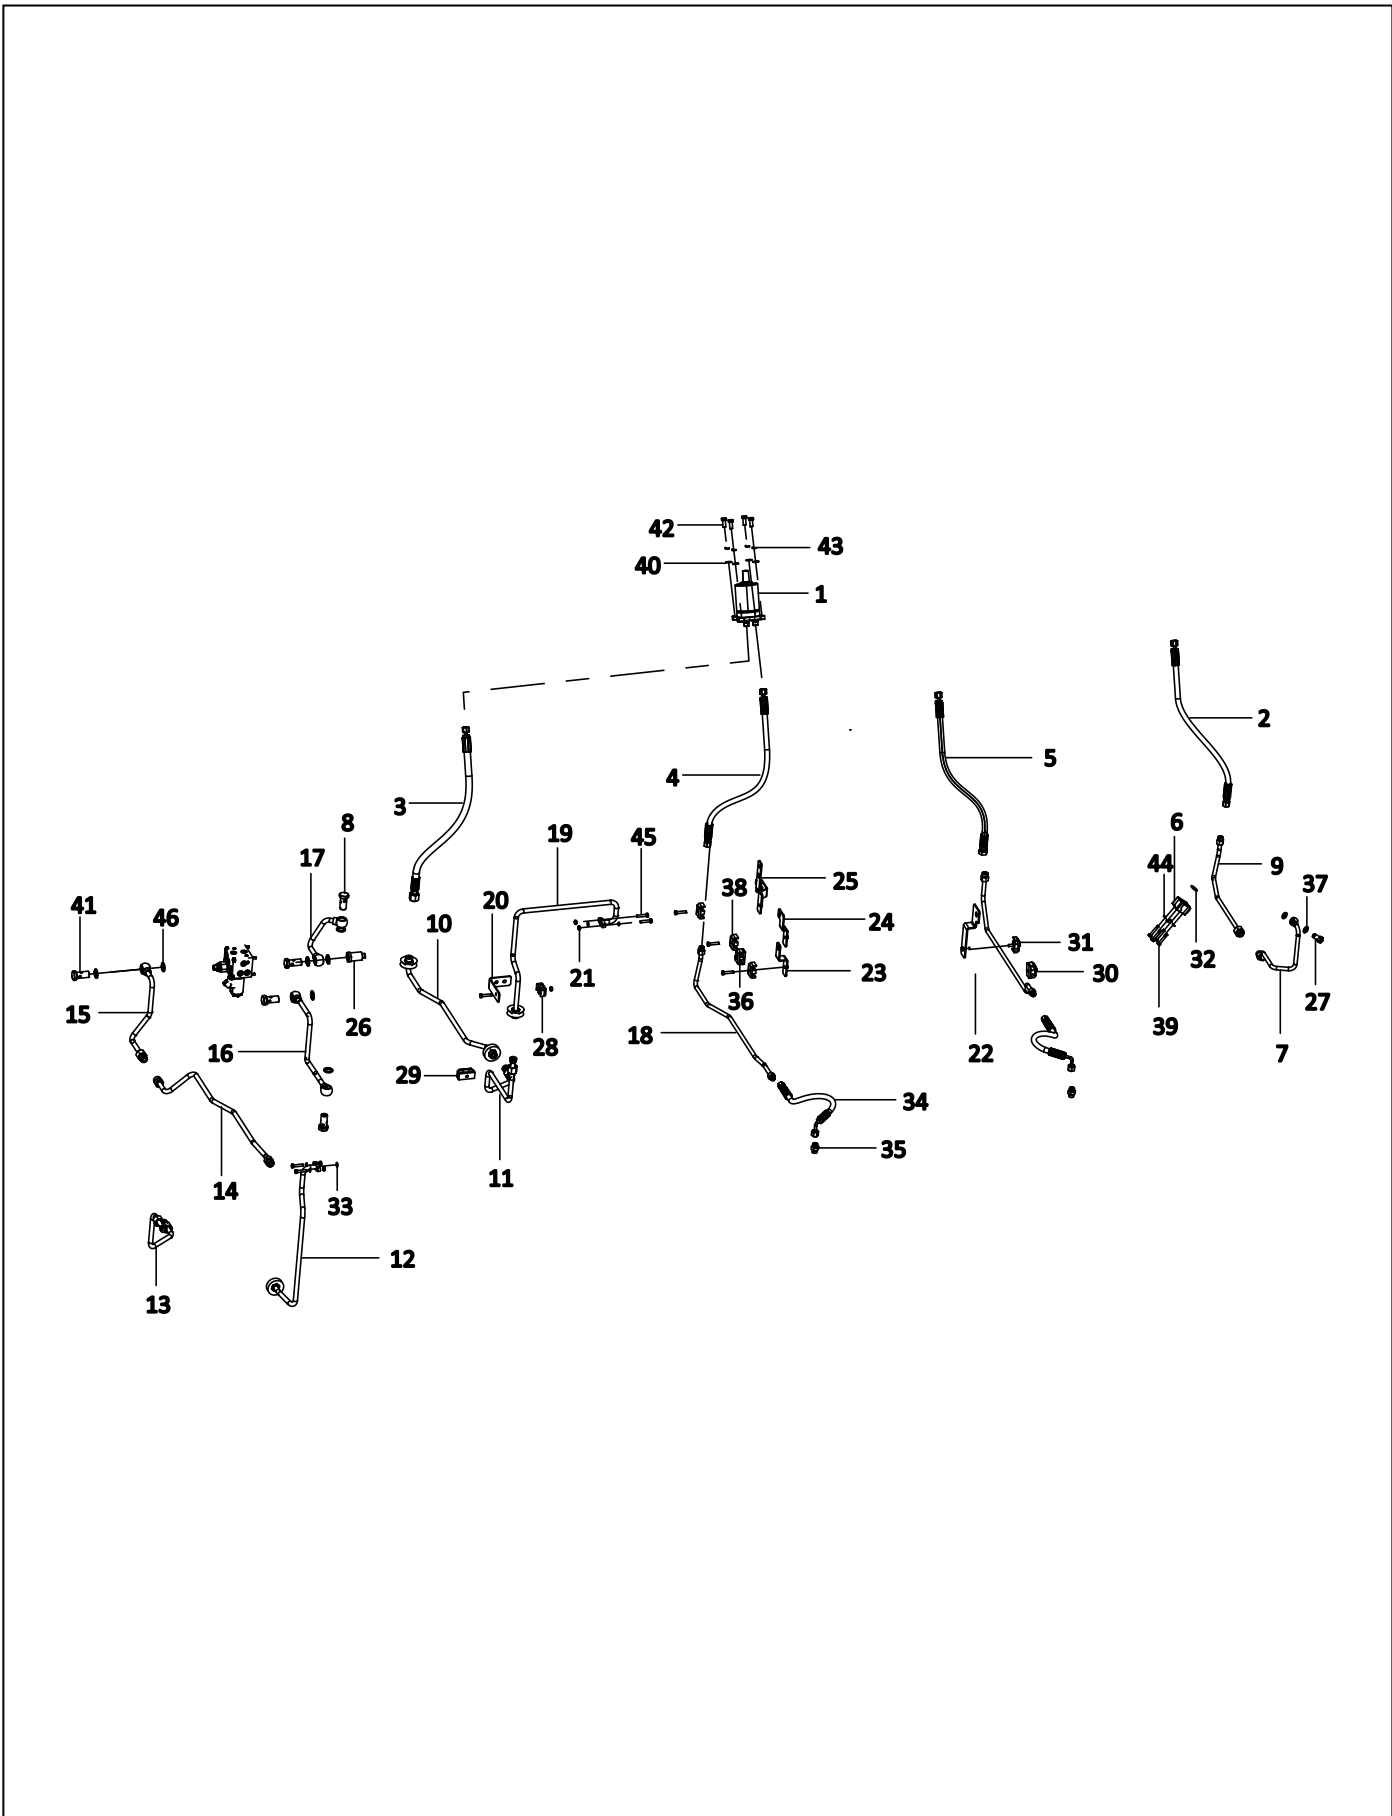


TABLE-30
TUBING POWER STEERING SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10524330.9	MOTOR ASSEMBLY POWER STEERING	1
2	D10556280.9	HOSE ASSEMBLY POWER STEERING PRESSURE TO MOTOR	1
3	D10556210.9	HOSE ASSEMBLY POWER STEERING RETURN	1
4	D10556290.9	HOSE ASSEMBLY POWER STEERING MOTOR TO CONNECTOR RH	1
5	D10556300.9	HOSE ASSEMBLY POWER STEERING MOTOR TO CONNECTOR LH	1
6	D10617730.9	FLANGE POWER STEERING PRESSURE	1
7	D10556250.9	TUBE ASSEMBLY POWER STEERING PRESSURE	1
8	D10606750.9	TUBE ASSEMBLY POWER STEERING CONNECTOR LH	1
9	D10617700.9	TUBE ASSEMBLY POWER STEERING PRESSURE	1
10	D10606650.9	TUBE ASSEMBLY STEERING RETURN TO OIL COOLER INLET CONNECTOR	1
11	D10606630.9	TUBE ASSEMBLY OIL COOLER INLET CONNECTOR	1
12	D10587720.9	TUBE ASSEMBLY OIL COOLER OUTLET	1
13	D10606610.9	TUBE ASSEMBLY OIL COOLER OUTLET CONNECTOR	1
14	D10606670.9	TUBE ASSEMBLY OIL COOLER OUTLET CONNECTOR TO SOLENOID VALVE	1
15	D10606710.9	TUBE ASSEMBLY SOLENOID VALVE INLET	1
16	D10606730.9	TUBE ASSEMBLY SOLENOID VALVE TO HST INLET	1
17	D10607280.9	TUBE ASSEMBLY HST RETURN	1
18	D10606770.9	TUBE ASSEMBLY POWER STEERING CONNECTOR RH	1
19	D10587690.9	TUBE ASSEMBLY OIL COOLER INLET	1
20	D10606590.9	BRACKET ASSEMBLY OIL COOLER TUBE HOLDING	1
21	D83500070.9	NUT M6X1.00-6 HEX	9
22	D10558120.9	BRACKET ASSEMBLY STEERING PRESSURE TUBE HOLDING LH	1
23	D10607690.9	BRACKET ASSEMBLY STEERING TUBE HOLDING FRONT	1
24	D10607710.9	BRACKET ASSEMBLY STEERING TUBE HOLDING REAR	1
25	D10607760.9	BRACKET ASSEMBLY POWER STEERING TUBE HOLDING	1
26	D10607300.9	CONNECTOR M18X1.5 AND 1/4"-BSP (STUD END)	1
27	D10539480.9	BOLT BANJO M12X1.5	1
28	D10587620.9	CLAMP ASSEMBLY HYDRAULIC PRESSURE	1
29	D10402170.9	CLAMP ASSEMBLY TUBING HYDRAULIC PRESSURE 1	1
30	D10408760.9	CLAMP ASSEMBLY TUBING HYDRAULIC PRESSURE	1
31	D10558140.9	CLAMP ASSEMBLY POWER STEERING	1
32	D93601170.9	SEAL O RING 2.0X19	1
33	D93601350.9	SEAL O RING 1.6X10.5	2
34	D10556190.9	HOSE ASSEMBLY STEERING CYLINDER RH	2
35	D10556240.9	CONNECTOR 9/16-18 AND M14X1.5 STUD END	2
36	D10296350.9	CLAMP ASSEMBLY TUBING HYDRAULIC PRESSURE	2
37	D10519740.9	WASHER BONDED SEAL 12.7X19X1.5	2
38	D10607330.9	CLAMP ASSEMBLY TUBING HYDRAULIC PRESSURE	3
39	D81500340.9	BOLT M6X1.00X35-8.0 HEX HEAD	4
40	D85500050.9	WASHER M8 FLAT	5

TABLE-30
TUBING POWER STEERING SUBASSEMBLY

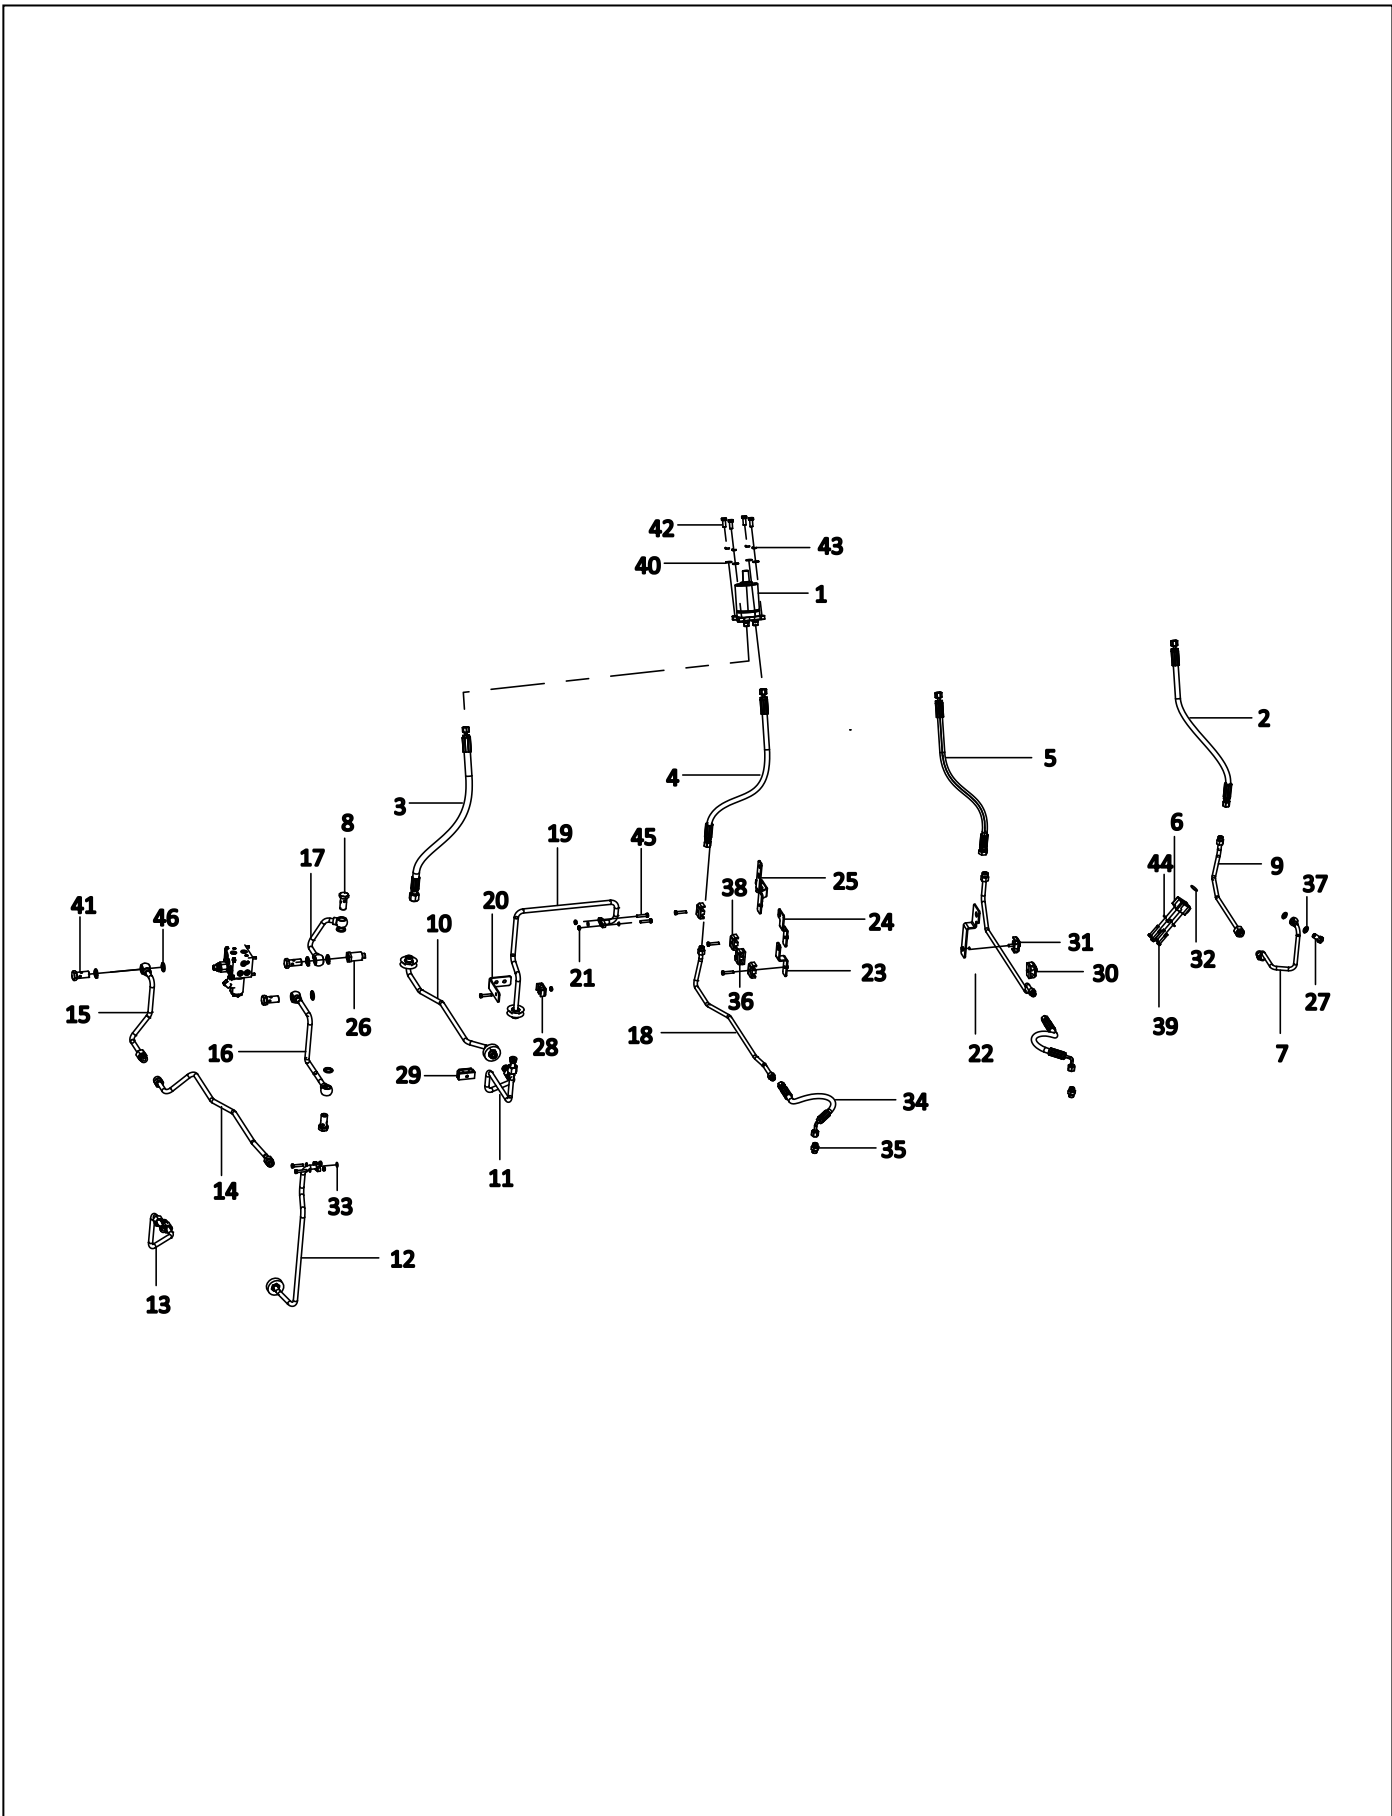


TABLE-30
TUBING POWER STEERING SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
41	D10174960.9	BOLT BANJO M18X1.50	5
42	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	6
43	D86500030.9	WASHER M8 SPRING LOCK	6
44	D86500040.9	WASHER M6 SPRING LOCK	8
45	D10466130.9	BOLT M6X30-5.8 HEX HEAD (FTES SRUBA M6X30-5.8)	9
46	D10174950.9	SEAL BANJO BOLT DISTRIBUTOR TO CYLINDER TUBE	10
47	D10578080.9	VALVE ASSEMBLY WET CLUTCH ACTUATION	1

TABLE-31
PEDAL SPEED CONTROL AND CRUISE CONTROL SUBASSEMBLY

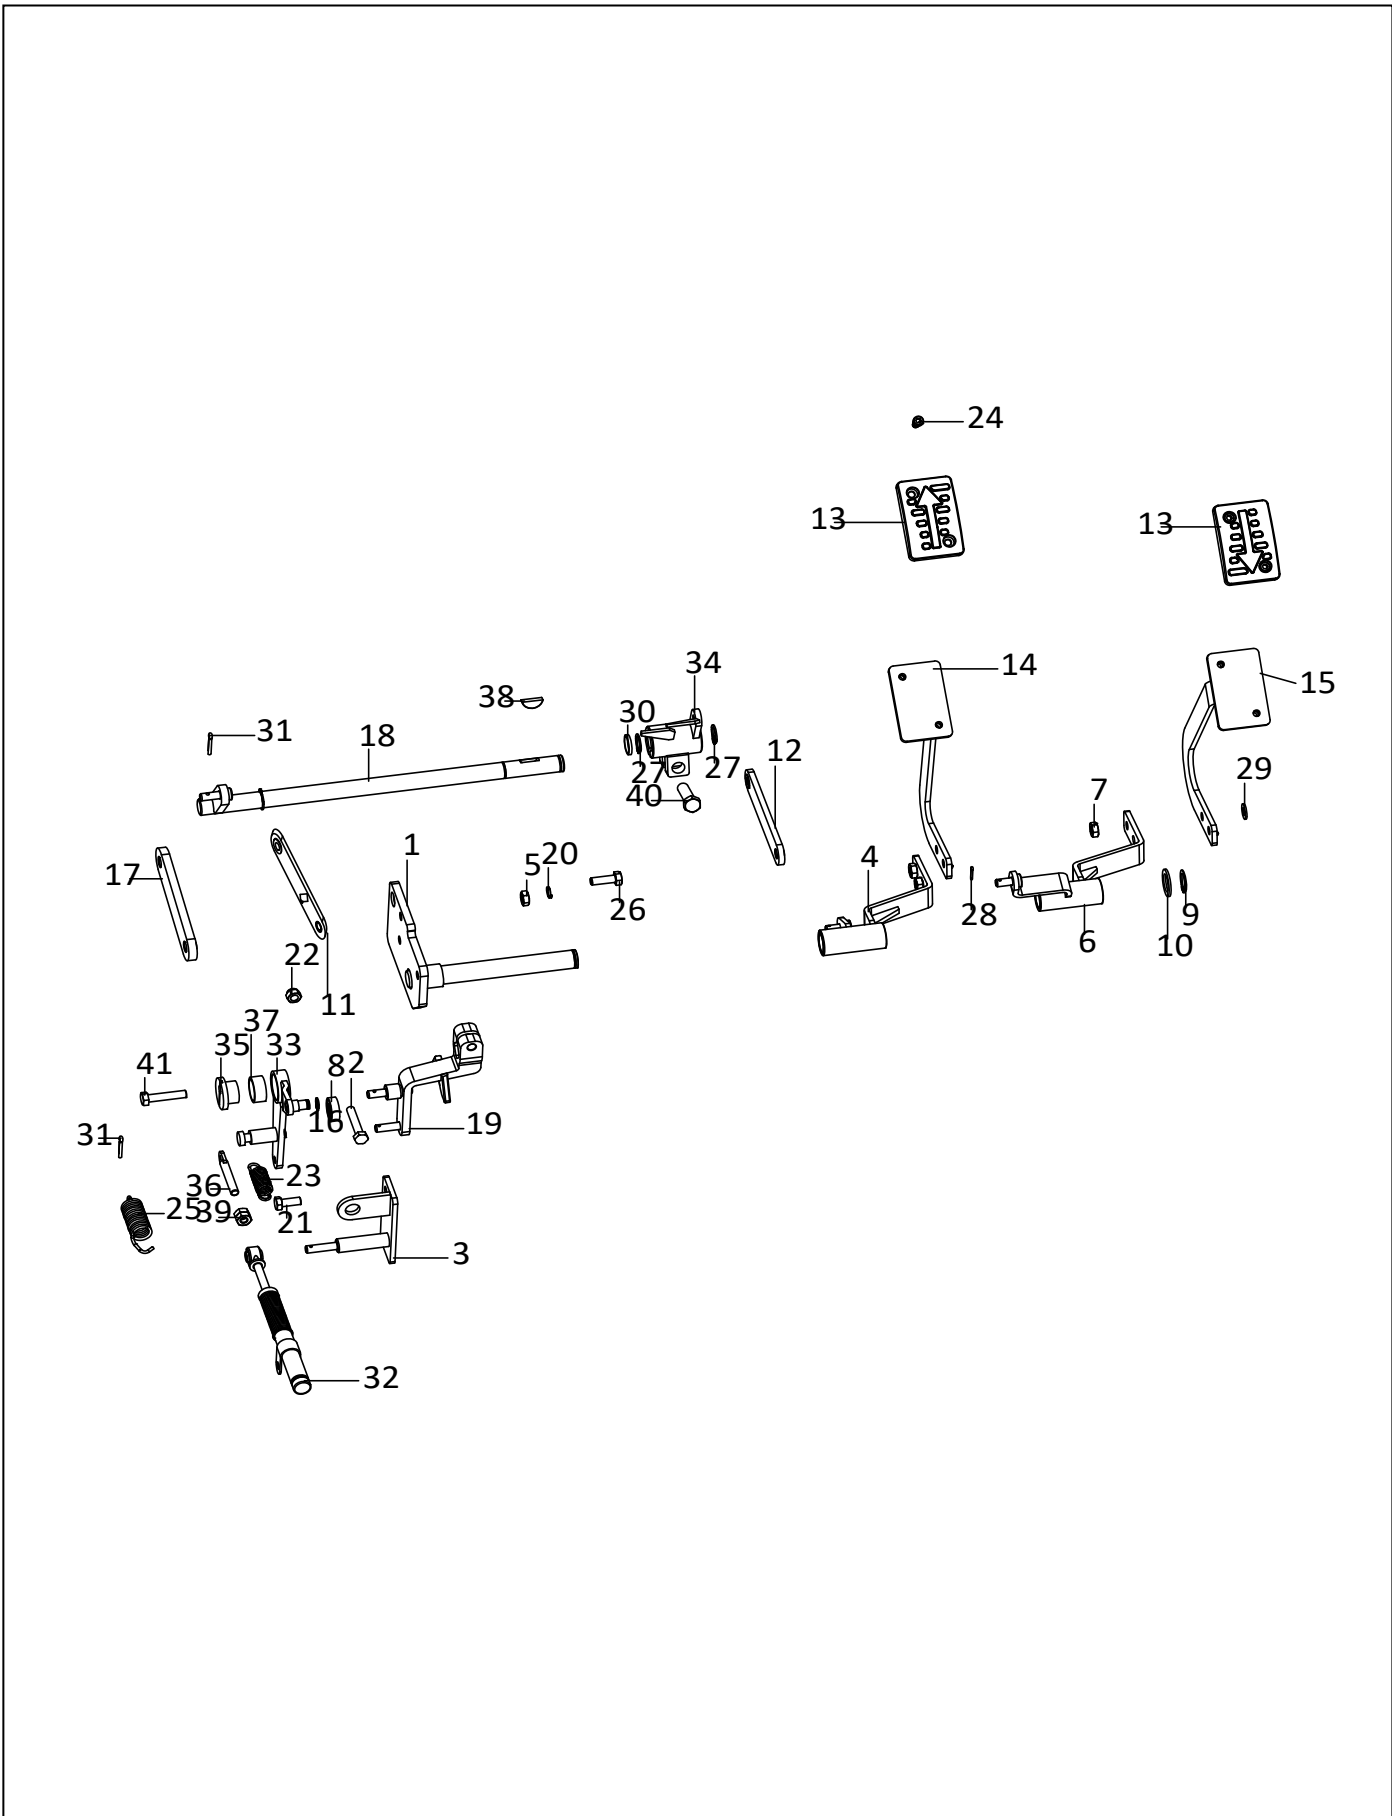


TABLE-31**PEDAL SPEED CONTROL AND CRUISE CONTROL SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D10747930.9	BRACKET ASSEMBLY HUB SPEED PEDAL CONTROL MOUNTING	1
2	D81501150.9	BOLT M8X1.25X45 HEX HEAD	1
3	D10754220.9	PIN AND BRACKET ASSEMBLY DAMPER MOUNTING SPEED CONTROL	1
4	D10748010.9	HUB AND LEVER ASSEMBLY FORWARD PEDAL CONTROL	1
5	D83500110.9	NUT M8X1.25-8 HEX	2
6	D10747970.9	HUB AND LEVER ASSEMBLY REVERSE PEDAL CONTROL	1
7	D83500110.9	NUT M8X1.25-8 HEX	2
8	D10607850.9	BEARING SPEED CONTROL	1
9	D90000620.9	CIRCLIP A20X1.2 N	1
10	D85500650.9	WASHER 30X20X2.0 THRUST	6
11	D10748970.9	LINK FORWARD PEDAL SPEED CONTROL	1
12	D10748960.9	LINK REVERSE PEDAL SPEED CONTROL	1
13	D10757650.9	PAD FRICTION PEDAL SPEED CONTROL	2
14	D10757590.9	PEDAL ASSEMBLY FORWARD SPEED CONTROL	1
15	D10757620.9	PEDAL ASSEMBLY REVERSE SPEED CONTROL	1
16	D90500350.9	CIRCLIP A10X1.0 N	1
17	D10873230.9	LINK CONNECTING NEUTRAL SETTING ASSEMBLY	1
18	D10748990.9	SHAFT AND LEVER ASSEMBLY CROSS PEDAL SPEED CONTROL	1
19	D10753790.9	PIN AND LEVER ASSEMBLY CROSS SHAFT HST	1
20	D86500030.9	WASHER M8 SPRING LOCK	11
21	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	2
22	D83500160.9	NUT M8X1.25 NYLOCK HEX	2
23	D10607860.9	SPRING RETURN SPEED CONTROL LEVER UPPER	1
24	D81504100.9	BOLT M6X1.0 ALLEN (BLACK COATED)	4
25	D10012250.9	SPRING BRAKE PEDAL RETURN	1
26	D81501470.9	BOLT M8X1.25X25-10.9 HEX HEAD	8
27	D90000100.9	CIRCLIP A18X1.2 N	3
28	D88400200.9	PIN 2.0X12.0 COTTER	5
29	D85500050.9	WASHER M8 FLAT	18
30	D10252930.9	WASHER 18.5X22X3.0 SEAL WIPER RETAINER	2
31	D10013460.9	PIN 1/8"X0.75" COTTER	2
32	D10607950.9	DAMPER ASSEMBLY SPEED CONTROL	1
33	D10873170.9	ARM NEUTRAL HOLD ASSEMBLY	1
34	D10874720.9	HUB AND LEVER ASSEMBLY SPEED CONTROL	1
35	D10873220.9	PIN NEUTRAL ASSEMBLY	1
36	D10873240.9	PLATE AND SPRING TENSION ASSEMBLY NEUTRAL SETTING	2
37	D10874080.9	RUBBER SEALING NEUTRAL HOLD	1
38	D91000020.9	KEY 6 X 9 WOODRUFF	1
39	D83500060.9	NUT M8X1.25-6 HEX	4
40	D81000470.9	BOLT 7/16"-14X1.50" HEX HEAD	1

TABLE-31
PEDAL SPEED CONTROL AND CRUISE CONTROL SUBASSEMBLY

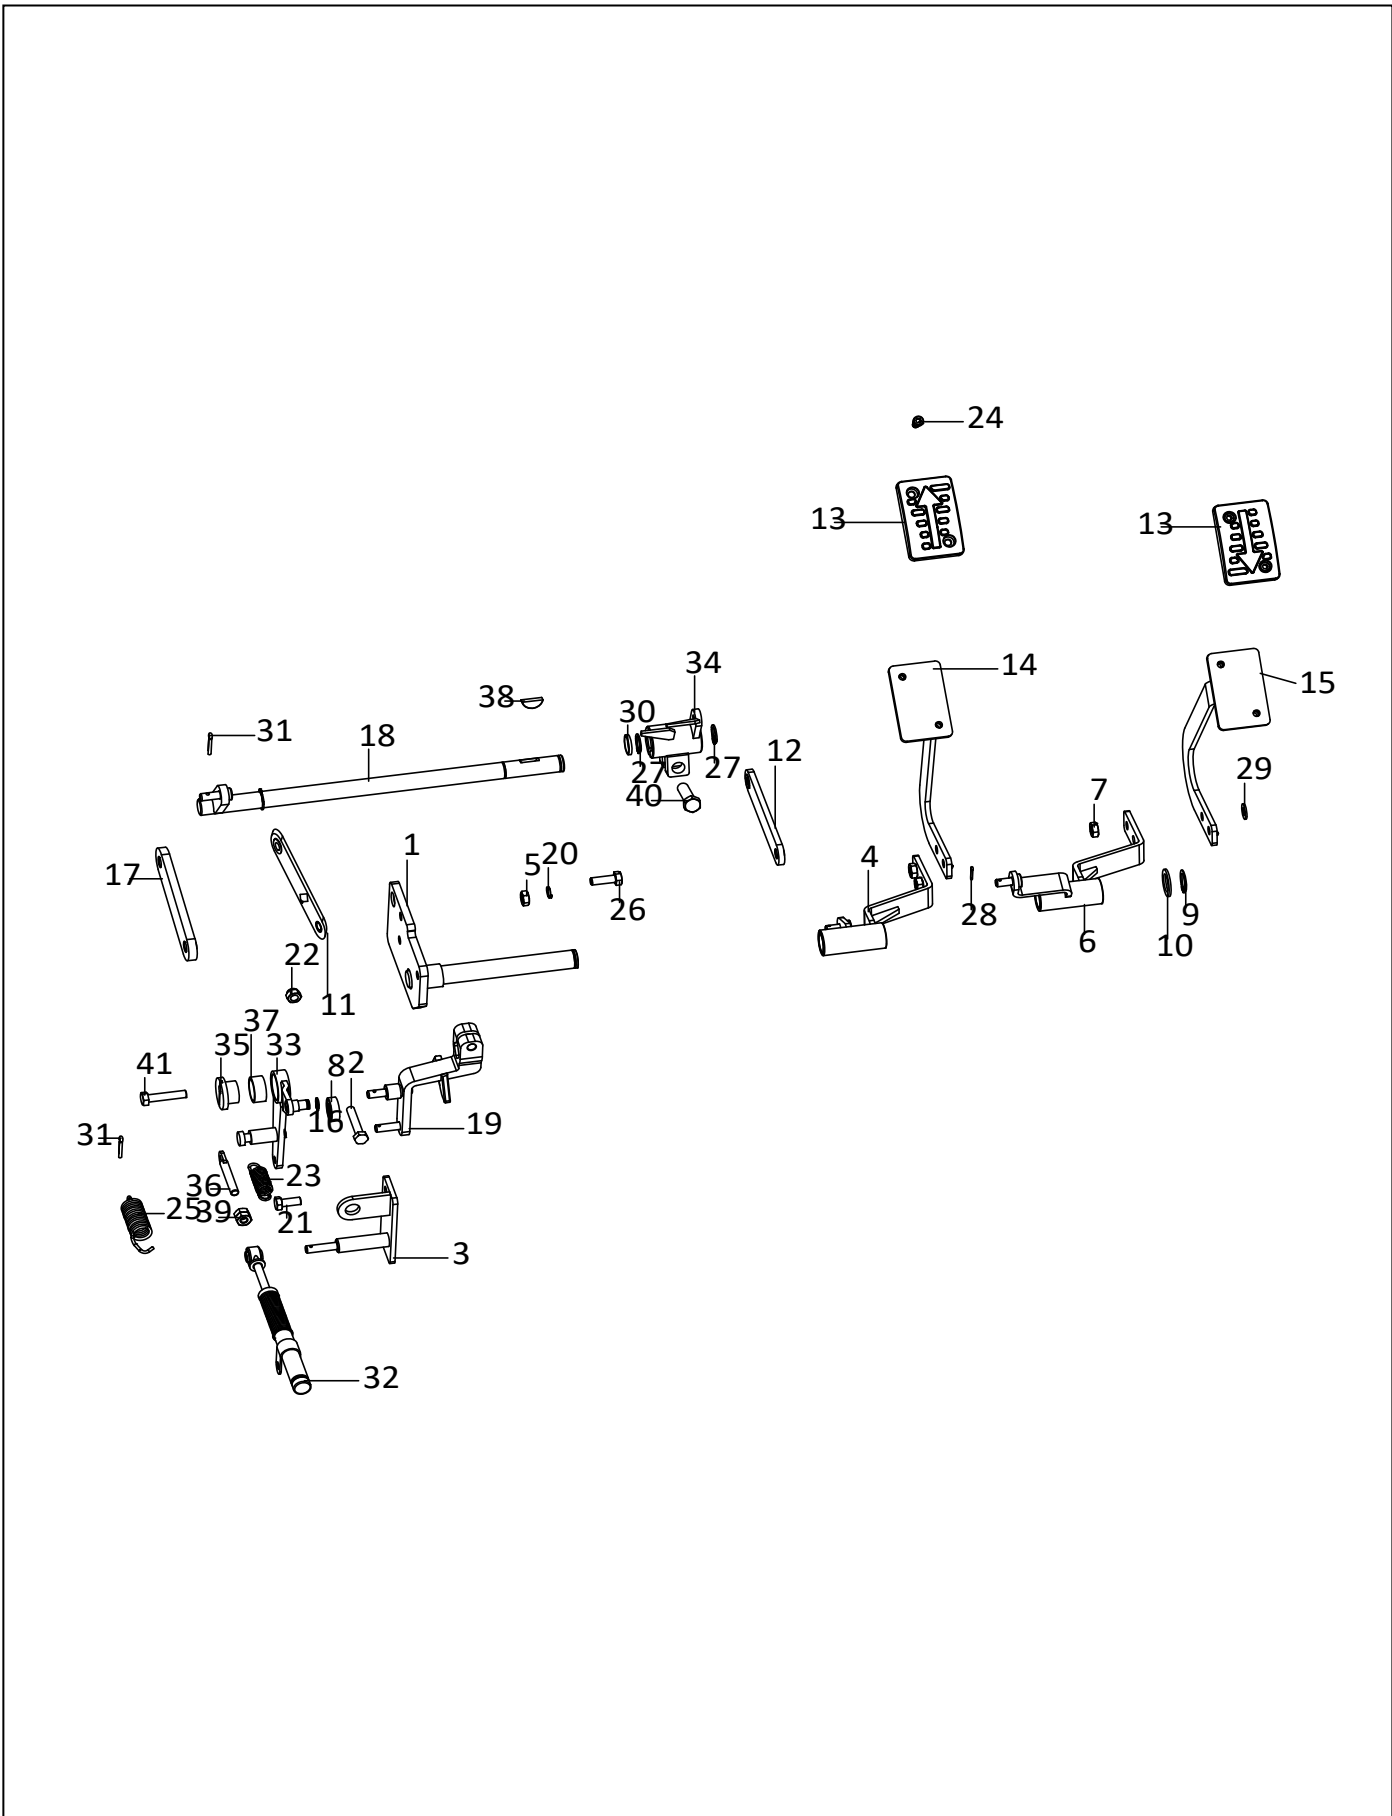


TABLE-31
PEDAL SPEED CONTROL AND CRUISE CONTROL SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
41	D81503440.9	BOLT M8X1.25X40-10.9 HEX HEAD	1

TABLE-32
DRIVE TRAIN INPUT FRONT HOUSING HST ASSEMBLY

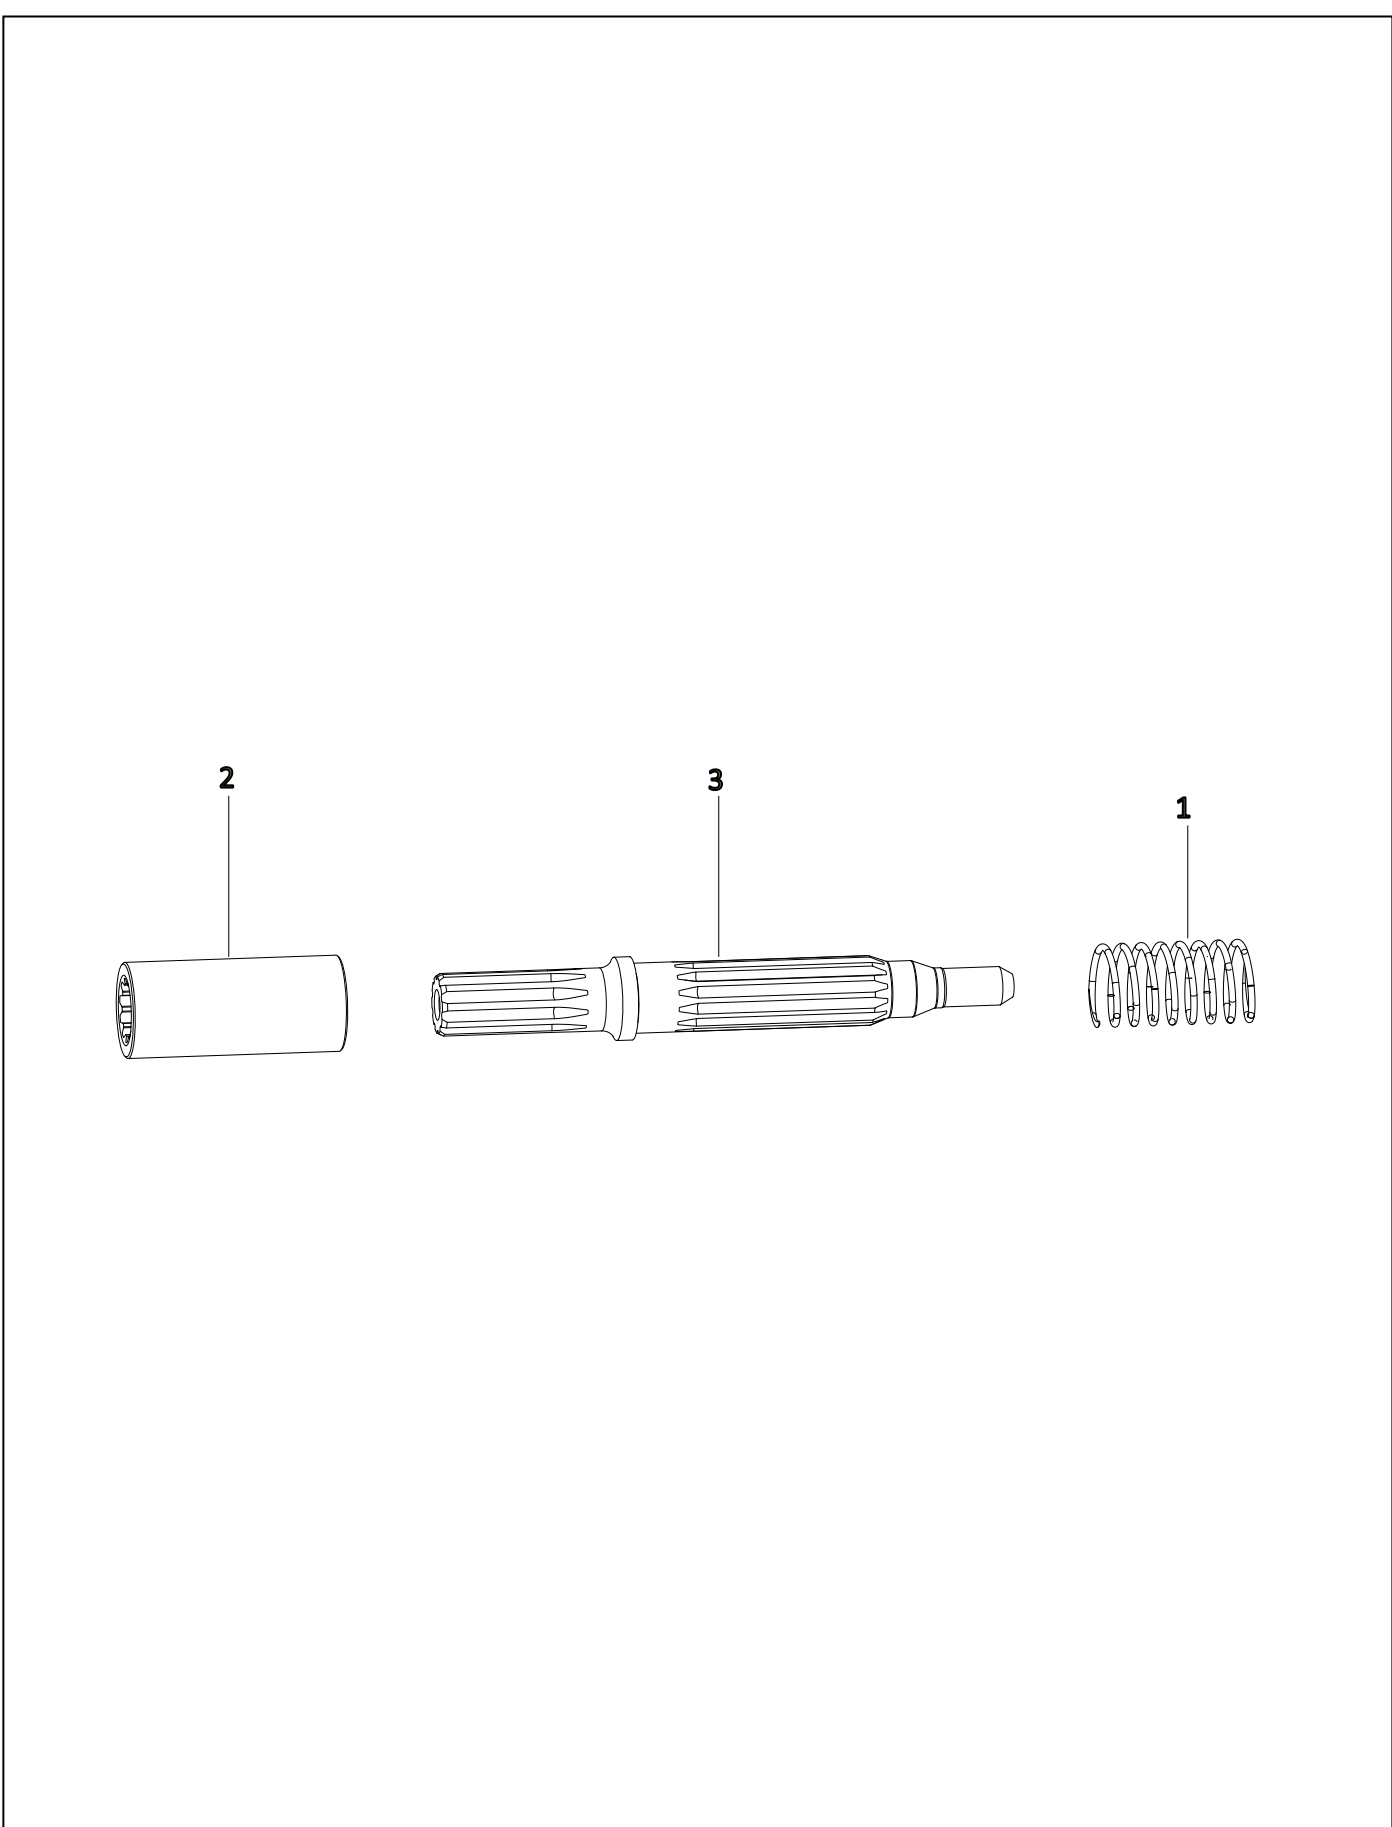


TABLE-33
HOUSING FRONT HST ASSEMBLY

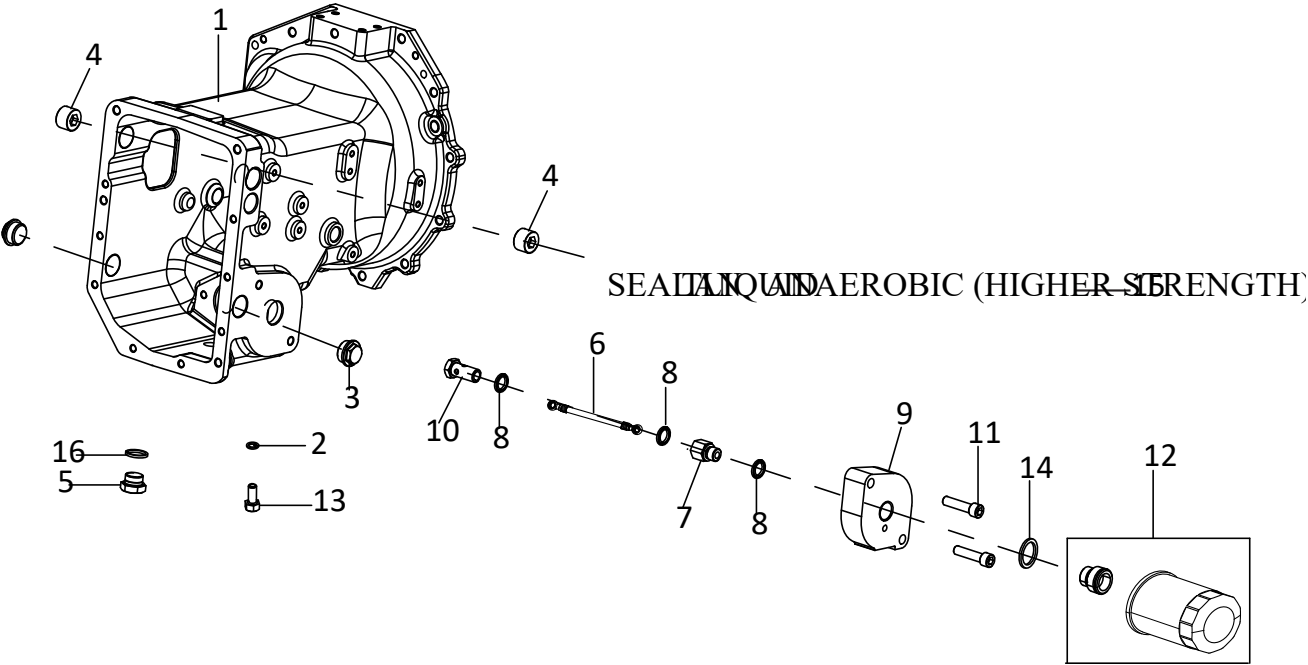


TABLE-33
HOUSING FRONT HST ASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10599230.9	HOUSING FRONT COMPACT HST	1
2	D10559860.9	WASHER M8 FLAT COPPER (FUEL INJECTION PUMP)	1
3	D10238120.9	PLUG M30X1.5X12 WELCH	2
4	D10616070.9	PLUG M30X1.5 ALLEN	2
5	D93100330.9	PLUG M24X2.0-6G	1
6	D10614170.9	HOSE ASSEMBLY INLET HST	1
7	D10515960.9	CONNECTOR M18X1.50 AND M18X1.50 STUD END	1
8	D10174950.9	SEAL BANJO BOLT DISTRIBUTOR TO CYLINDER TUBE	5
9	D10614200.9	PLATE BLOCK FILTER MOUNTING HST	1
10	D10174960.9	BOLT BANJO M18X1.50	2
11	D81504240.9	BOLT M12X1.75X50-8.8 ALLEN	2
12	D10796180.9	FILTER AND ADAPTOR ASSEMBLY HST OIL INTAKE	1
13	D81503090.9	BOLT M8X1.25X16-8.8 HEX HEAD	1
14	D10616120.9	WASHER BONDED SEAL 27.05X34.93X2.34	1
15	D95013250.9	SEALANT LIQUID ANAEROBIC (HIGHER STRENGTH)	AR
16	D10005120.9	WASHER M24 FLAT COPPER	1

TABLE-34
HST UNIT SUBASSEMBLY WITH HARDWARE

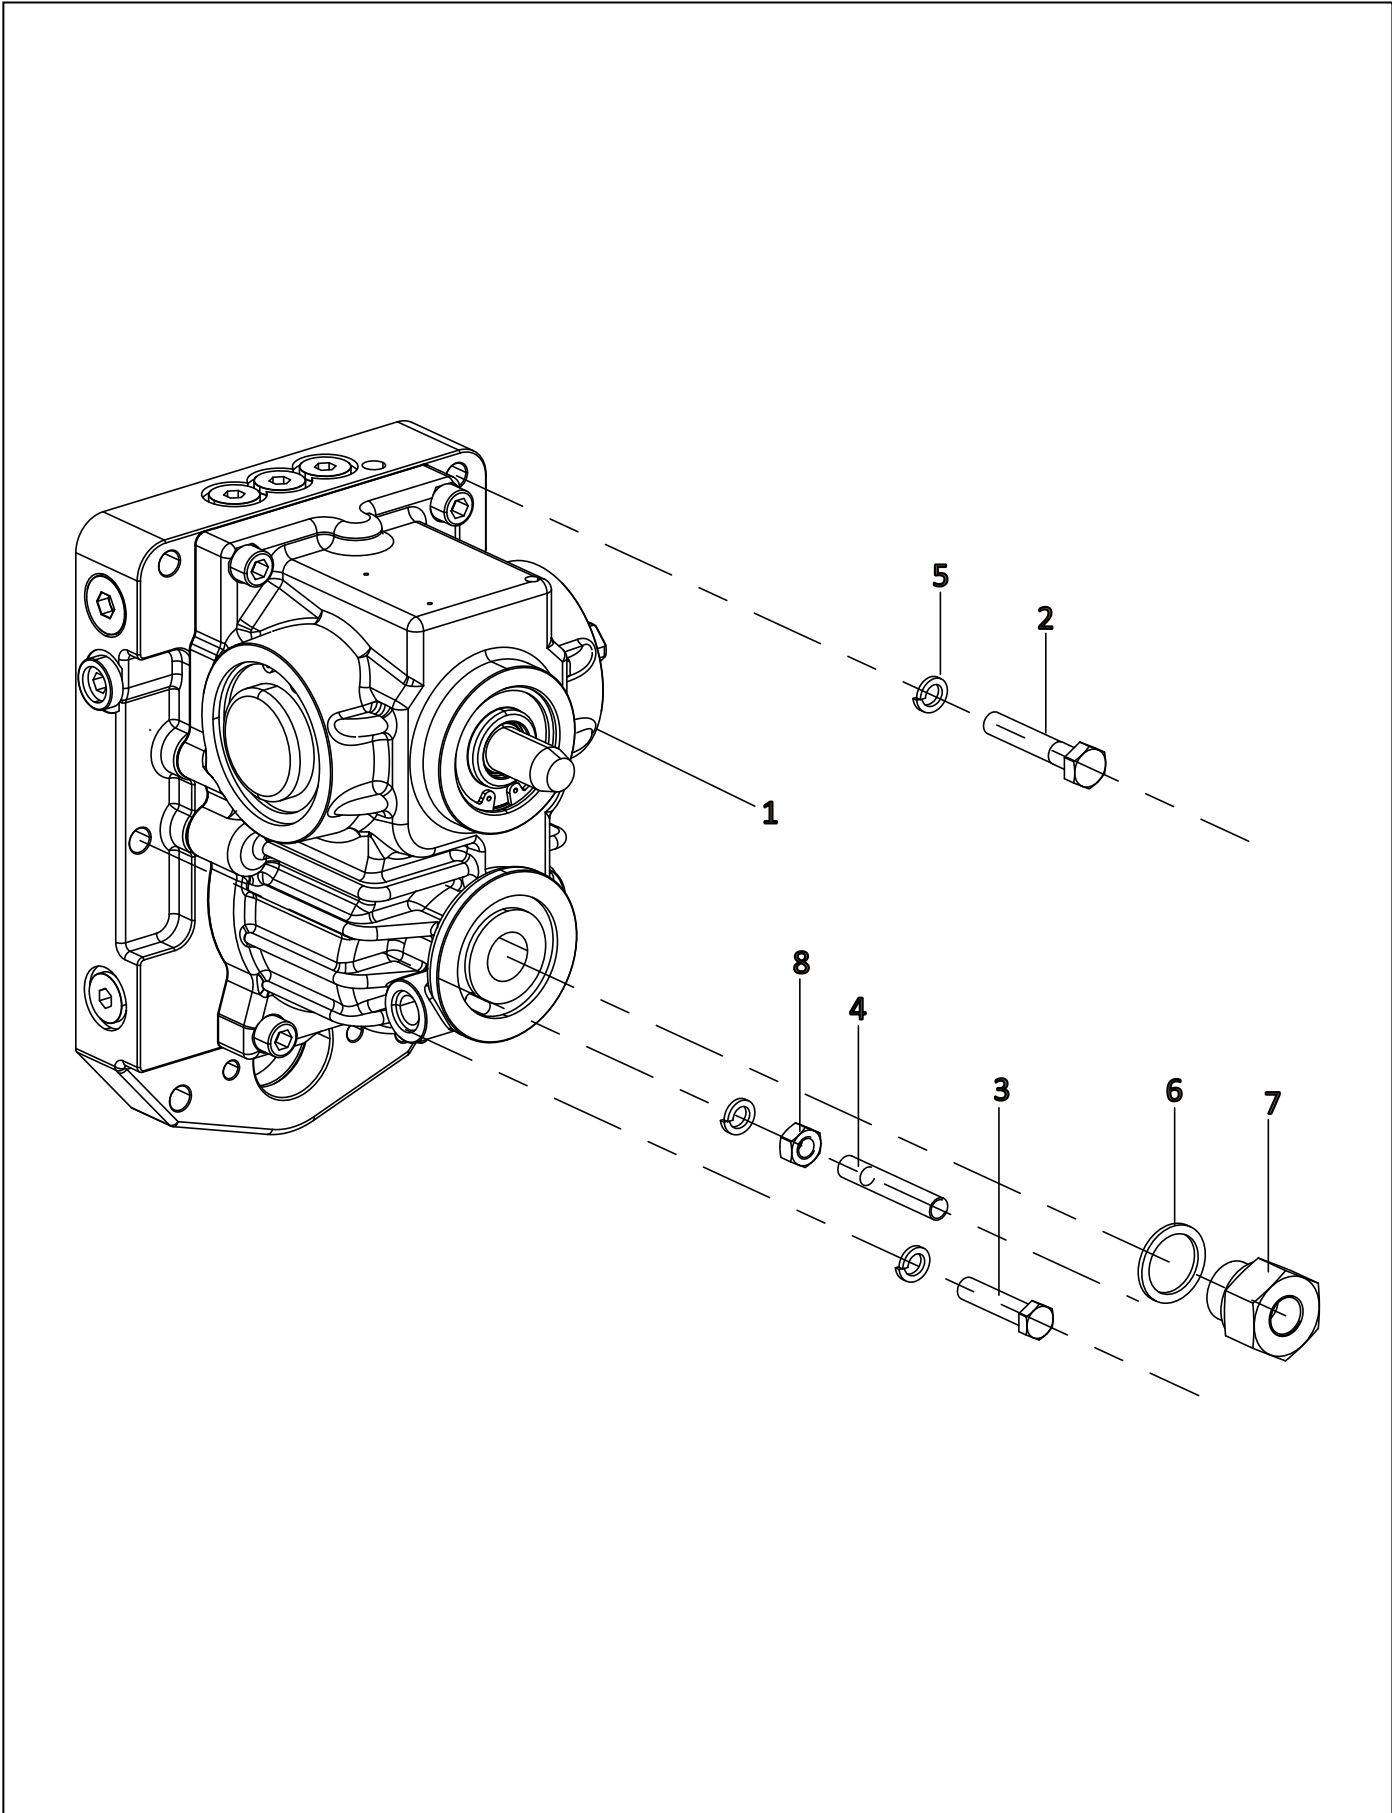


TABLE-34
HST UNIT SUBASSEMBLY WITH HARDWARE

Fig. No.	Part No.	Description	Qty
1	D10616640.9	HYDROSTATIC UNIT ASSEMBLY (NEUTRAL TYPE)	1
2	D81503150.9	BOLT M10X1.50X60-10.9 HEX HEAD	2
3	D81500160.9	BOLT M10X1.50X45-10.9 HEX HEAD	2
4	D84500330.9	STUD B M10X1.5X65-10.9	2
5	D86500090.9	WASHER M10 SPRING LOCK	6
6	D10616120.9	WASHER BONDED SEAL 27.05X34.93X2.34	1
7	D10614190.9	CONNECTOR M18X1.50 AND 3/4"- BSP STUD END	1
8	D83500090.9	NUT M10X1.50-8 HEX	2
9	D95013250.9	SEALANT LIQUID ANAEROBIC (HIGHER STRENGTH)	AR

TABLE-35
DRIVE TRAIN 4WD SUBASSEMBLY (HST)

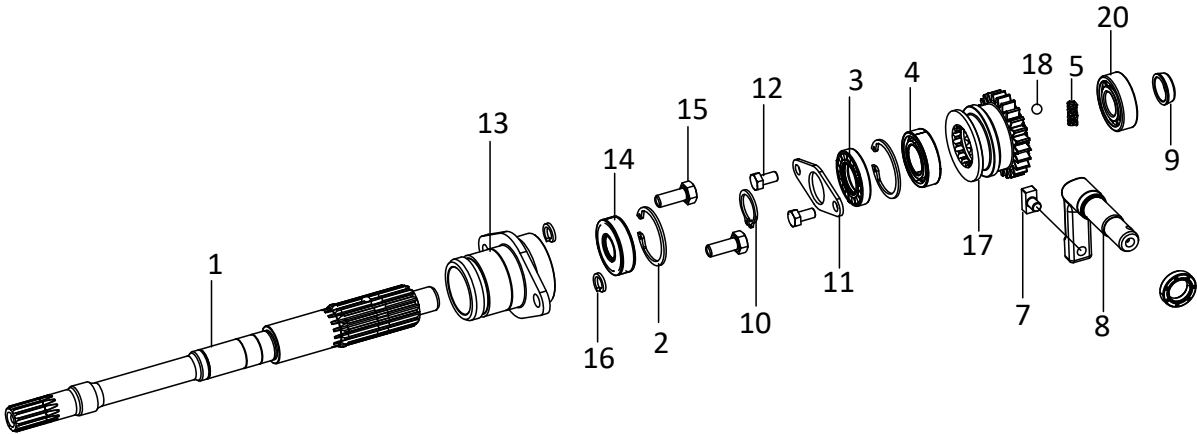


TABLE-35
DRIVE TRAIN 4WD SUBASSEMBLY (HST)

Fig. No.	Part No.	Description	Qty
1	D10599870.9	SHAFT OUTPUT DROP BOX (HST)	1
2	D90500370.9	CIRCLIP B47X2.0 H	2
3	D93601300.9	SEAL OIL 25X47X10	1
4	D10541470.9	BEARING BALL 6005	1
5	D10548300.9	SPRING COMPRESSION GEAR (4WD)	1
6	D10542300.9	LEVER 4WD ENGAGE	1
7	D10252790.9	PIN PTO SHIFTER FORK	1
8	D10220420.9	SEAL OIL 18X30X7	1
9	D10583080.9	SPACER 20X26X8.0 SHAFT DROP BOX	1
10	D90000480.9	CIRCLIP A25X2.0 H	1
11	D10616670.9	PLATE 4WD COMPACT HST	1
12	D81501420.9	BOLT M8X1.25X15 HEX HEAD	2
13	D10599860.9	RETAINER 4WD SHAFT (HST)	1
14	D10602670.9	BEARING BALL 6005 2RS	1
15	D81502150.9	BOLT M10X1.50X25-10.9 HEX HEAD	2
16	D86500090.9	WASHER M10 SPRING LOCK	2
17	D10542260.9	GEAR OUTPUT 4WD Z-25	1
18	D10006740.9	BALL 5/16" SNAP LOCK	1
19	D95010840.9	LOCTITE ANAEROBIC L-5182	AR
20	D10541500.9	BEARING ROLLER NJ 204	1

TABLE-36
RETAINER AND GEAR PAIR INPUT SUB ASSEMBLY WITH HARDWARE (HST)

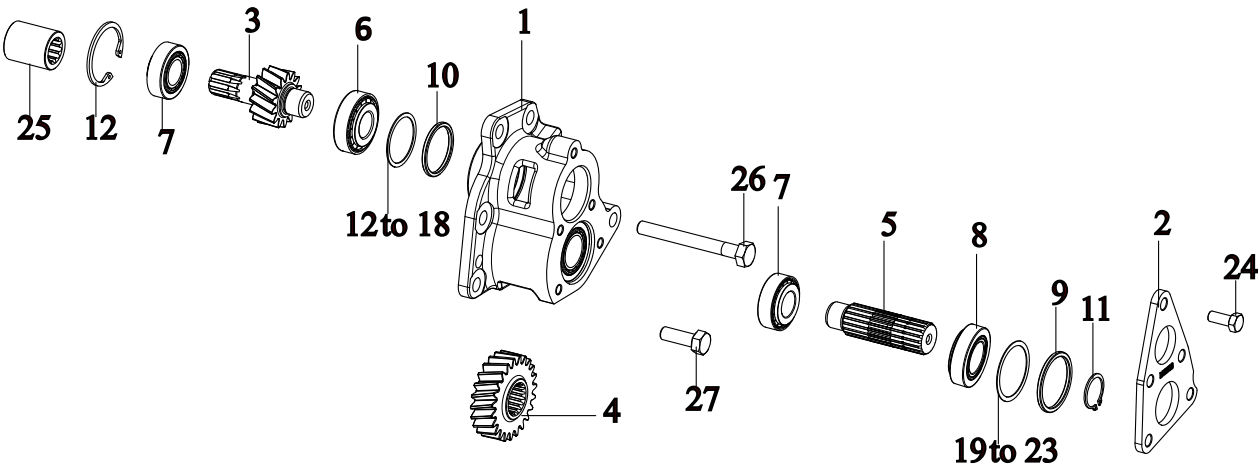


TABLE-36**RETAINER AND GEAR PAIR INPUT SUB ASSEMBLY WITH HARDWARE (HST)**

Fig. No.	Part No.	Description	Qty
1	D10580500.9	CASING INPUT PAIR HYDROSTATIC TRANSMISSION	1
2	D10580510.9	RETAINER INPUT PAIR HYDROSTATIC TRANSMISSION	1
3	D10580520.9	SHAFT DRIVING CONSTANT MESH Z-14	1
4	D10580530.9	GEAR DRIVEN CONSTANT MESH Z-23	1
5	D10580540.9	SHAFT DRIVEN CONSTANT MESH	1
6	D10587490.9	BEARING TAPER ROLLER 30204	1
7	D10587500.9	BEARING TAPER ROLLER TMB32004	2
8	D10539330.9	BEARING TAPPER ROLLER 32005	1
9	D85500580.9	WASHER 40X47X3.0 FLAT	1
10	D85500590.9	WASHER 36X42X3.0 FLAT	1
11	D90000010.9	CIRCLIP A25X1.2 N	1
12	D90500370.9	CIRCLIP B47X2.0 H	1
13	D10596520.9	SHIM 36X42 (THICKNESS 0.075 MM)	1
14	D10596530.9	SHIM 36X42 (THICKNESS 0.125 MM)	1
15	D10596540.9	SHIM 36X42 (THICKNESS 0.2285 MM)	1
16	D10596550.9	SHIM 36X42 (THICKNESS 0.4065 MM)	1
17	D10596560.9	SHIM 36X42 (THICKNESS 0.6 MM)	1
18	D10596570.9	SHIM 36X42 (THICKNESS 0.7875 MM)	1
19	D10596580.9	SHIM 40X47 (THICKNESS 0.075 MM)	1
20	D10596590.9	SHIM 40X47 (THICKNESS 0.125 MM)	1
21	D10596600.9	SHIM 40X47 (THICKNESS 0.2285 MM)	1
22	D10596610.9	SHIM 40X47 (THICKNESS 0.4065 MM)	1
23	D10596620.9	SHIM 40X47 (THICKNESS 0.6 MM)	1
24	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	5
25	D10580480.9	COUPLING OUTPUT HYDROSTATIC TRANSMISSION	1
26	D81503340.9	BOLT M10X1.50X90-10.9 HEX HEAD	1
27	D81503880.9	BOLT M10X1.50X30-10.9 HEX HEAD (16 A/F)	4

TABLE-37
HOUSING ASSEMBLY INTERMEDIATE (HST)

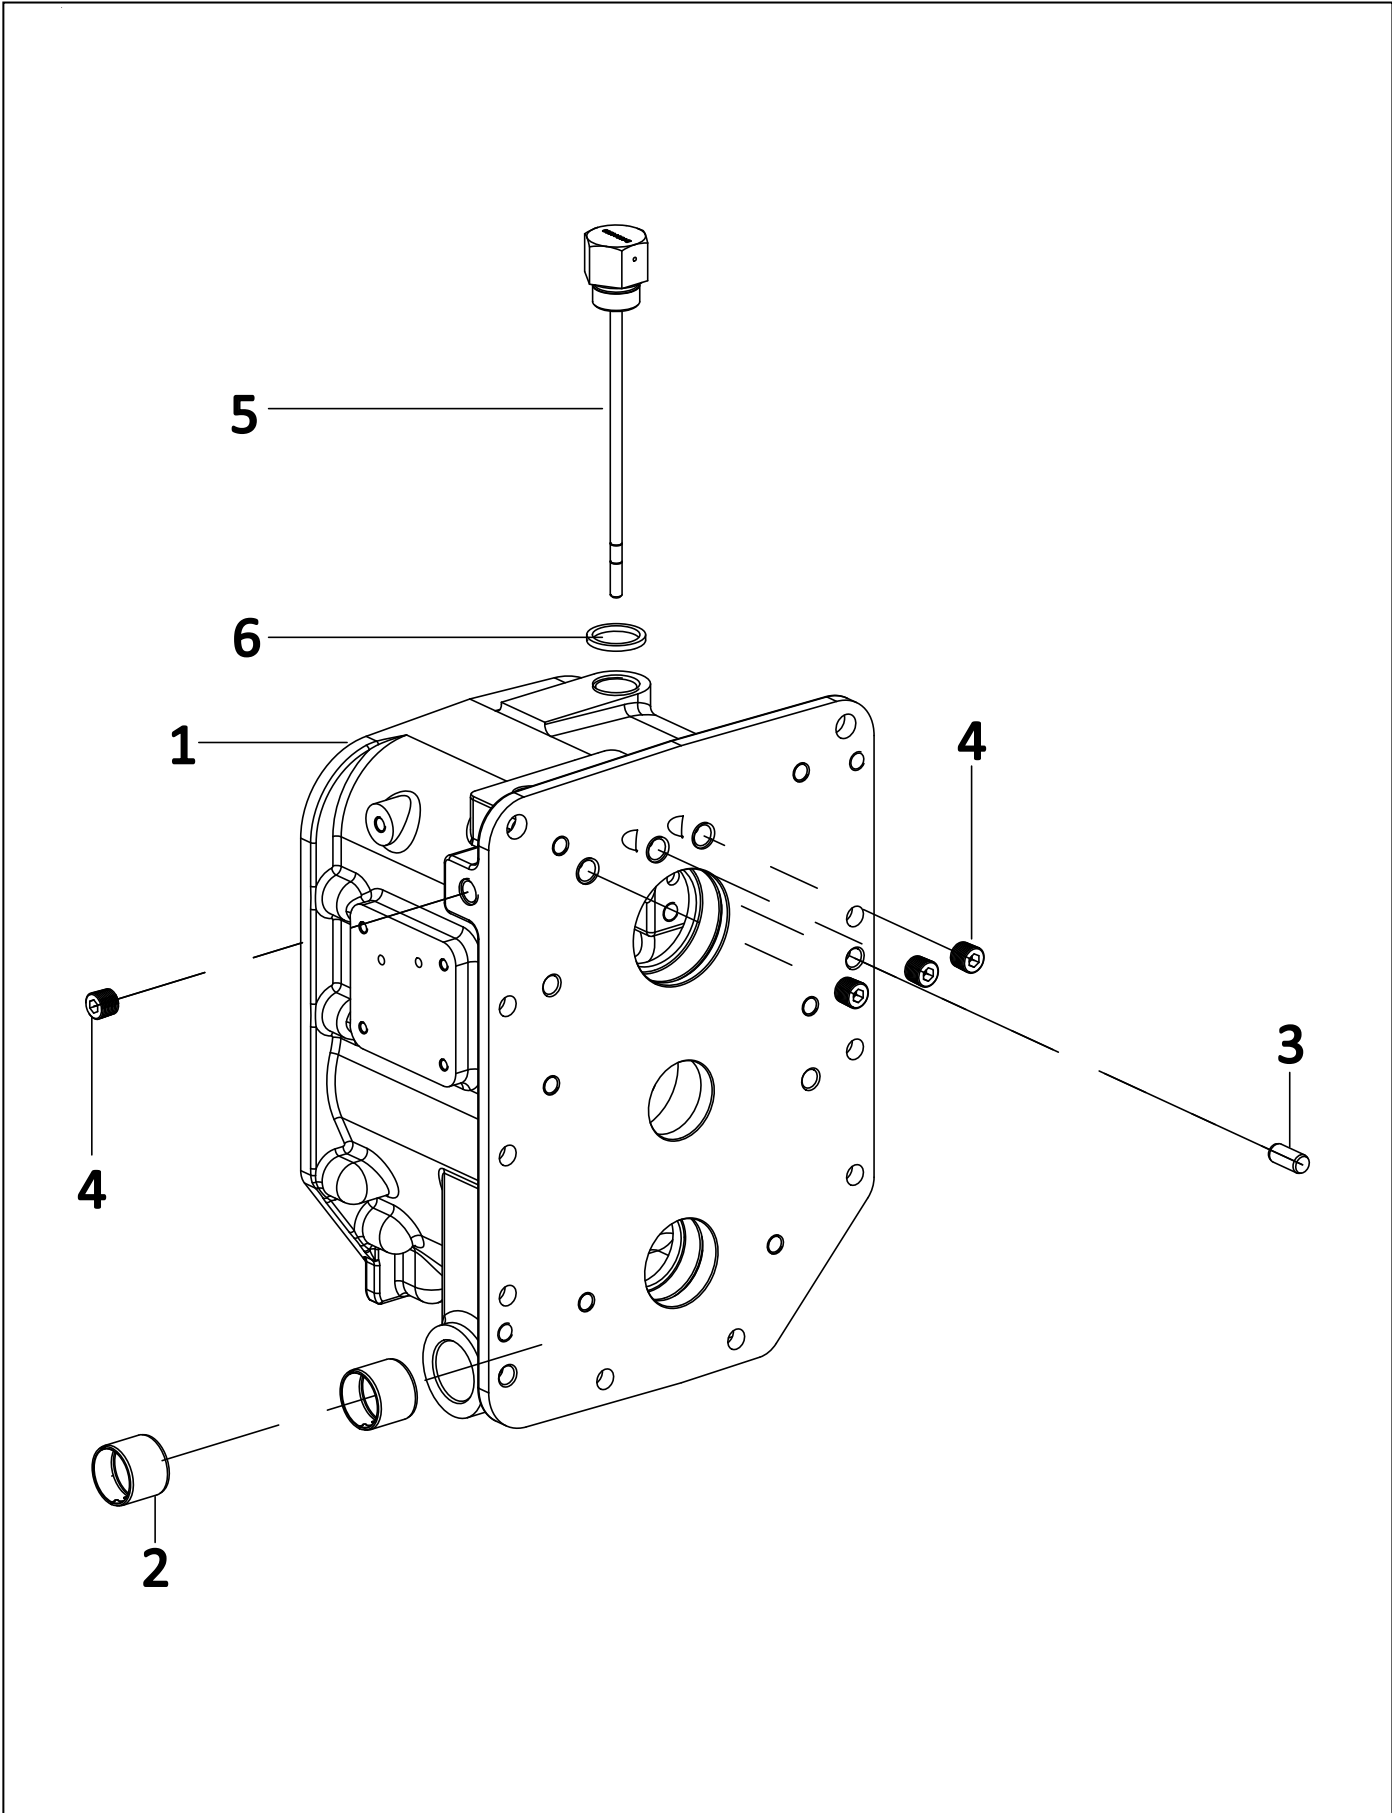


TABLE-37
HOUSING ASSEMBLY INTERMEDIATE (HST)

Fig. No.	Part No.	Description	Qty
1	D10590310.9	HOUSING INTERMEDIATE COMPACT (HST)	1
2	D10481310.9	BUSH BRAKE PEDAL SHAFT	2
3	D87500030.9	PIN 10X22 PLAIN DOWEL	7
4	D93100410.9	PLUG 1/4"-18 SOCKET HEX HEAD (STEEL)	4
5	D10614560.9	INDICATOR OIL LEVEL TRANSMISSION (HST)	1
6	D10005120.9	WASHER M24 FLAT COPPER	1

TABLE-38
CLUTCH WET PTO SUBASSEMBLY

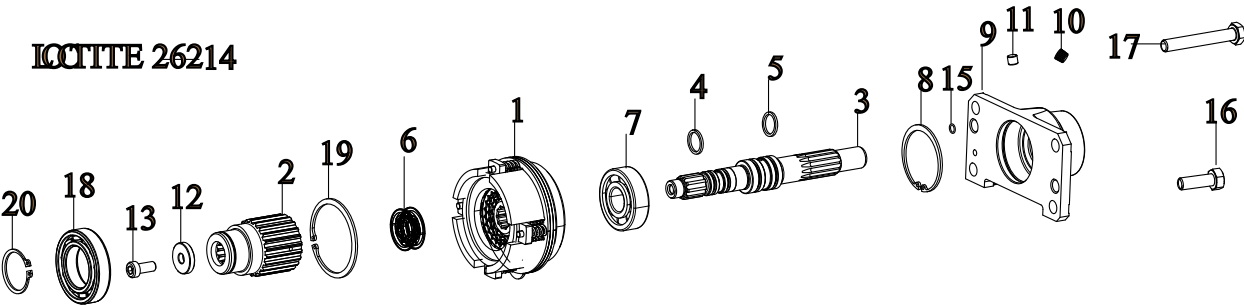


TABLE-38
CLUTCH WET PTO SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10580880.9	CLUTCH ASSEMBLY WET PTO	1
2	D10580890.9	HUB WET PTO CLUTCH INPUT	1
3	D10580900.9	SHAFT WET PTO CLUTCH OUTPUT	1
4	D93601240.9	SEAL OIL PTFE 16.35X20.25X1.85	2
5	D93601250.9	SEAL OIL PTFE 24.35X28.25X1.85	2
6	D10580910.9	BEARING BALL 6202 C3	1
7	D10541460.9	BEARING BALL 6304	1
8	D90500390.9	CIRCLIP B52X2.0 N	1
9	D10580920.9	RETAINER WET PTO CLUTCH	1
10	D93100060.9	PLUG 1/"8-27 SOCKET HEX HEAD (STEEL)	1
11	D10008050.9	PLUG 8.0MM HYDRAULIC DISTRIBUTOR	1
12	D85500900.9	WASHER 26X8X5 THRUST	1
13	D82500730.9	SCREW M8X1.25X18 ALLEN	1
14	D95000420.9	LOCTITE 262	AR
15	D93601280.9	SEAL O RING 1.0X6.0	1
16	D81503880.9	BOLT M10X1.50X30-10.9 HEX HEAD (16 A/F)	3
17	D81503420.9	BOLT M10X1.50X70-10.9 HEX HEAD	1
18	D10602280.9	BEARING BALL 6007	1
19	D90500410.9	CIRCLIP B62X2.0 N (IS 3075 PART-II)	1
20	D90000020.9	CIRCLIP A35X1.5 N	1

TABLE-39
HOUSING REAR AXLE CENTRE SUBASSEMBLY (HST)

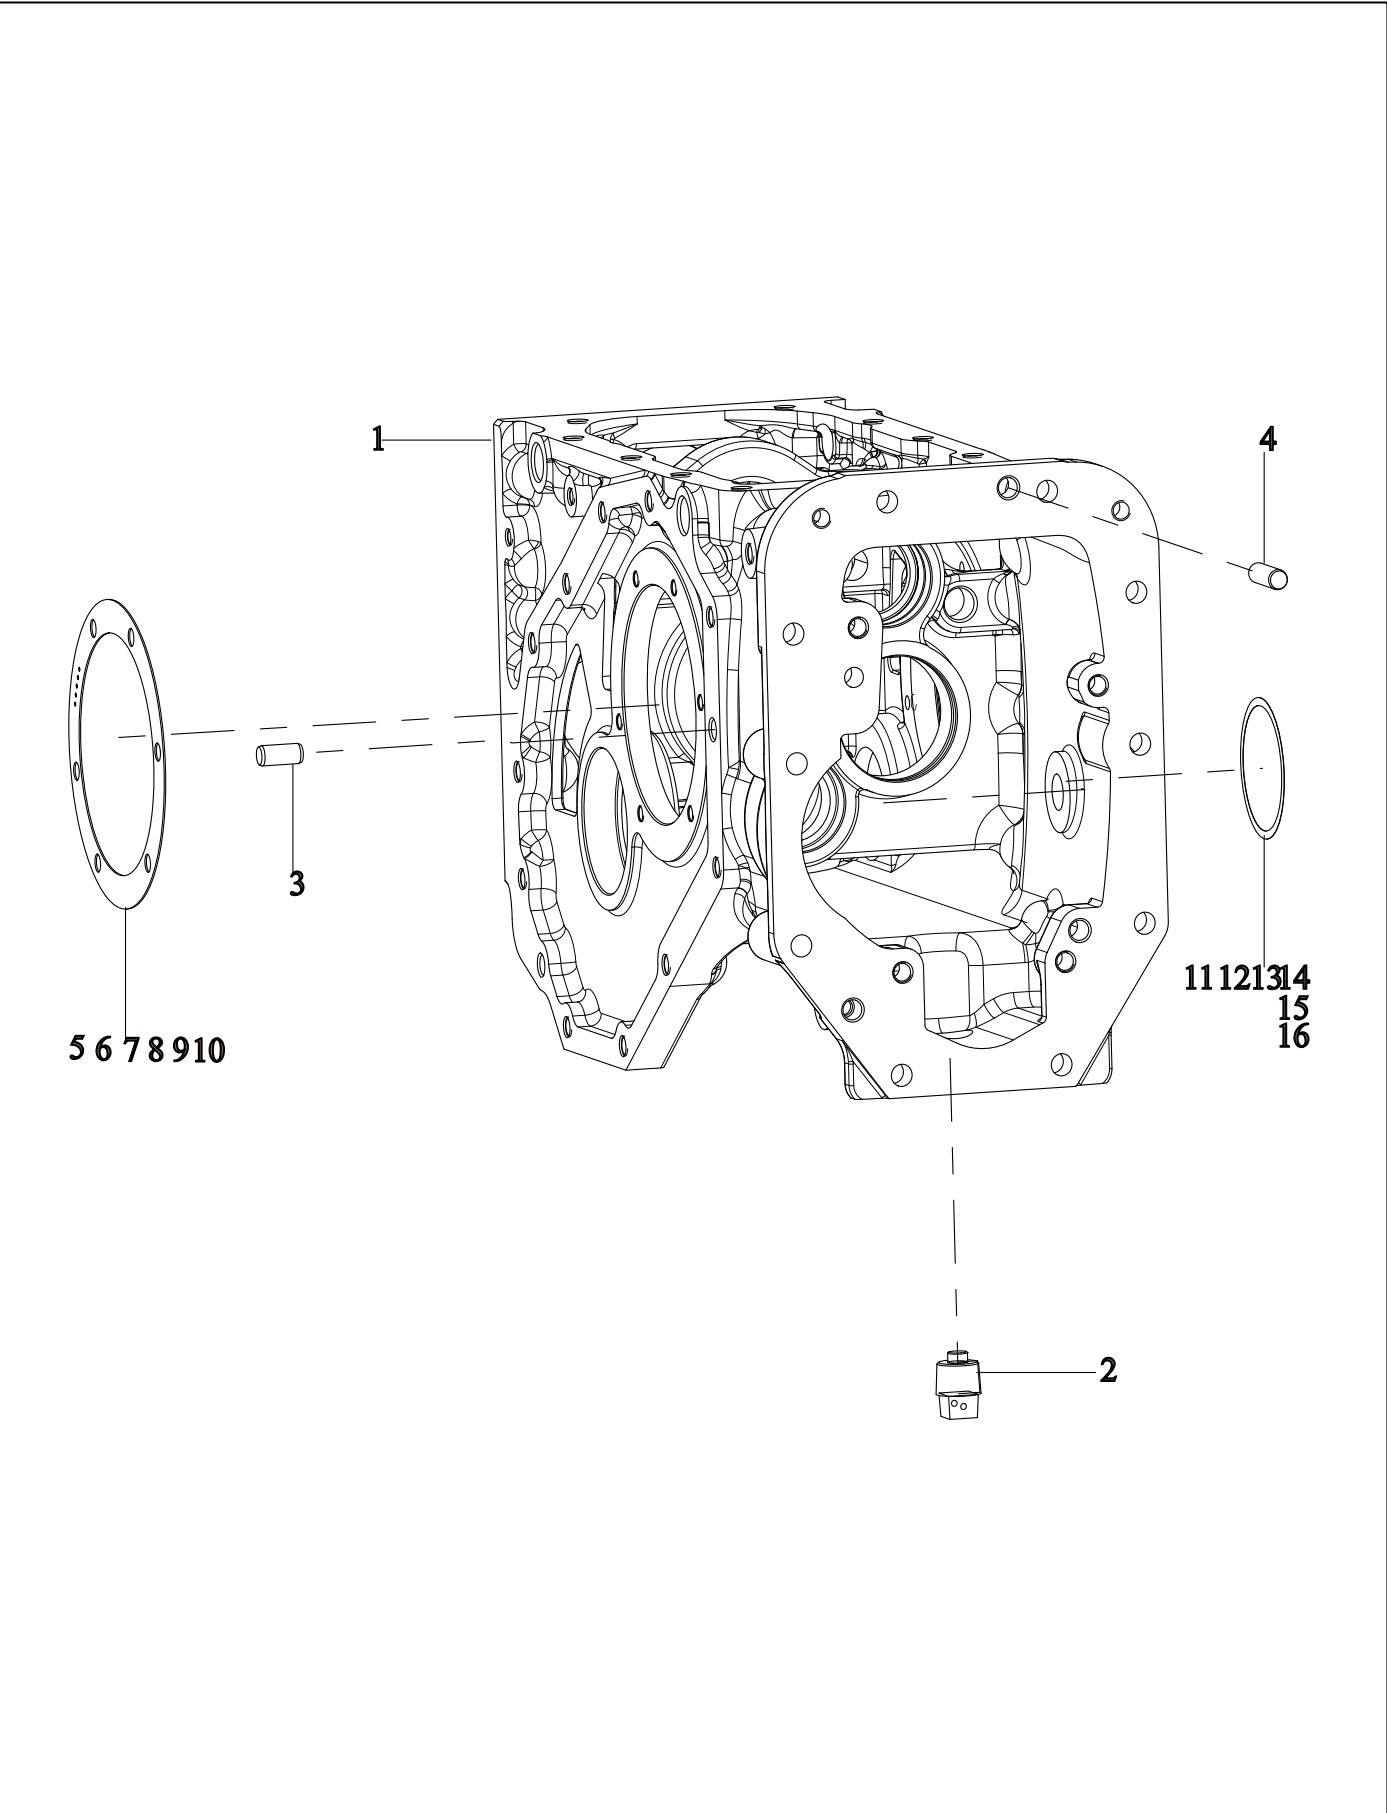


TABLE-39
HOUSING REAR AXLE CENTRE SUBASSEMBLY (HST)

Fig. No.	Part No.	Description	Qty
1	D10594190.9	HOUSING REAR COMPACT MID PTO	1
2	D10213110.9	PLUG DRAIN 3/4-14 NPTF (MAGNETIC)	1
3	D87500030.9	PIN 10X22 PLAIN DOWEL	9
4	D93400460.9	PIN 10X35 PLAIN DOWEL	2
5	D10541130.9	SHIM RETAINER DIFFERENTIAL (0.075 MM)	2
6	D10541140.9	SHIM RETAINER DIFFERENTIAL (0.125 MM)	2
7	D10541150.9	SHIM RETAINER DIFFERENTIAL (0.2285 MM)	2
8	D10541160.9	SHIM RETAINER DIFFERENTIAL (0.4065 MM)	2
9	D10541170.9	SHIM RETAINER DIFFERENTIAL (0.5335 MM)	2
10	D10541180.9	SHIM RETAINER DIFFERENTIAL (0.7875 MM)	2
11	D10537800.9	SHIM REAR AXLE SHAFT (0.075 MM)	2
12	D10537810.9	SHIM REAR AXLE SHAFT (0.125 MM)	2
13	D10537820.9	SHIM REAR AXLE SHAFT (0.2285 MM)	2
14	D10537830.9	SHIM REAR AXLE SHAFT (0.4065 MM)	2
15	D10537840.9	SHIM REAR AXLE SHAFT (0.5335 MM)	2
16	D10537850.9	SHIM REAR AXLE SHAFT (0.7875 MM)	2

TABLE-40
GEAR AND DIFFERENTIAL REAR AXLE SUBASSEMBLY

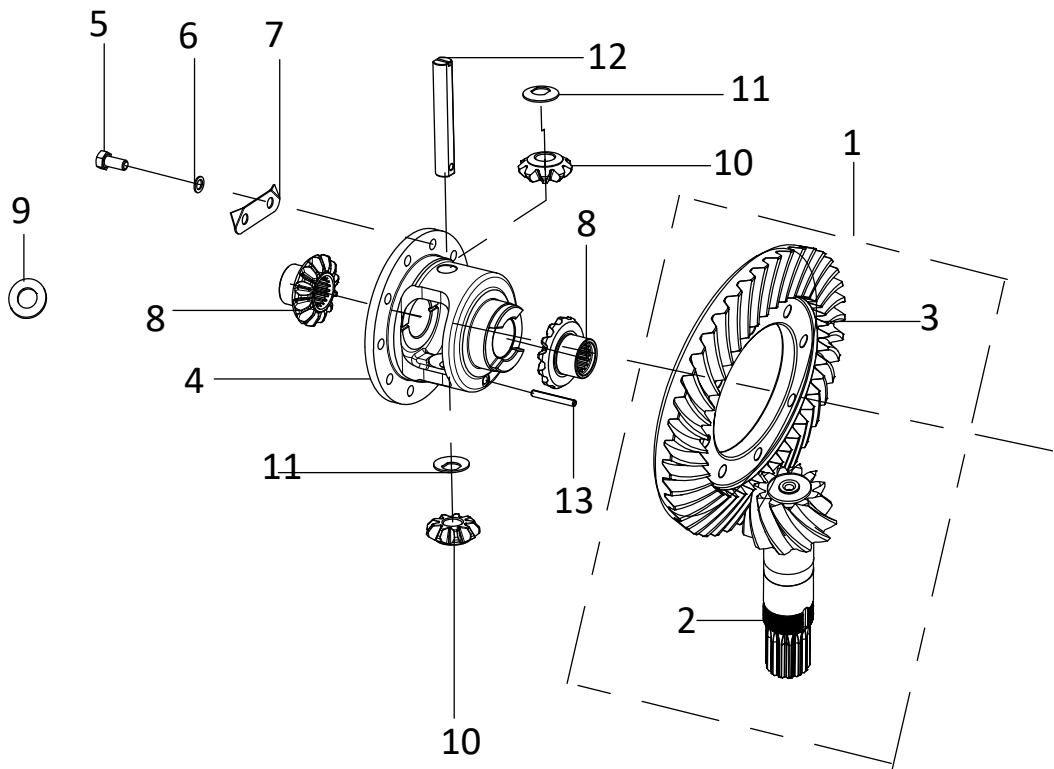


TABLE-40
GEAR AND DIFFERENTIAL REAR AXLE SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10541050.9	GEAR SET BEVEL PINION AND CROWN WHEEL REAR AXLE Z-41/11	1
2	D10541060.9	SHAFT BEVEL PINION REAR AXLE DIFFERENTIAL Z-11	1
3	D10541070.9	GEAR DRIVEN REAR AXLE DIFFERENTIAL Z-41	1
4	D10537130.9	CASING DIFFERENTIAL REAR AXLE	1
5	D82501060.9	SCREW M8X1.25X18-10.9 HEX HEAD	10
6	D85500440.9	WASHER 8.1X13X1.0 FLAT	10
7	D10536870.9	WASHER LOCK DIFFERENTIAL CROWN WHEEL GEAR	5
8	D10520880.9	BEVEL SIDE GEAR DIFFERENTIAL Z-13	2
9	D10536860.9	WASHER REAR AXLE DIFFERENTIAL THRUST	2
10	D10520890.9	PINION GEAR DIFFERENTIAL Z-9	2
11	D10536850.9	WASHER REAR AXLE DIFFERENTIAL PINION	2
12	D10536840.9	SPIDER REAR AXLE DIFFERENTIAL	1
13	D87500540.9	PIN 5X40 SPRING DOWEL	1

TABLE-41
DIFFERENTIAL LOCK SUBASSEMBLY

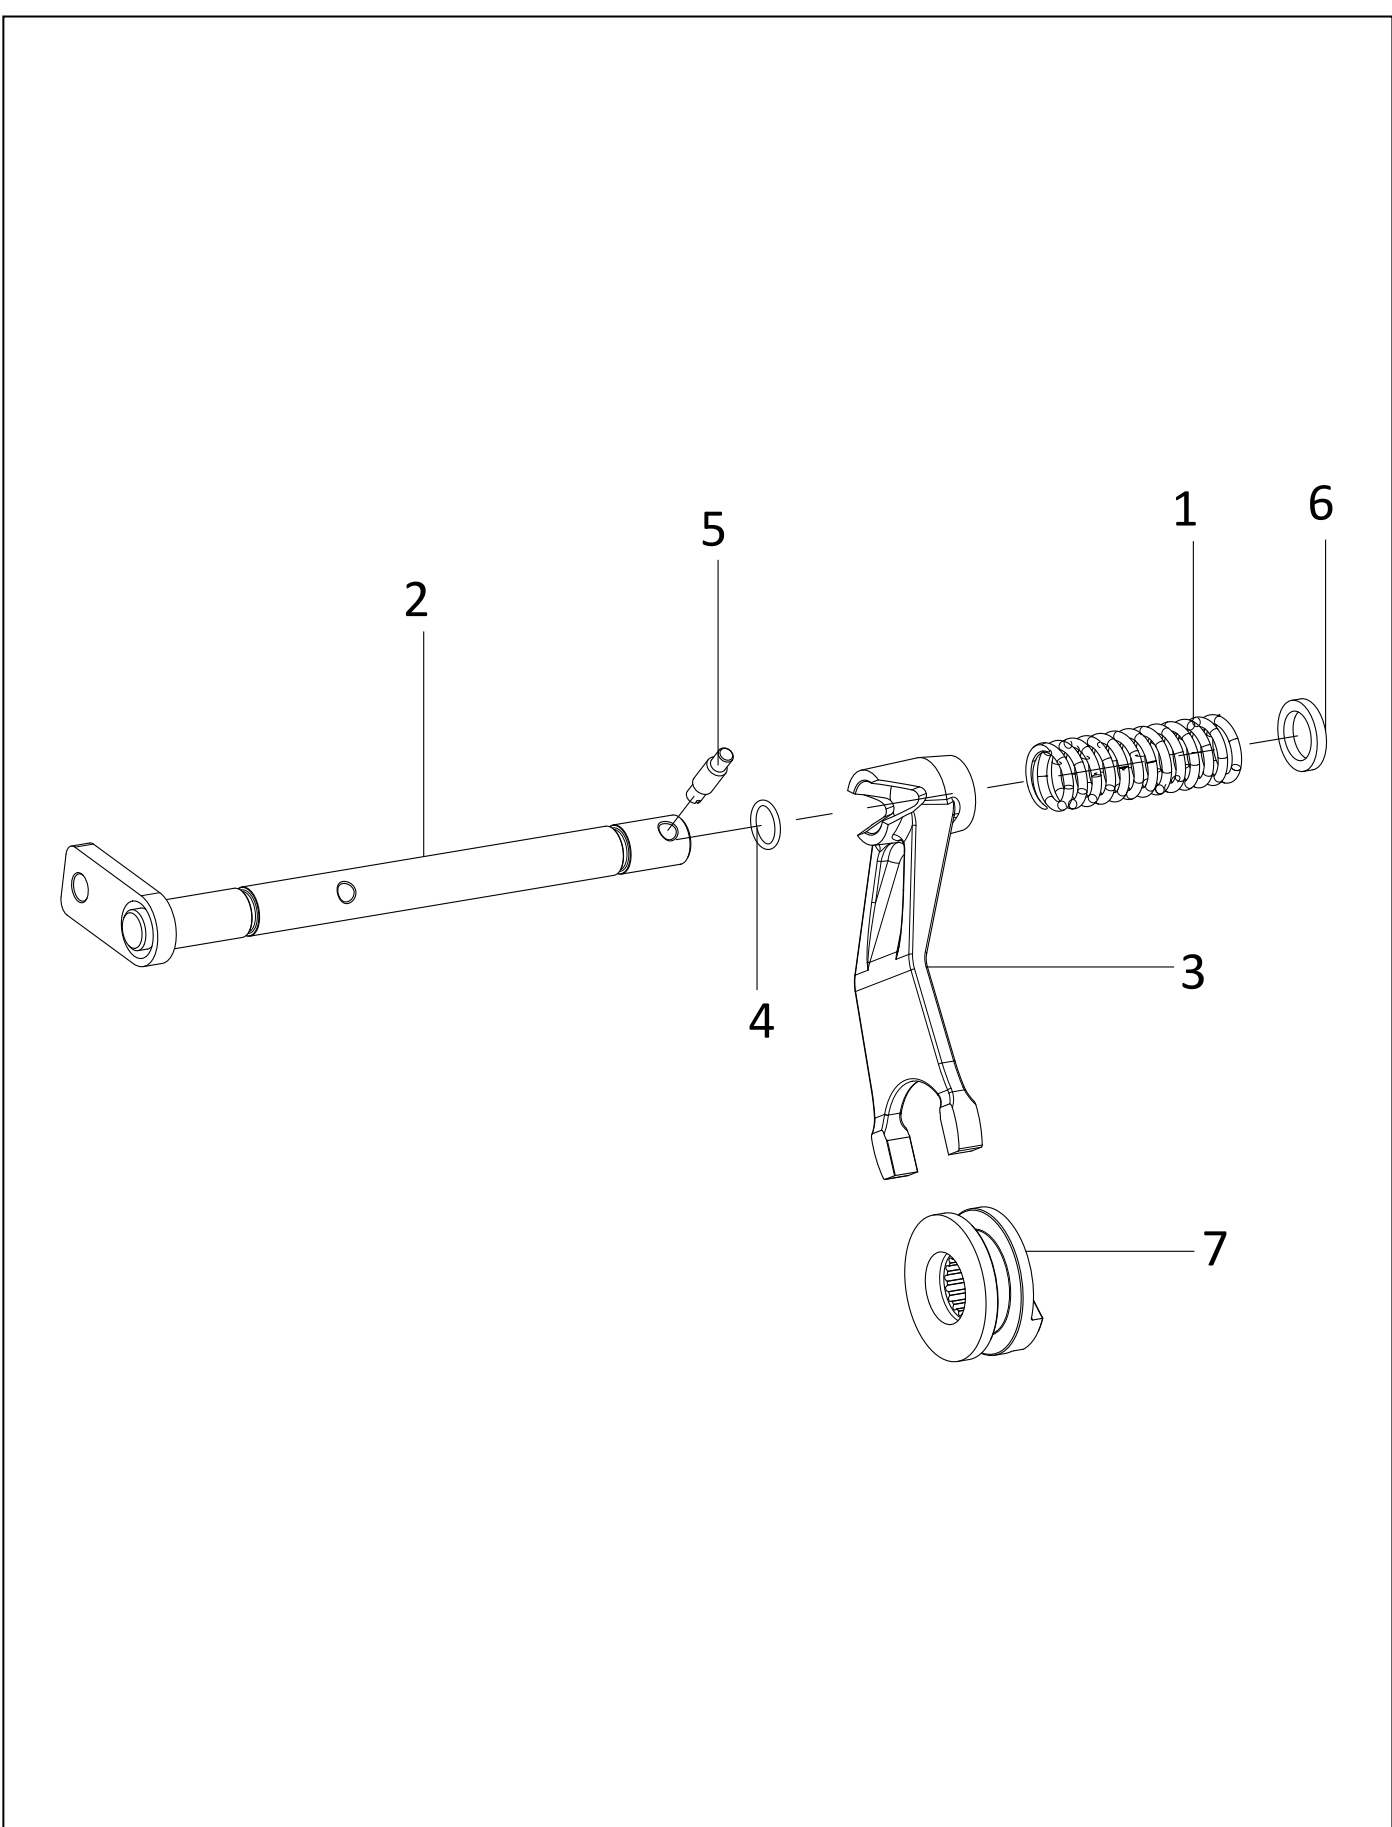


TABLE-41
DIFFERENTIAL LOCK SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10541080.9	SPRING REAR AXLE DIFFERENTIAL LOCK	1
2	D10541100.9	SHAFT AND LEVER ASSEMBLY REAR AXLE DIFFERENTIAL LOCK	1
3	D10541110.9	FORK DIFFERENTIAL LOCK	1
4	D10007720.9	SEAL O RING 2.00X14.00	2
5	D10546180.9	PIN REAR AXLE DIFFERENTIAL LOCK SHAFT	2
6	D10550590.9	SPACER 18X26X4.0 FLAT	1
7	D10541090.9	SLEEVE REAR AXLE DIFFERENTIAL LOCK	1

TABLE-42
RETAINER BEARING DIFFERENTIAL SUBASSEMBLY LH

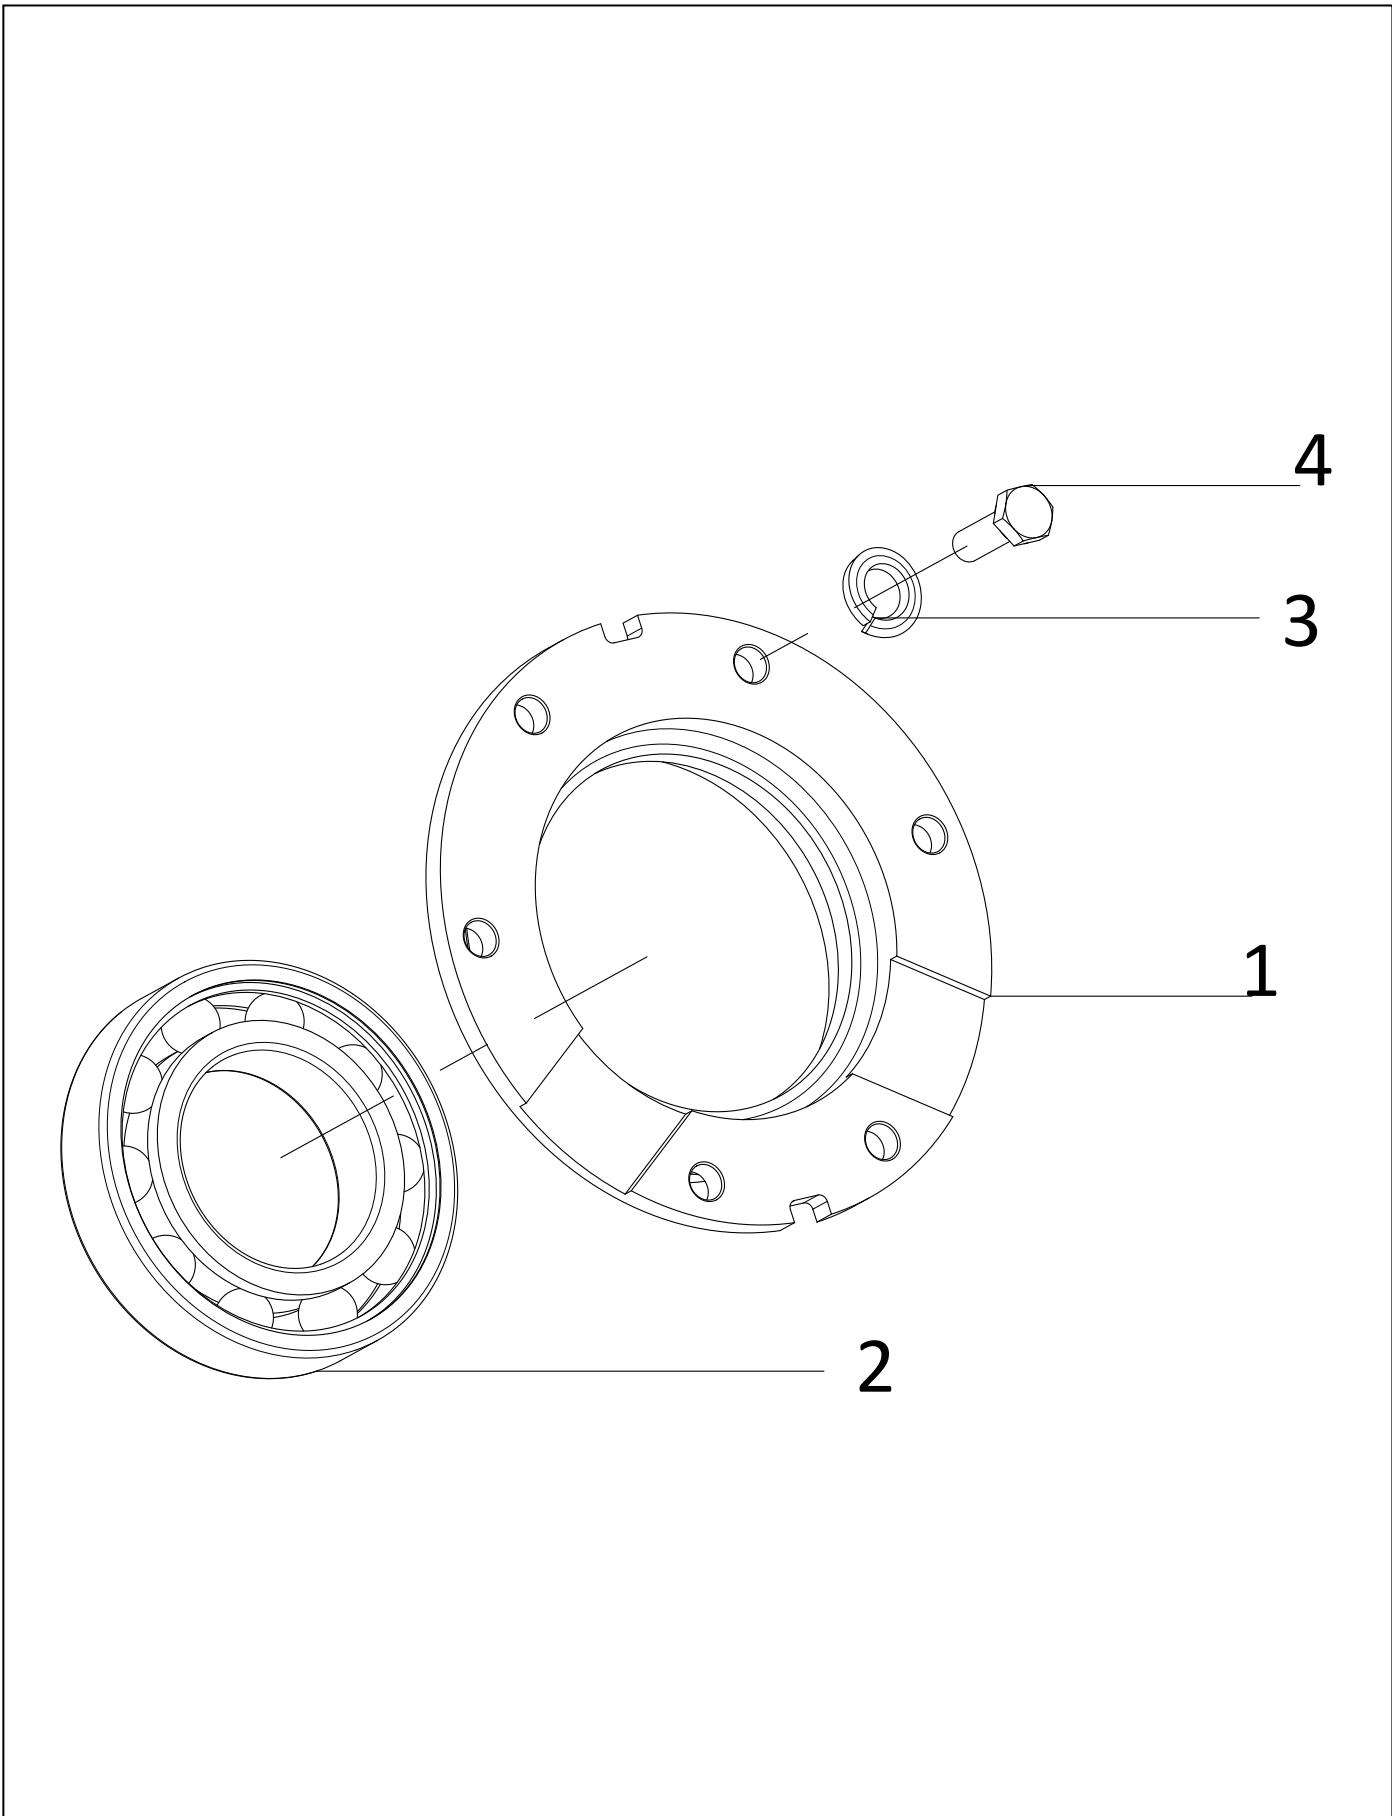


TABLE-43
RETAINER BEARING DIFFERENTIAL SUBASSEMBLY RH

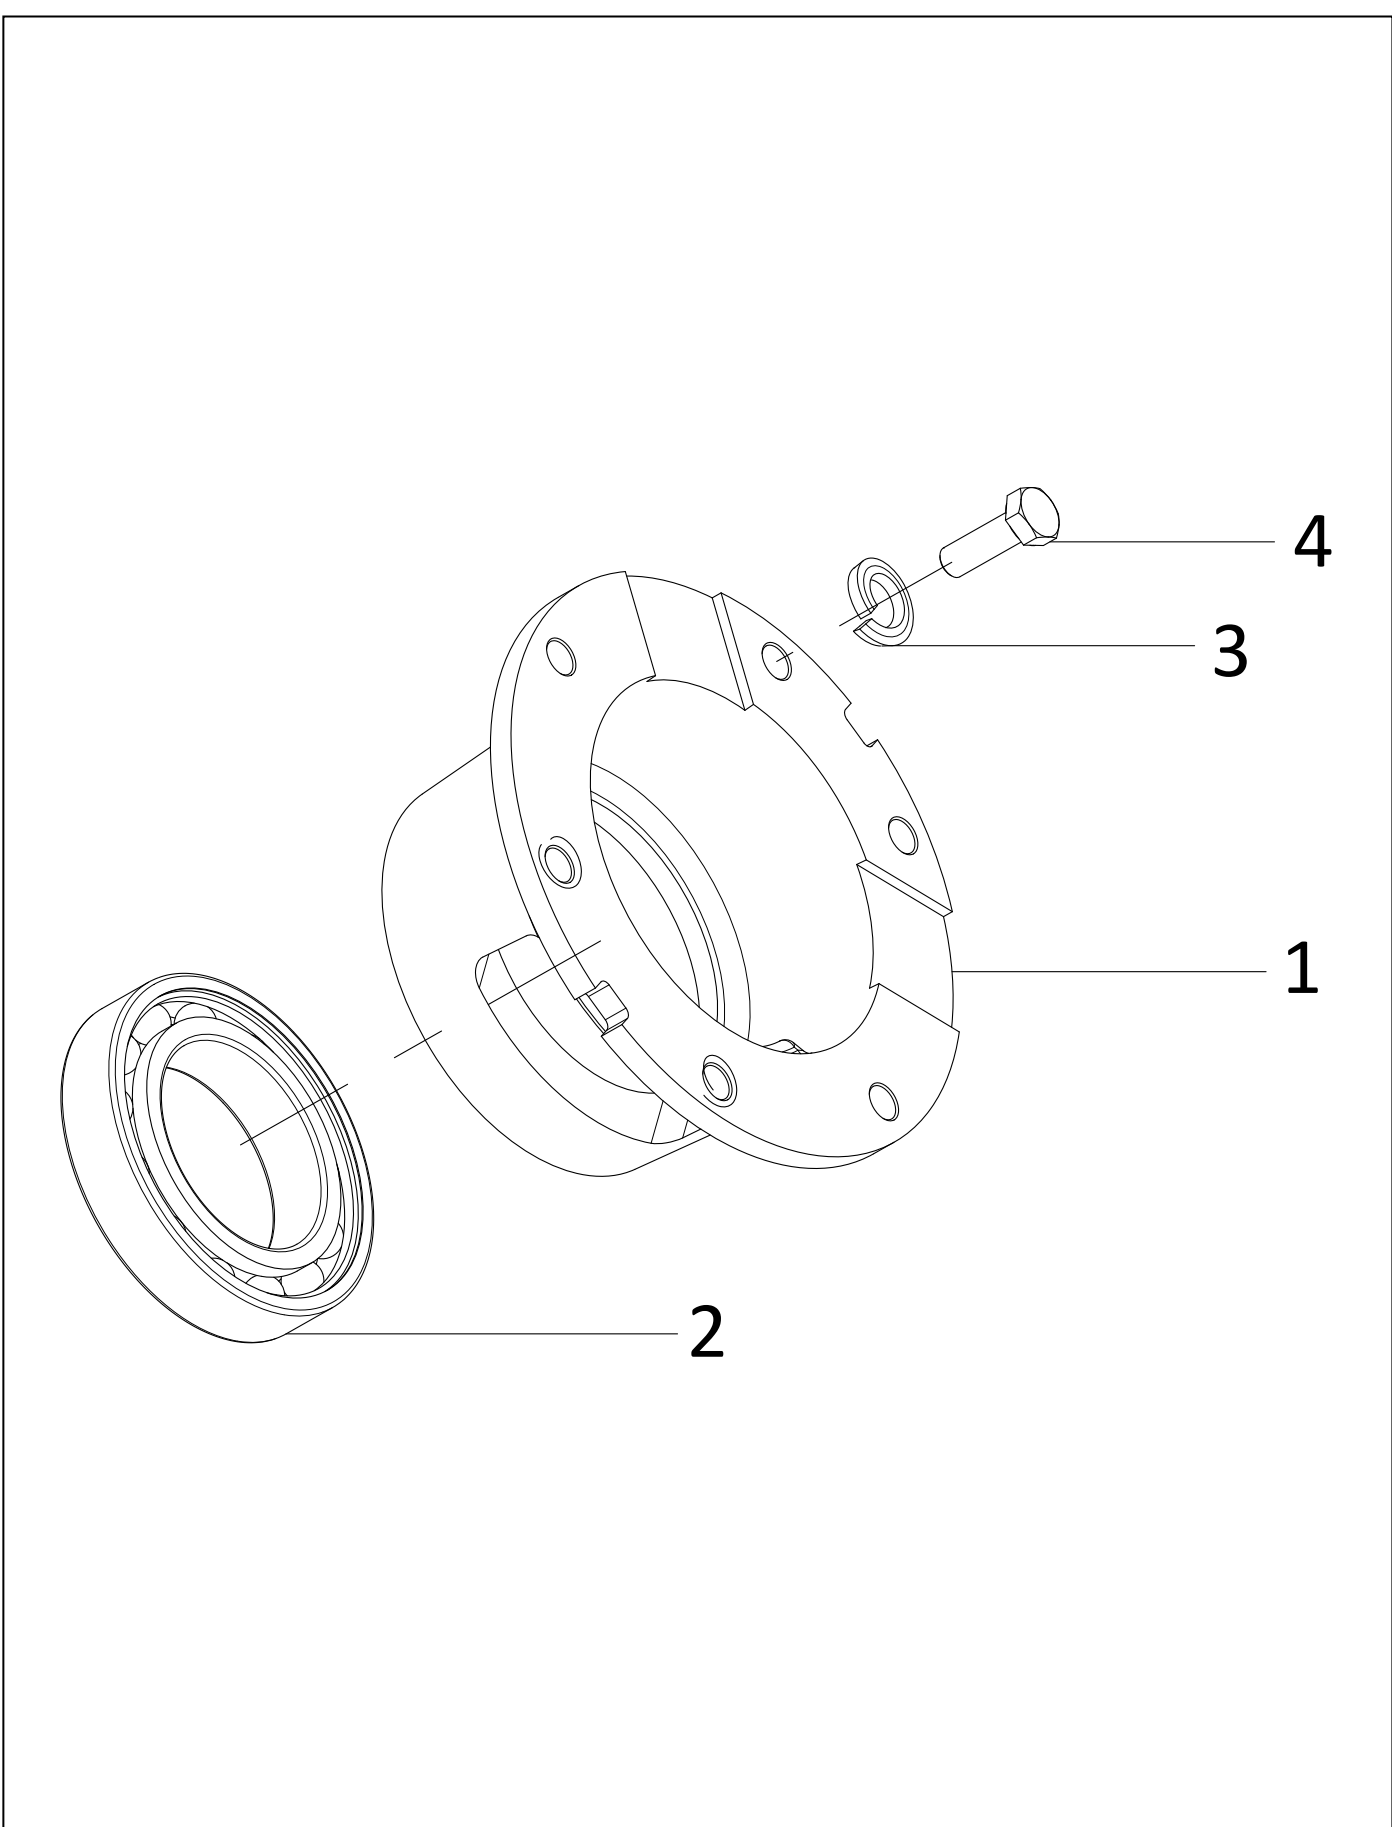


TABLE-43
RETAINER BEARING DIFFERENTIAL SUBASSEMBLY RH

TABLE-44
HOUSING REAR AXLE RH SUBASSEMBLY

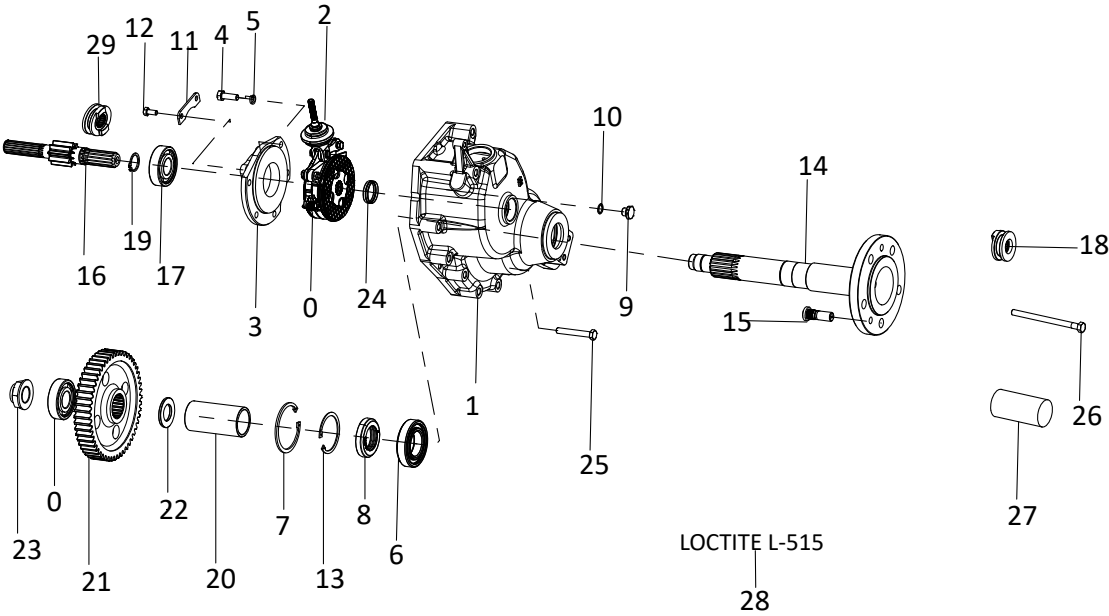


TABLE-44
HOUSING REAR AXLE RH SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10777560.9	HOUSING REAR AXLE RH	1
1-1	D10777560BA.9	HOUSING REAR AXLE RH	1
2	D10507990.9	BRAKE ASSEMBLY REAR WHEEL 4.5" (WET TYPE)	1
2-1	D10507990AD.9	BRAKE ASSEMBLY REAR WHEEL	1
3	D10537790.9	HOUSING BRAKE INNER RH	1
4	D81503880.9	BOLT M10X1.50X30-10.9 HEX HEAD (16 A/F)	5
5	D86500090.9	WASHER M10 SPRING LOCK	5
6	D10618950.9	BEARING BALL 6209 CN	1
7	D90500060.9	CIRCLIP B85X2.5 N	1
8	D93601420.9	SEAL OIL 45X70X14.0	1
9	D10006570.9	PLUG DRAIN M14X1.5X10	2
10	D10015190.9	WASHER 14.2X18 FLAT COPPER	2
11	D10580870.9	WASHER LOCK BULL PINION SHAFT BEARING	1
12	D82501060.9	SCREW M8X1.25X18-10.9 HEX HEAD	2
13	D90500470.9	CIRCLIP B70X1.5 N	1
14	D10527500.9	SHAFT AXLE REAR	1
15	D10579620.9	BOLT M16X1.5X48-10.9 REAR WHEEL	5
16	D10536470.9	SHAFT BULL PINION RH (Z-9)	1
17	D10533260.9	BEARING BALL 6306	1
18	D10541090.9	SLEEVE REAR AXLE DIFFERENTIAL LOCK	1
19	D90000560.9	CIRCLIP A30.0X2.0 H	1
20	D10527440.9	SPACER BULL GEAR LOCKING	1
21	D10527450.9	GEAR DRIVEN FINAL DRIVE REDUCTION (Z-53)	1
22	D10527460.9	SPACER AXLE SHAFT INNER	1
23	D10536480.9	NUT CRIMPING M30X1.5	1
24	D10580860.9	PLUG AXLE HOUSING REAR	1
25	D81503420.9	BOLT M10X1.50X70-10.9 HEX HEAD	10
26	D81503890.9	BOLT M10X1.50X143-10.9 HEX HEAD (16 A/F)	1
27	D95013250.9	SEALANT LIQUID ANAEROBIC (HIGHER STRENGTH)	9
28	D95000750.9	LOCTITE L-515	AR
29	D10541090.9	SLEEVE REAR AXLE DIFFERENTIAL LOCK	1

TABLE-45
HOUSING REAR AXLE LH SUBASSEMBLY

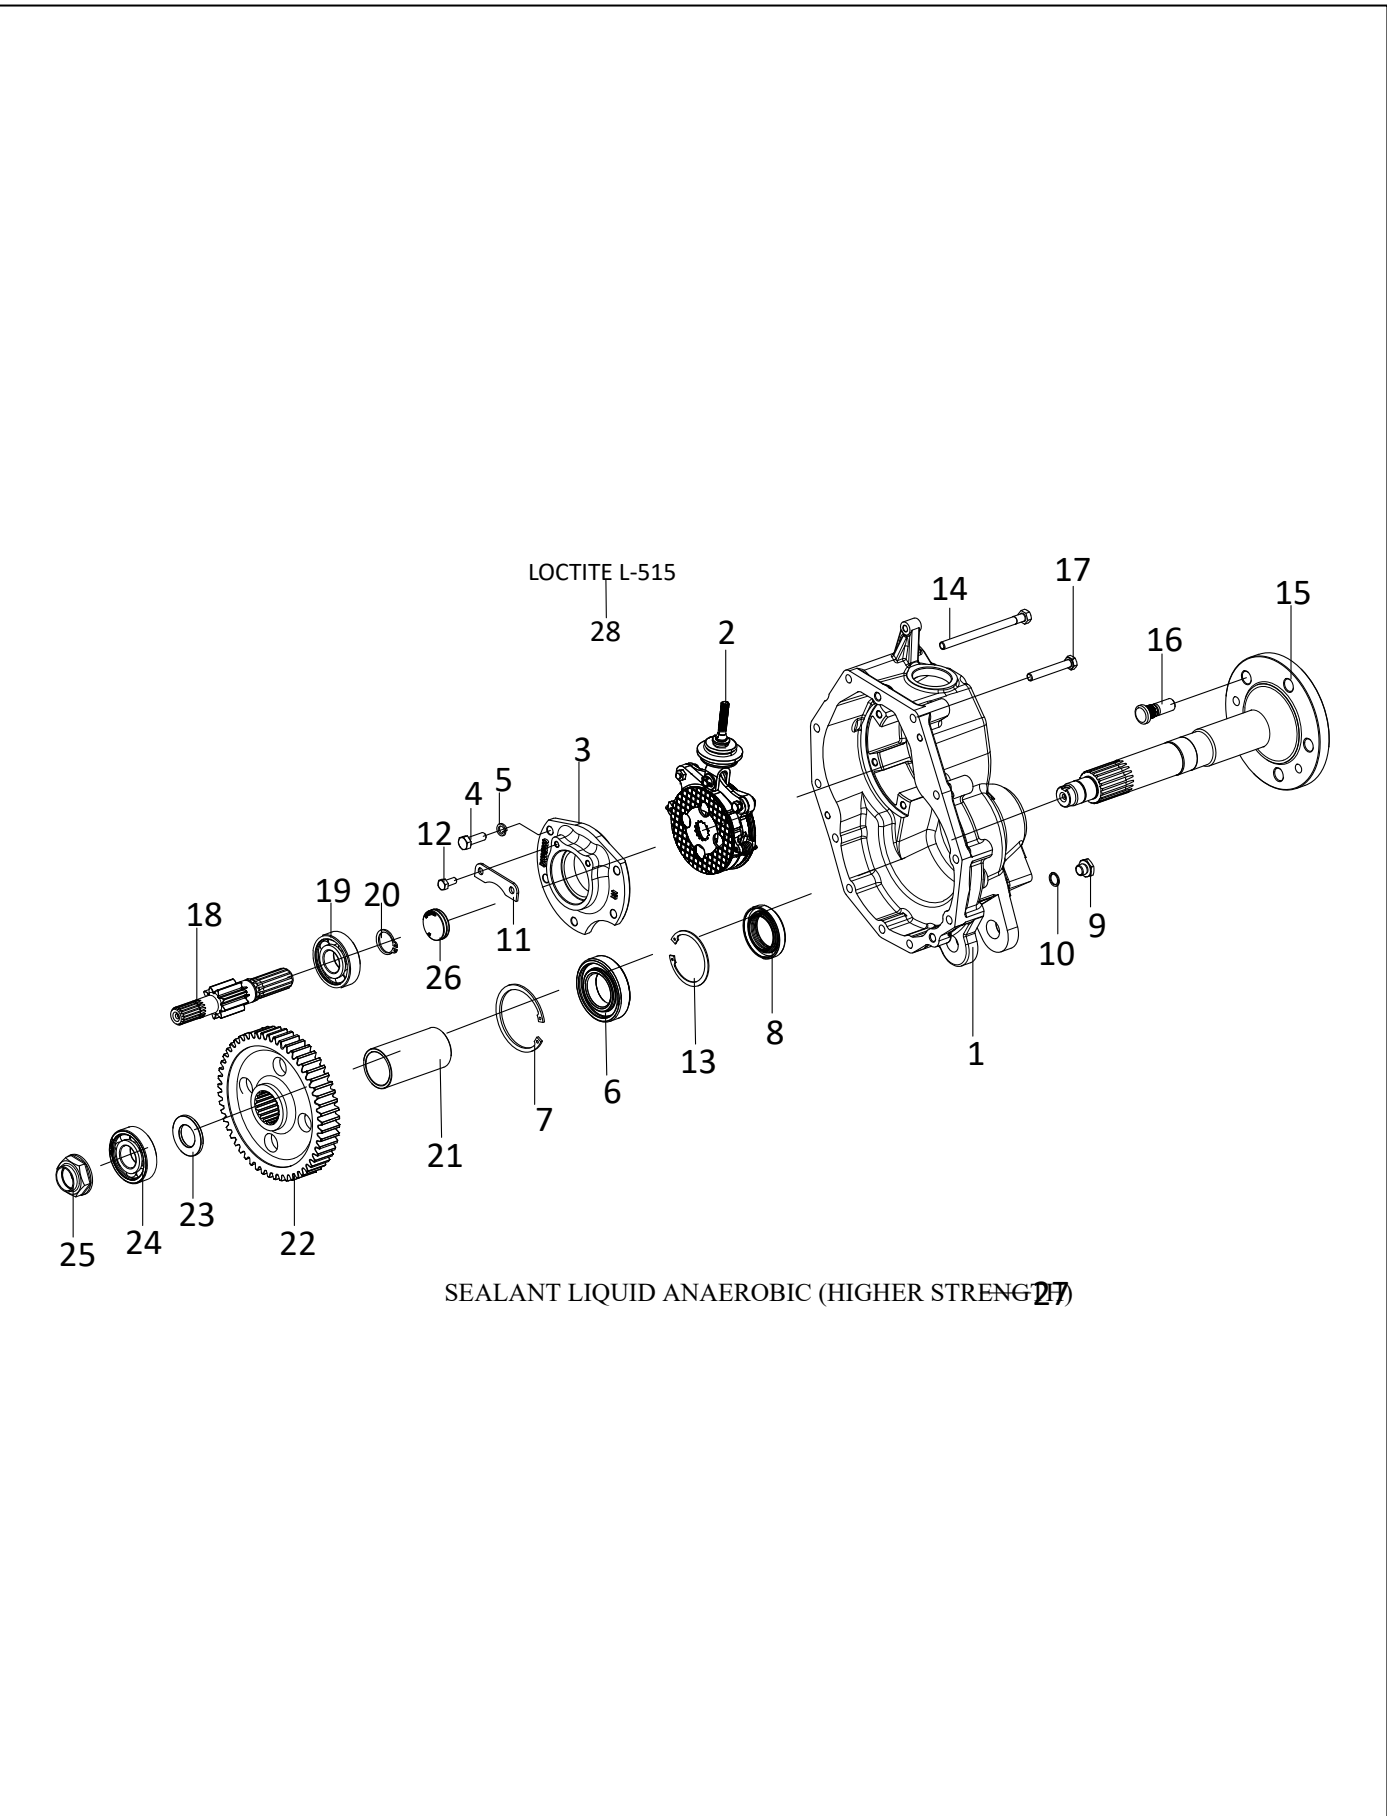


TABLE-45
HOUSING REAR AXLE LH SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10777550.9	HOUSING REAR AXLE LH	1
1-1	D10777550BA.9	HOUSING REAR AXLE LH	1
2	D10507990.9	BRAKE ASSEMBLY REAR WHEEL 4.5" (WET TYPE)	1
2-1	D10507990AD.9	BRAKE ASSEMBLY REAR WHEEL	1
3	D10543900.9	HOUSING BRAKE INNER LH	1
4	D81503880.9	BOLT M10X1.50X30-10.9 HEX HEAD (16 A/F)	5
5	D86500090.9	WASHER M10 SPRING LOCK	16
6	D10618950.9	BEARING BALL 6209 CN	1
7	D90500060.9	CIRCLIP B85X2.5 N	1
8	D93601420.9	SEAL OIL 45X70X14.0	1
9	D10006570.9	PLUG DRAIN M14X1.5X10	2
10	D10015190.9	WASHER 14.2X18 FLAT COPPER	2
11	D10580870.9	WASHER LOCK BULL PINION SHAFT BEARING	1
12	D82501060.9	SCREW M8X1.25X18-10.9 HEX HEAD	2
13	D90500470.9	CIRCLIP B70X1.5 N	1
14	D81503890.9	BOLT M10X1.50X143-10.9 HEX HEAD (16 A/F)	1
15	D10527500.9	SHAFT AXLE REAR	1
16	D10579620.9	BOLT M16X1.5X48-10.9 REAR WHEEL	5
17	D81503420.9	BOLT M10X1.50X70-10.9 HEX HEAD	10
18	D10536460.9	SHAFT BULL PINION LH (Z-9)	1
19	D10533260.9	BEARING BALL 6306	1
20	D90000560.9	CIRCLIP A30.0X2.0 H	1
21	D10527440.9	SPACER BULL GEAR LOCKING	1
22	D10527450.9	GEAR DRIVEN FINAL DRIVE REDUCTION (Z-53)	1
23	D10527460.9	SPACER AXLE SHAFT INNER	1
24	D10533260.9	BEARING BALL 6306	1
25	D10536480.9	NUT CRIMPING M30X1.5	1
26	D10580860.9	PLUG AXLE HOUSING REAR	1
27	D95013250.9	SEALANT LIQUID ANAEROBIC (HIGHER STRENGTH)	9
28	D95000750.9	LOCTITE L-515	AR

TABLE-46
PTO REAR SHIFTING ASSEMBLY (HST)

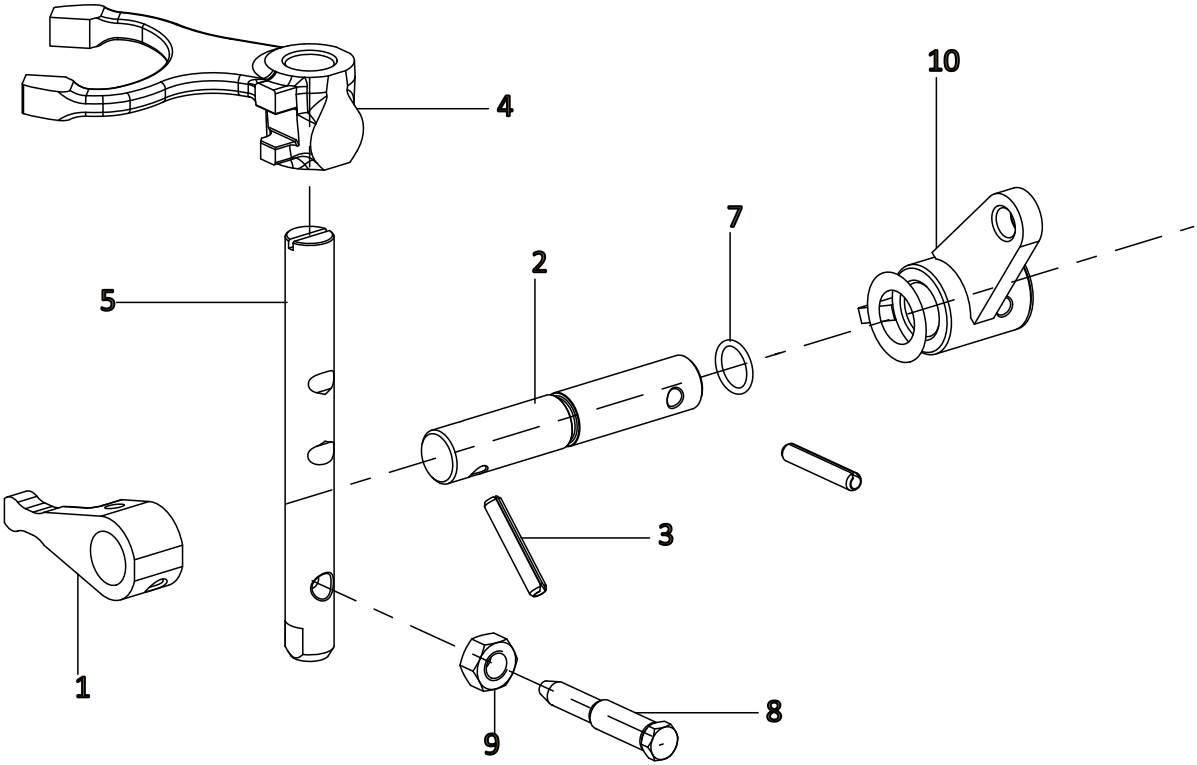


TABLE-46
PTO REAR SHIFTING ASSEMBLY (HST)

Fig. No.	Part No.	Description	Qty
1	D10599710.9	LEVER REAR PTO COMPACT	1
2	D10599700.9	SHAFT REAR PTO LEVER COMPACT	1
3	D87500510.9	PIN 6.0X35.0 SPRING DOWEL	2
4	D10578880.9	FORK REAR PTO SHIFTER	1
5	D10578910.9	RAIL MID PTO SHIFTER	1
6	D10611760.9	SPRING MID PTO LEVER	1
7	D10007720.9	SEAL O RING 2.00X14.00	1
8	D10543890.9	SCREW PTO RAIL LOCK	1
9	D83500090.9	NUT M10X1.50-8 HEX	1
10	D10556870.9	LEVER AND HUB ASSEMBLY GEAR SHIFTING TRANSMISSION (PTO)	1

TABLE-47
PTO MID SHIFTING ASSEMBLY

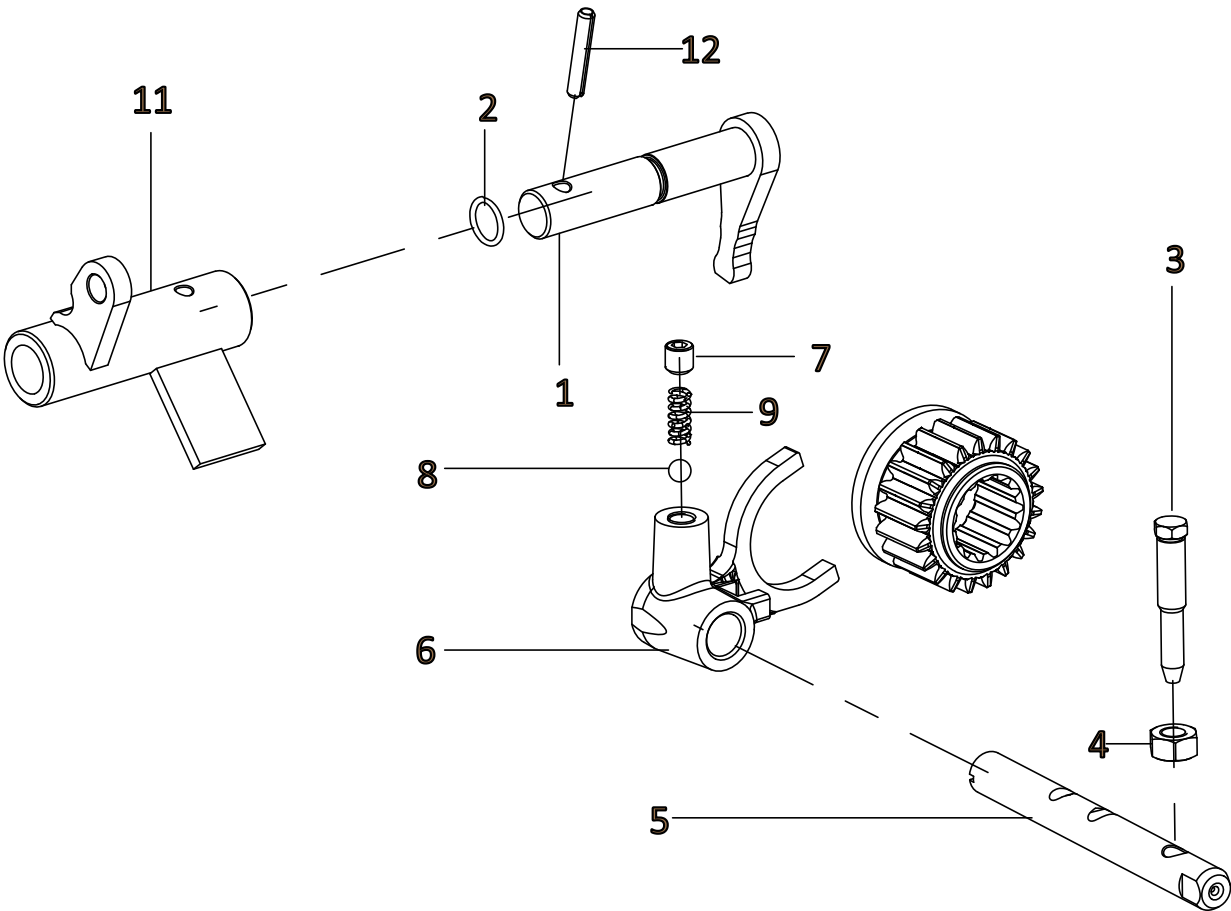


TABLE-47**PTO MID SHIFTING ASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D10541370.9	LEVER PTO SHIFTING	1
2	D10007720.9	SEAL O RING 2.00X14.00	1
3	D10543890.9	SCREW PTO RAIL LOCK	1
4	D83500090.9	NUT M10X1.50-8 HEX	1
5	D10578910.9	RAIL MID PTO SHIFTER	1
6	D10578890.9	FORK MID PTO SHIFTER	1
7	D82501100.9	SCREW GRUB M10X1.5X10 - 45H	1
8	D10006740.9	BALL 5/16" SNAP LOCK	1
9	D10543910.9	SPRING PTO SHIFTING	1
11	D10602680.9	LEVER AND HUB ASSEMBLY GEAR SHIFTING TRANSMISSION (MID PTO)	1
12	D87500510.9	PIN 6.0X35.0 SPRING DOWEL	1

TABLE-48
RETAINER PTO BEARING AND SEAL ASSEMBLY

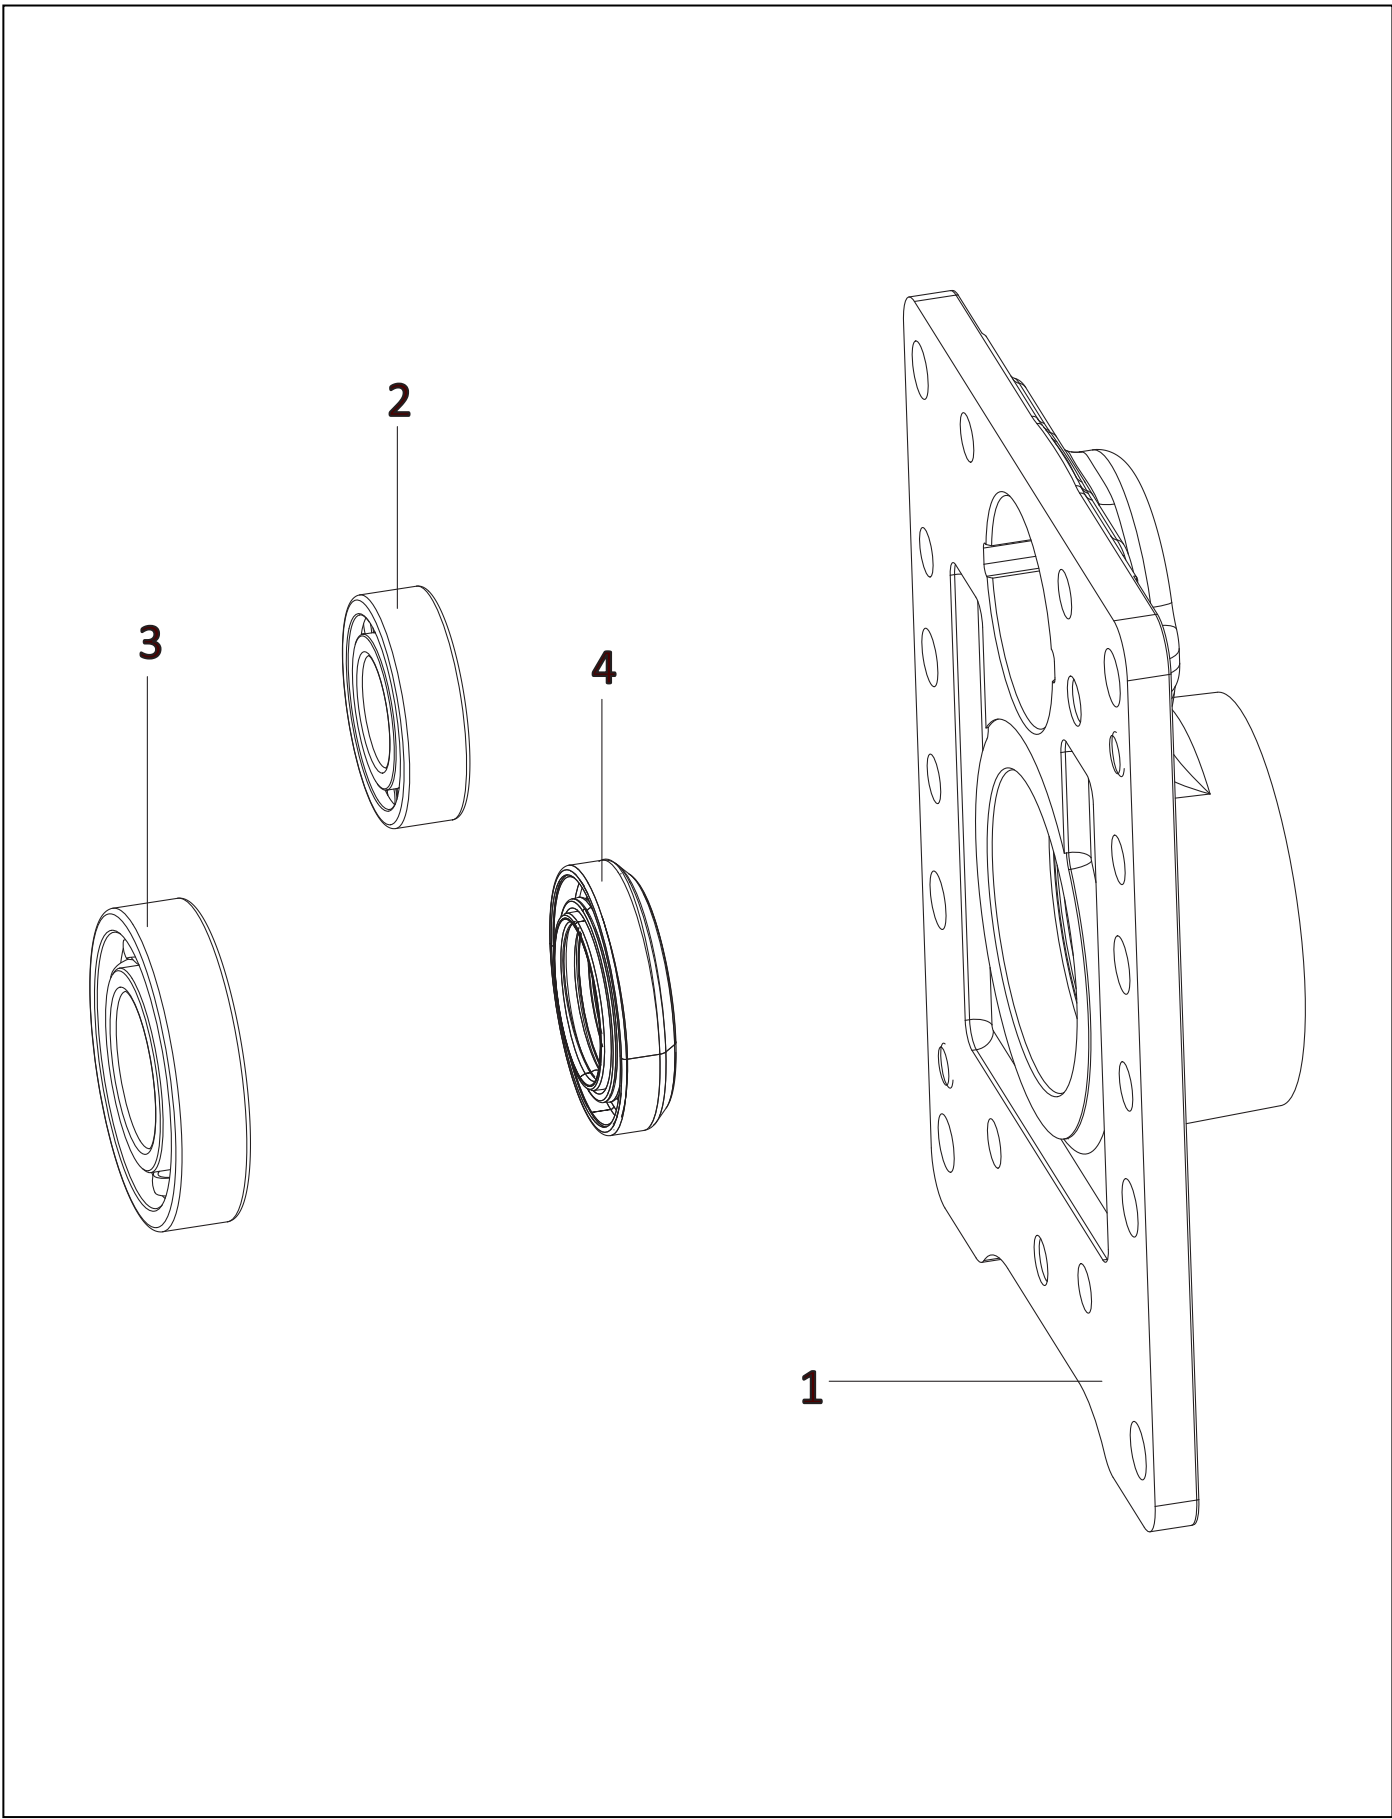


TABLE-49
GEAR AND SHAFT PTO SUBASSEMBLY (HST)

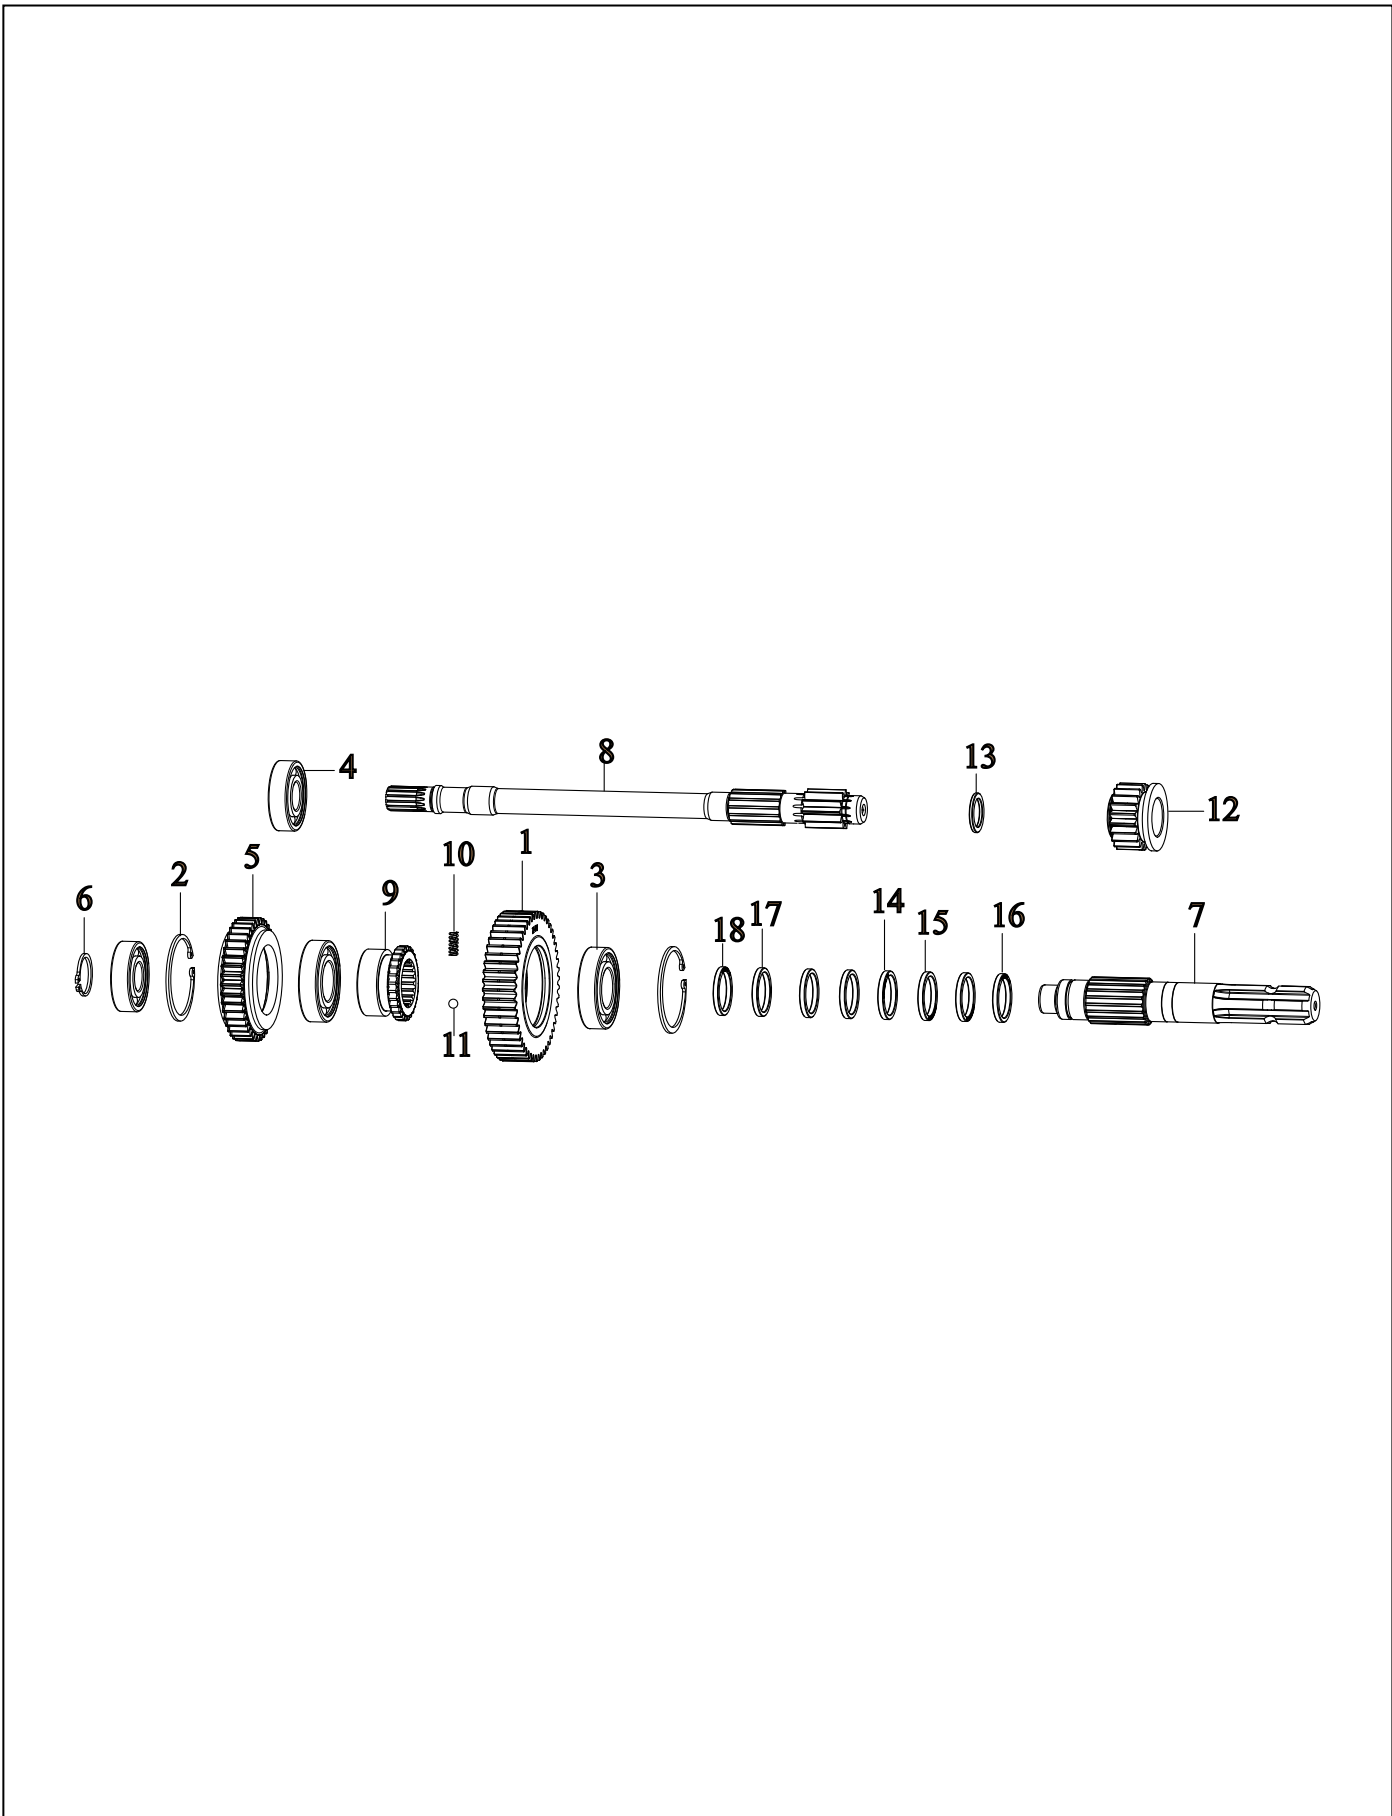


TABLE-49
GEAR AND SHAFT PTO SUBASSEMBLY (HST)

Fig. No.	Part No.	Description	Qty
1	D10538850.9	GEAR PTO DRIVEN (Z-51)	1
2	D90000240.9	CIRCLIP B72X2.5 N	2
3	D10001040.9	BEARING BALL PTO COUNTERSHAFT	2
4	D10170170.9	BEARING BALL 6305	2
5	D10578860.9	GEAR MID PTO Z-41	1
6	D90000550.9	CIRCLIP A35.0X2.5 H	1
7	D10578850.9	SHAFT REAR PTO OUTPUT	1
8	D10578830.9	SHAFT INPUT PTO (Z-11)	1
9	D10578870.9	SLEEVE REAR PTO SHIFTER	1
10	D10548300AB.9	SPRING COMPRESSION GEAR (4WD)	1
11	D10006740.9	BALL 5/16" SNAP LOCK	1
12	D10578840.9	GEAR MID PTO DRIVER Z-21	1
13	D10553350.9	SPACER 35X25X3.0	1
14	D10590390.9	SPACER PTO OUTPUT SHAFT (5.1 MM)	2
15	D10590380.9	SPACER PTO OUTPUT SHAFT (5.0 MM)	2
16	D10590360.9	SPACER PTO OUTPUT SHAFT (4.8 MM)	2
17	D10590370.9	SPACER PTO OUTPUT SHAFT (4.9 MM)	2
18	D10590350.9	SPACER PTO OUTPUT SHAFT (4.7 MM)	2