

TABLE-50
PTO MID DROP BOX SUBASSEMBLY

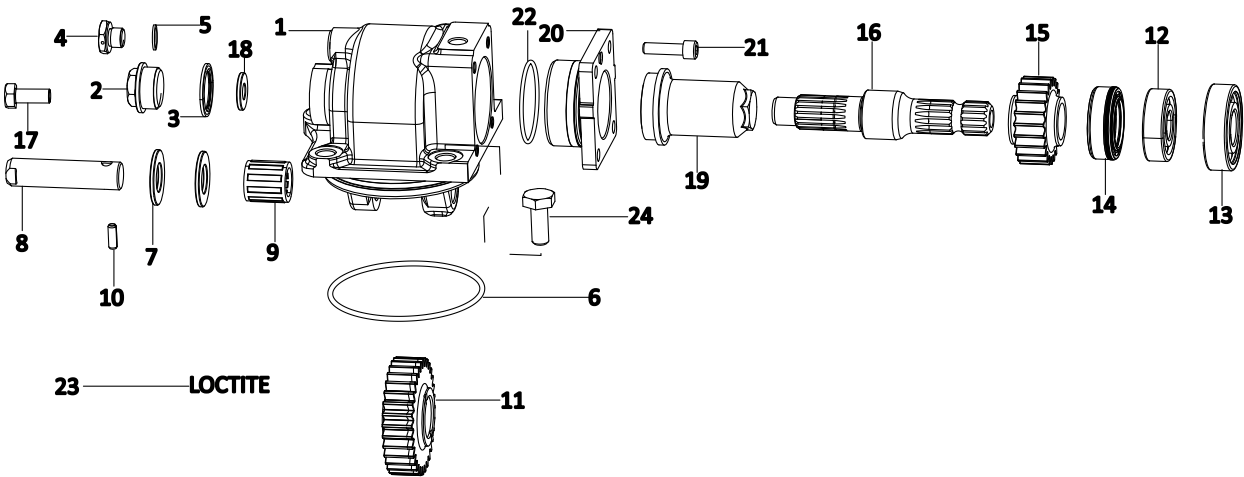


TABLE-50
PTO MID DROP BOX SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10594380.9	HOUSING DROP BOX MID PTO	1
2	D10238120.9	PLUG M30X1.5X12 WELCH	1
3	D10598860.9	WASHER SEALING M30	1
4	D10006570.9	PLUG DRAIN M14X1.5X10	1
5	D10015190.9	WASHER 14.2X18 FLAT COPPER	1
6	D93601230.9	SEAL O RING 3.53X104.37	1
7	D10579670.9	SPACER GEAR MID PTO	2
8	D10579680.9	SHAFT GEAR MID PTO	1
9	D10579660.9	CAGE NEEDLE ROLLER BEARING	1
10	D87500170.9	PIN 6.0X18.0 SPRING DOWEL	1
11	D10579650.9	GEAR TRANSMISSION MID PTO (Z-32)	1
12	D10541460.9	BEARING BALL 6304	1
13	D10170170.9	BEARING BALL 6305	1
14	D10312760.9	SEAL OIL DROP BOX OUTPUT SHAFT (COMBINATION TYPE)	1
15	D10579640.9	GEAR MID PTO DRIVEN Z-23	1
16	D10761720.9	SHAFT MID PTO OUTPUT	1
17	D81500280.9	BOLT M10X1.50X25-9.8 HEX HEAD	1
18	D10598870.9	WASHER 11X27X3.0 HST	1
19	D10779660.9	CAP MID PTO SHAFT REAR AXLE	1
20	D10779650.9	RETAINER SEAL MID PTO	1
21	D82500680.9	SCREW M8X1.25X30 ALLEN	4
22	D10547380.9	SEAL O RING 2.62X55.0	1
23	D95000420.9	LOCTITE 262	AR
24	D81501910.9	BOLT M12X1.75X30-10.9 HEX HEAD	4

TABLE-50A
GEARS AND SHAFT PTO SUBASSEMBLY (HST)

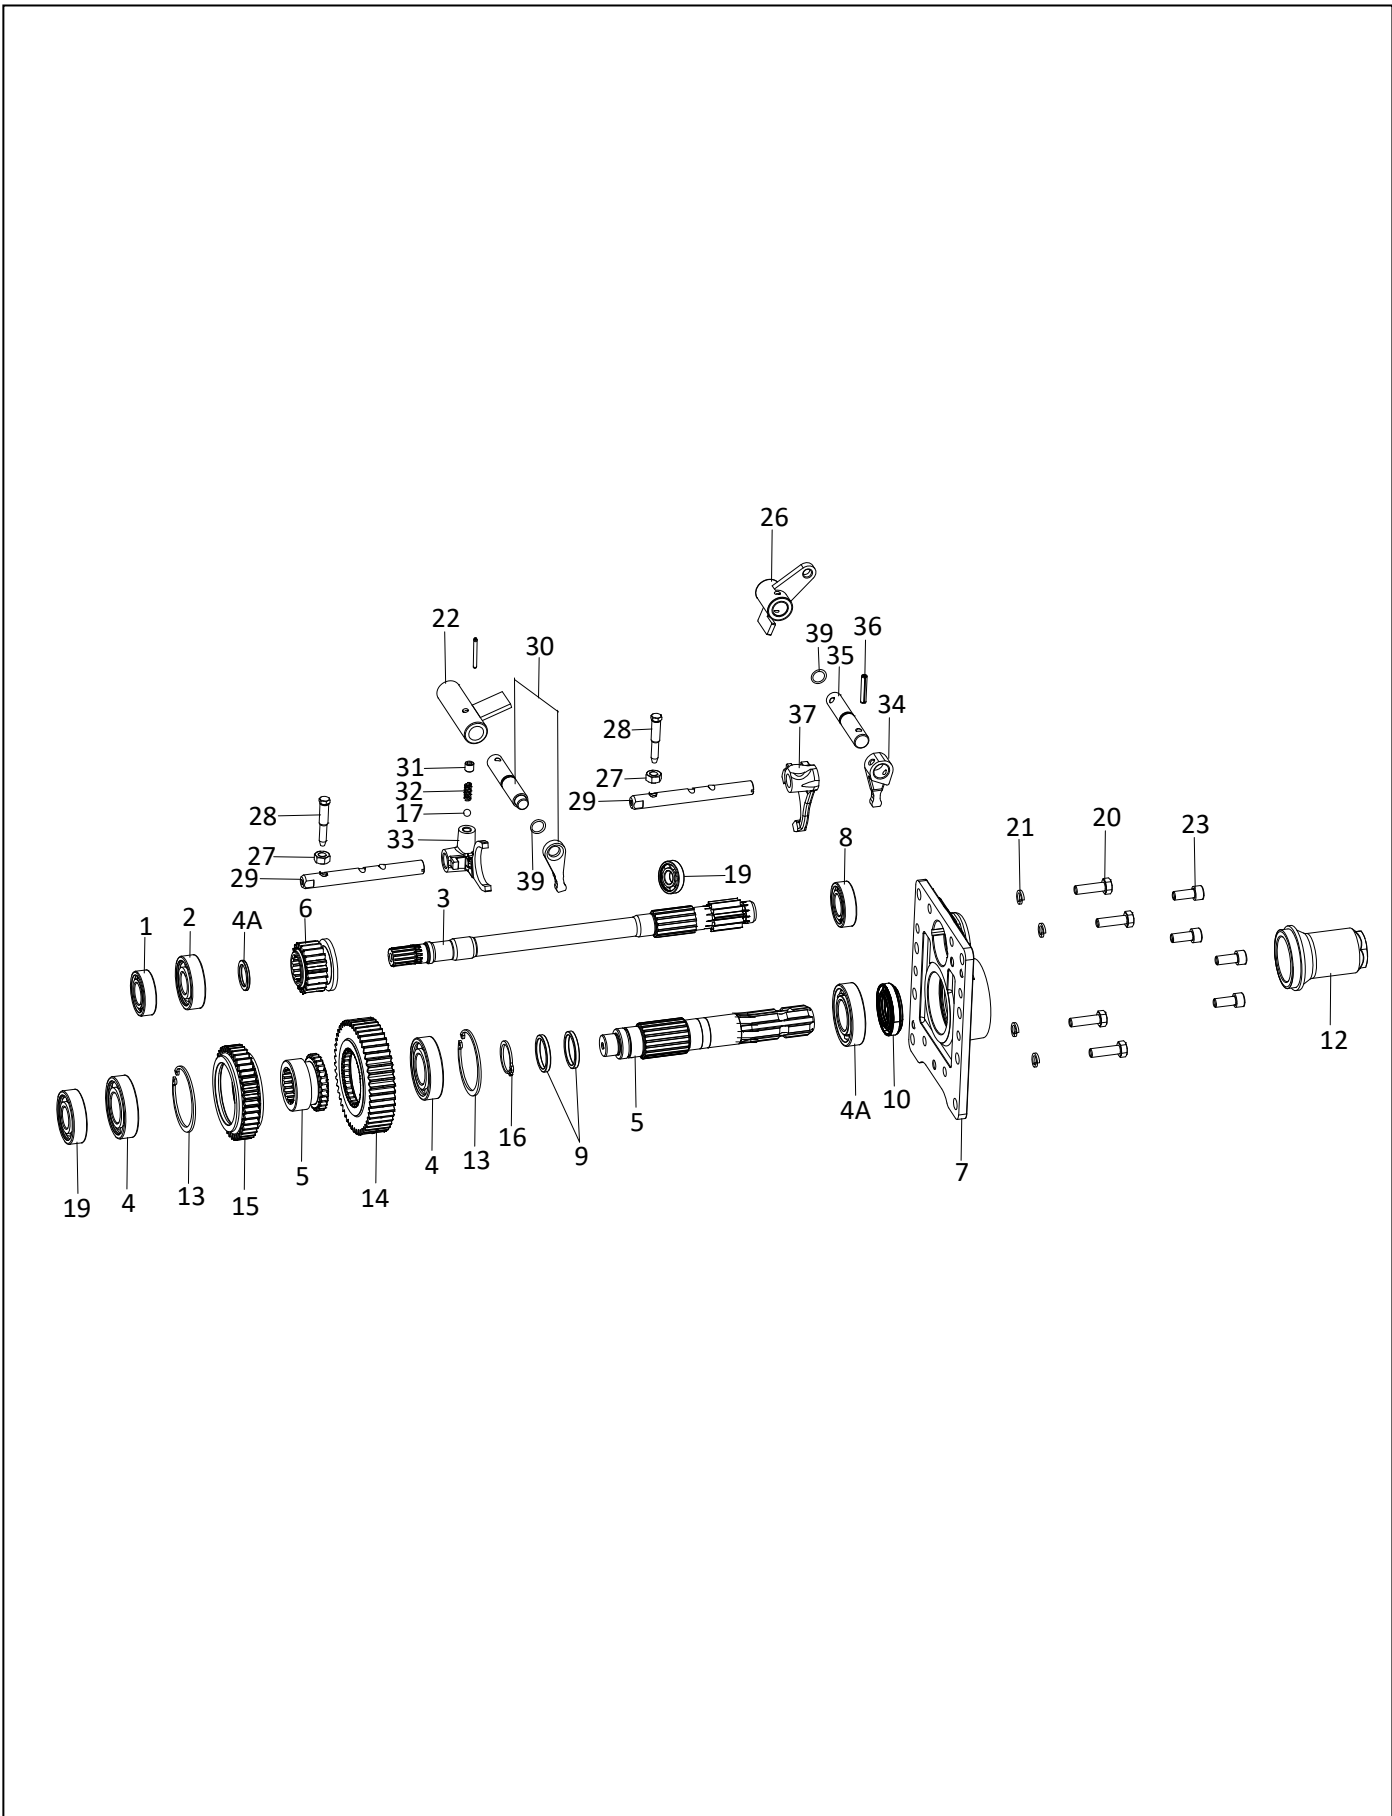


TABLE-50A**GEARS AND SHAFT PTO SUBASSEMBLY (HST)**

Fig. No.	Part No.	Description	Qty
1	D90500370.9	CIRCLIP B47X2.0 H	1
2	D10541470.9	BEARING BALL 6005	1
3	D10578830.9	SHAFT INPUT PTO (Z-11)	1
4	D10001040.9	BEARING BALL PTO COUNTERSHAFT	2
4A	D10002140.9	BEARING BALL PTO SHAFT REAR AXLE	1
5	D10578870.9	SLEEVE REAR PTO SHIFTER	1
5A	D10553350.9	SPACER 35X25X3.0	1
6	D10578840.9	GEAR MID PTO DRIVER Z-21	1
7	D10541340.9	RETAINER PTO OUTPUT SHAFT	1
8	D10541490.9	BEARING ROLLER NJ 205	1
9	D10590350.9	SPACER PTO OUTPUT SHAFT (4.7 MM)	AR
9A	D10590360.9	SPACER PTO OUTPUT SHAFT (4.8 MM)	AR
9B	D10590370.9	SPACER PTO OUTPUT SHAFT (4.9 MM)	AR
9C	D10590380.9	SPACER PTO OUTPUT SHAFT (5.0 MM)	AR
9D	D10590390.9	SPACER PTO OUTPUT SHAFT (5.1 MM)	AR
10	D10452820.9	SEAL OIL 35X60X14.5 PTO OUTPUT SHAFT	1
11	D10578850.9	SHAFT REAR PTO OUTPUT	1
12	D10549280.9	CAP PTO SHAFT REAR AXLE	1
13	D90000240.9	CIRCLIP B72X2.5 N	2
14	D10538850.9	GEAR PTO DRIVEN (Z-51)	1
15	D10578860.9	GEAR MID PTO Z-41	1
16	D90000550.9	CIRCLIP A35.0X2.5 H	1
17	D10006740.9	BALL 5/16" SNAP LOCK	2
18	D10548300.9	SPRING COMPRESSION GEAR (4WD)	1
19	D10170170.9	BEARING BALL 6305	2
20	D81503870.9	BOLT M10X1.50X35-10.9 HEX HEAD (16 A/F)	4
21	D86500090.9	WASHER M10 SPRING LOCK	4
22	D10602680.9	LEVER AND HUB ASSEMBLY GEAR SHIFTING TRANSMISSION (MID PTO)	1
23	D81503270.9	BOLT M10X25X1.5-10.9 ALLEN	4
24	D81501910.9	BOLT M12X1.75X30-10.9 HEX HEAD	4
26	D10556870.9	LEVER AND HUB ASSEMBLY GEAR SHIFTING TRANSMISSION (PTO)	1
27	D83500090.9	NUT M10X1.50-8 HEX	2
28	D10543890.9	SCREW PTO RAIL LOCK	2
29	D10578910.9	RAIL MID PTO SHIFTER	2
30	D10541370.9	LEVER PTO SHIFTING	1
31	D82501100.9	SCREW GRUB M10X1.5X10 - 45H	1
32	D10543910.9	SPRING PTO SHIFTING	1
33	D10578890.9	FORK MID PTO SHIFTER	1
34	D10599710.9	LEVER REAR PTO COMPACT	1
35	D10599700.9	SHAFT REAR PTO LEVER COMPACT	1

TABLE-50A
GEARS AND SHAFT PTO SUBASSEMBLY (HST)

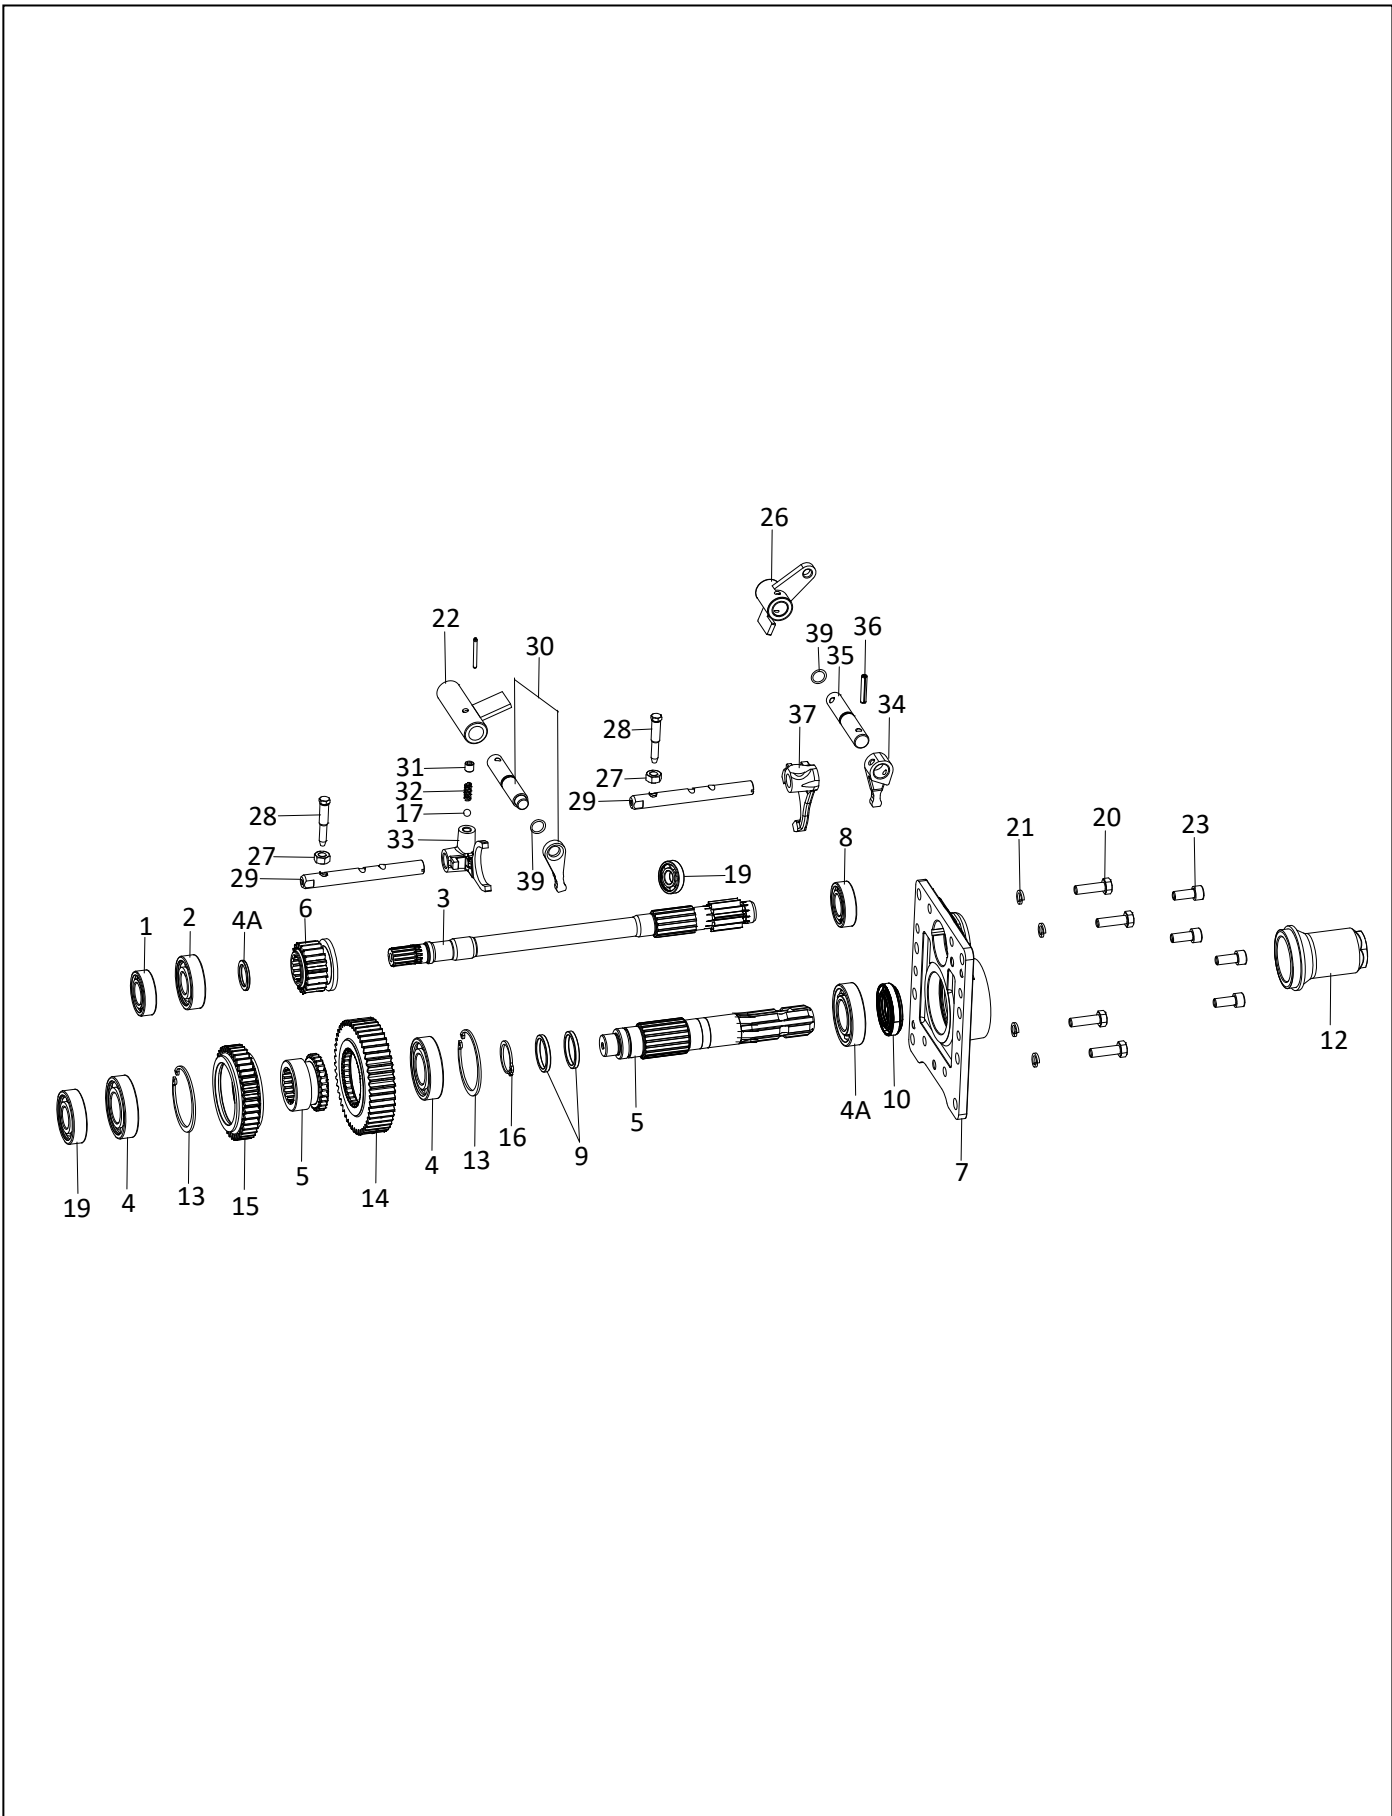


TABLE-51
PLATE INTERMEDIATE TRANSMISSION ASSEMBLY (Z-24)

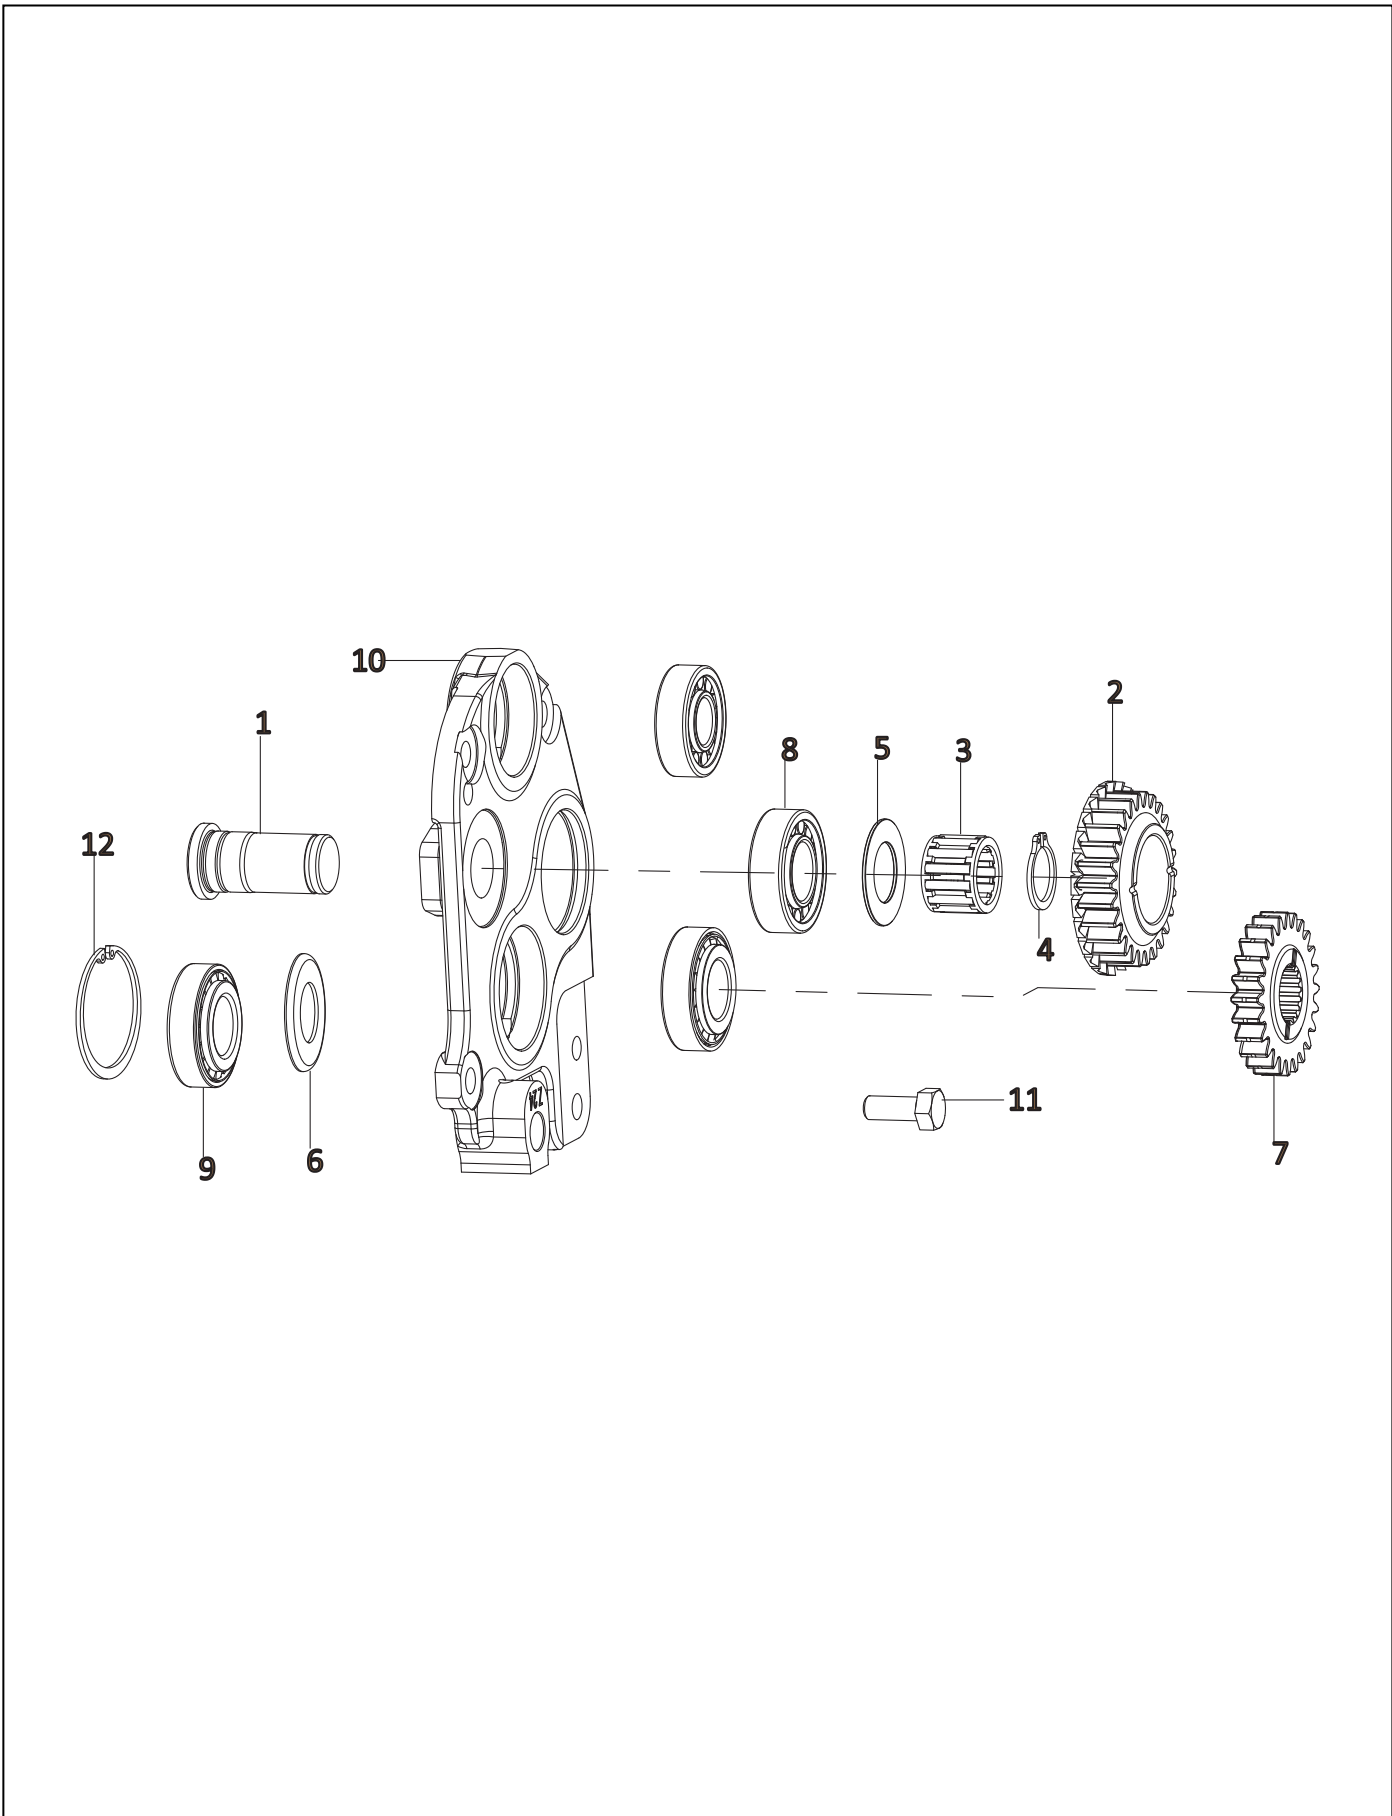


TABLE-51**PLATE INTERMEDIATE TRANSMISSION ASSEMBLY (Z-24)**

Fig. No.	Part No.	Description	Qty
1	D10542270.9	SHAFT IDLER 4WD	1
2	D10542250.9	GEAR IDLER 4WD Z-26	1
3	D10106190.9	BEARING NEEDLE ROLLER (25X33X23.8)	1
4	D90000480.9	CIRCLIP A25X2.0 H	1
5	D86500190.9	WASHER 45X25X1.5	1
6	D10673250.9	WASHER THRUST GEAR 4WD IDLER	1
7	D10565690.9	GEAR DRIVER 4WD Z 24	1
8	D10541490.9	BEARING ROLLER NJ 205	1
9	D10001990.9	BEARING ASSEMBLY TRANSMISSION MAIN SHAFT REAR PILOT	1
10	D10565720.9	PLATE INTERMEDIATE TRANSMISSION Z 24	1
11	D81502150.9	BOLT M10X1.50X25-10.9 HEX HEAD	4
12	D90500390.9	CIRCLIP B52X2.0 N	1

TABLE-52
GEAR DRIVE TRAIN RANGE ASSEMBLY (9+3)

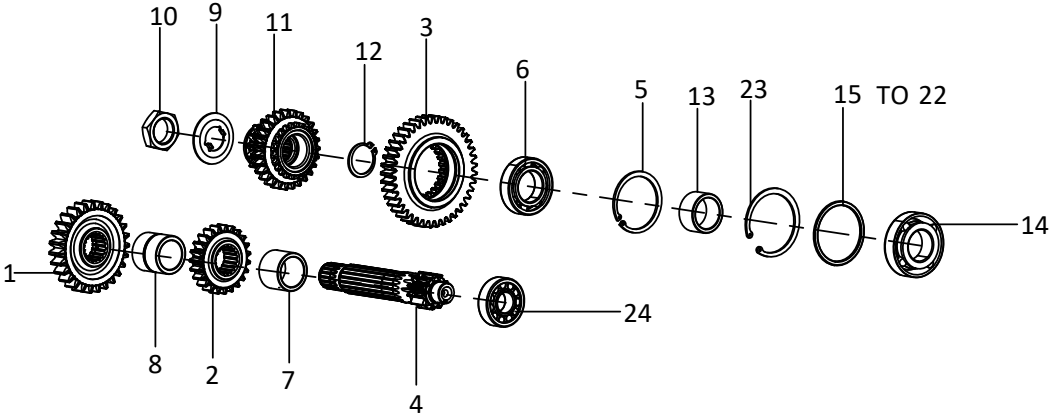


TABLE-52**GEAR DRIVE TRAIN RANGE ASSEMBLY (9+3)**

Fig. No.	Part No.	Description	Qty
1	D10534980.9	GEAR DRIVING HIGH RANGE Z-27	1
2	D10534990.9	GEAR DRIVING MEDIUM RANGE Z-23	1
3	D10580560.9	GEAR DRIVEN LOW RANGE Z-32	1
4	D10580550.9	SHAFT RANGE DRIVING Z-18	1
5	D90500140.9	CIRCLIP B55X2 N INTERNAL (IS3075 PART-II)	1
6	D10541450.9	BEARING BALL 6006	1
7	D10541770.9	SPACER RANGE DRIVING LOW GEAR	1
8	D10541760.9	SPACER RANGE DRIVING HIGH GEAR	1
9	D10547280.9	WASHER TAB LOCK	1
10	D83501010.9	NUT M22X1.5 HEX HEAD (THICKNESS 8.0MM)	1
11	D10535000.9	GEAR DRIVEN HIGH-MEDIUM RANGE Z-16/27	1
12	D90000080.9	CIRCLIP A30X1.5 N	1
13	D10541780.9	SPACER TAIL PINION SHAFT	1
14	D10052860.9	BEARING TAPPER ROLLER 30206	1
15	D10562420.9	SPACER GRADED PINION SHAFT (2.5 MM)	AR
16	D10562430.9	SPACER GRADED PINION SHAFT (2.6 MM)	AR
17	D10562440.9	SPACER GRADED PINION SHAFT (2.7 MM)	AR
18	D10562450.9	SPACER GRADED PINION SHAFT (2.8 MM)	AR
19	D10562460.9	SPACER GRADED PINION SHAFT (2.9 MM)	AR
20	D10562470.9	SPACER GRADED PINION SHAFT (3.0 MM)	AR
21	D10562480.9	SPACER GRADED PINION SHAFT (3.1 MM)	AR
22	D10562490.9	SPACER GRADED PINION SHAFT (3.2 MM)	AR
23	D90500320.9	CIRCLIP B62X3.0 H	1
24	D10541500.9	BEARING ROLLER NJ 204	1

TABLE-53
RANGE GEAR SHIFTING ASSEMBLY (COMPACT)

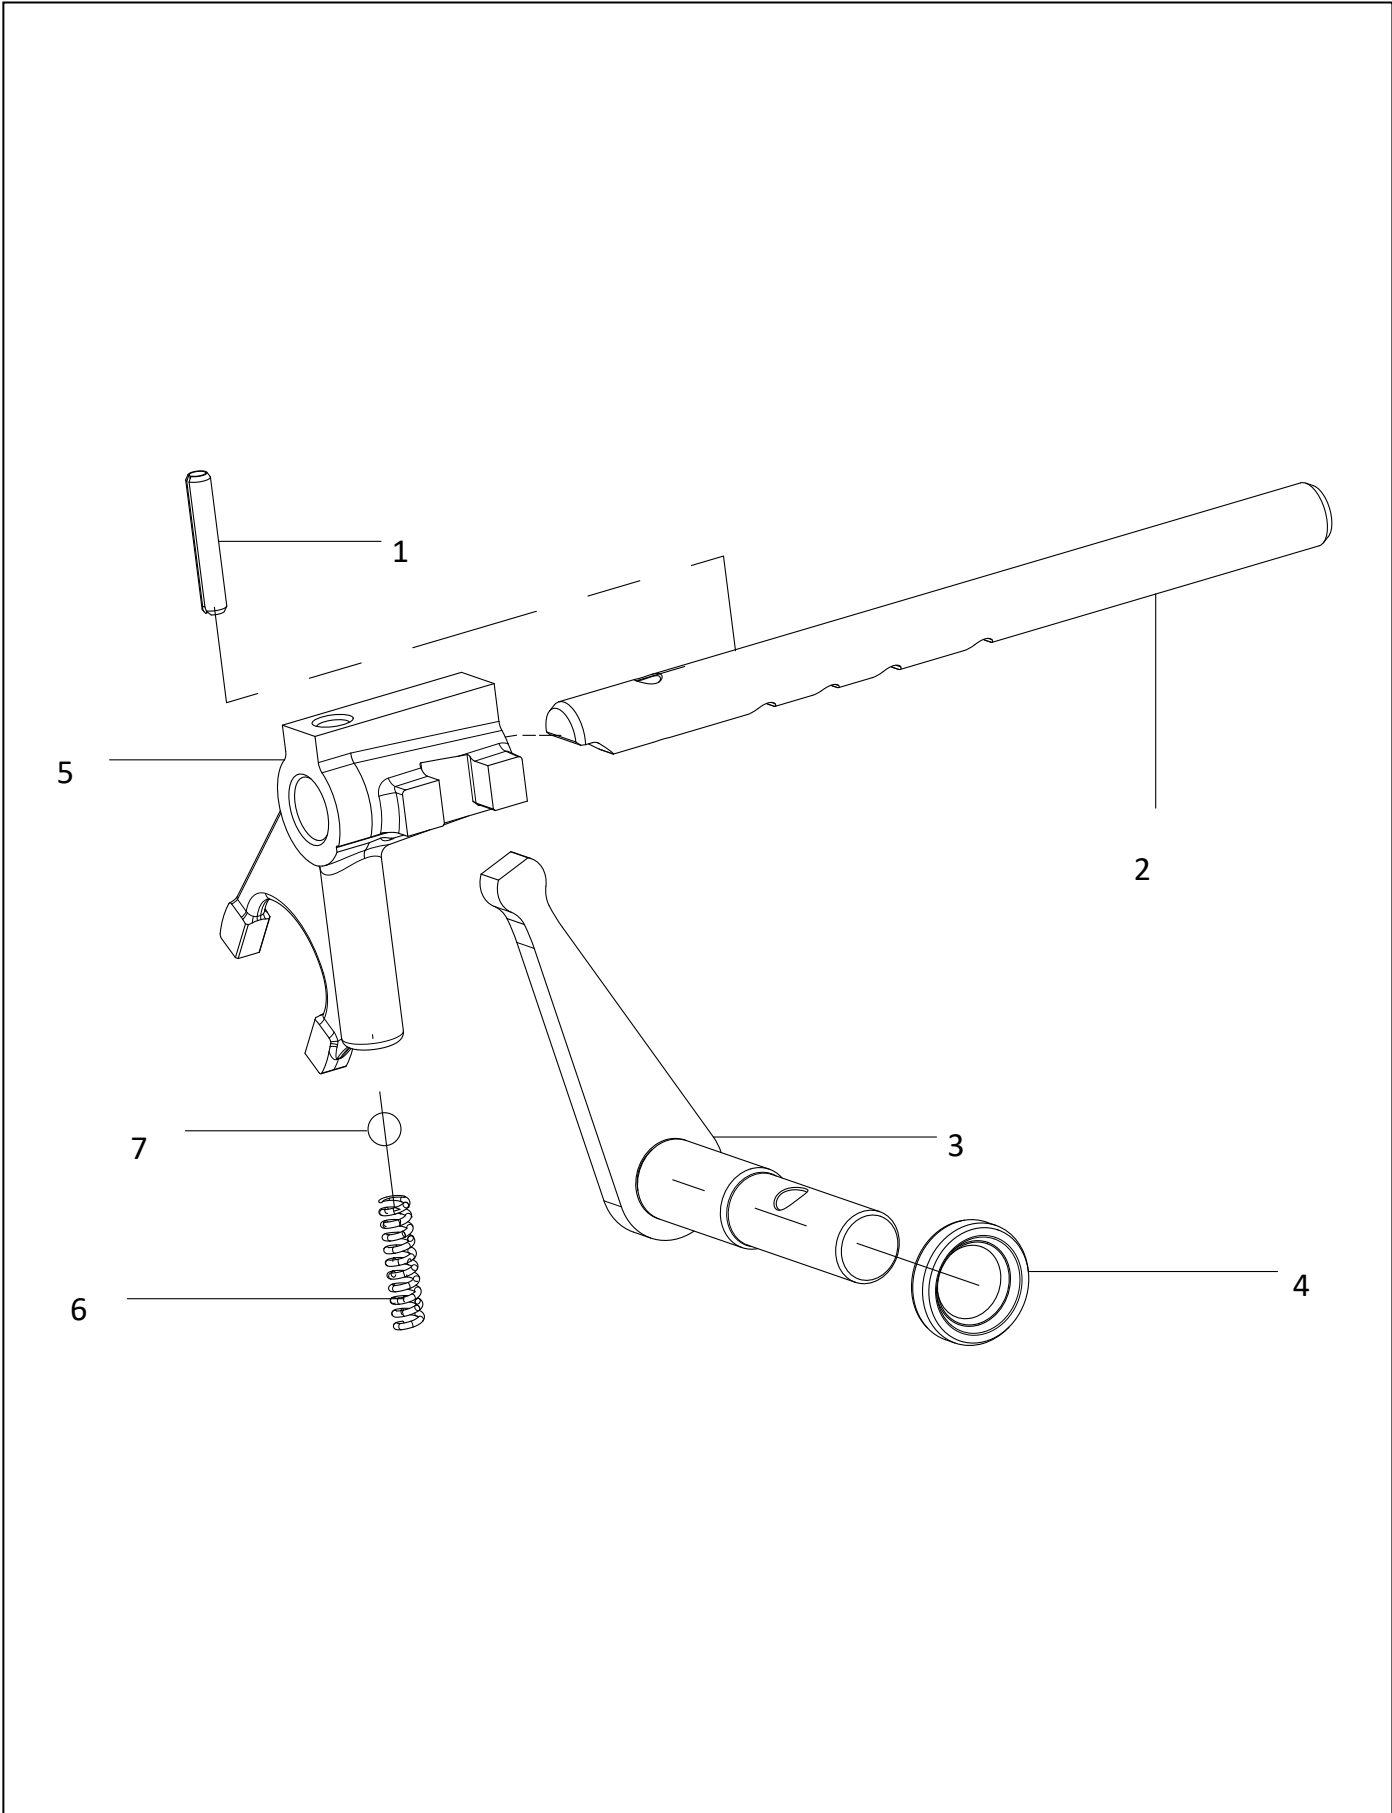


TABLE-53
RANGE GEAR SHIFTING ASSEMBLY (COMPACT)

Fig. No.	Part No.	Description	Qty
1	D87500700.9	PIN 6X30 SPRING DOWEL COMBINATION TYPE	1
2	D10535070.9	RAIL RANGE SHIFTING	1
3	D10535080.9	SHAFT AND LEVER ASSEMBLY RANGE SHIFTING	1
4	D10152510.9	SEAL OIL 20.0X30.0X7.0	1
5	D10535060.9	FORK RANGE SHIFTING	1
6	D10547290.9	SPRING RANGE GEAR SHIFT	1
7	D10006740.9	BALL 5/16" SNAP LOCK	1

TABLE-54
HARDWARE BUCKLE UP TRANSMISSION AND REAR AXLE SUBASSEMBLY

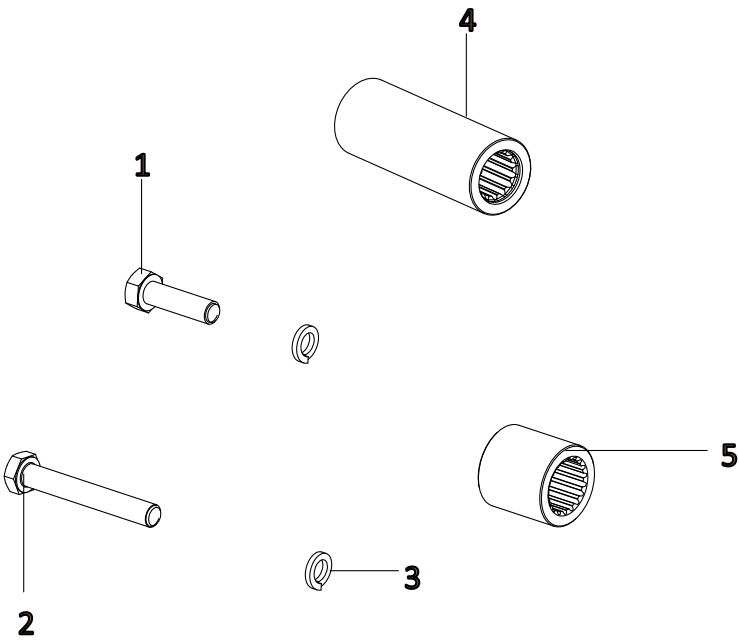


TABLE-54**HARDWARE BUCKLE UP TRANSMISSION AND REAR AXLE SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D81503870.9	BOLT M10X1.50X35-10.9 HEX HEAD (16 A/F)	8
2	D81503420.9	BOLT M10X1.50X70-10.9 HEX HEAD	2
3	D86500090.9	WASHER M10 SPRING LOCK	10
4	D10668700.9	COUPLING PTO INPUT SHAFT	1
5	D10547270.9	COUPLING COUNTERSHAFT SPEED AND RANGE	1
6	D95010840.9	LOCTITE ANAEROBIC L-5182	5

TABLE-55
HARDWARE BUCKLE UP ADAPTOR PLATE AND BACKEND SUBASSEMBLY

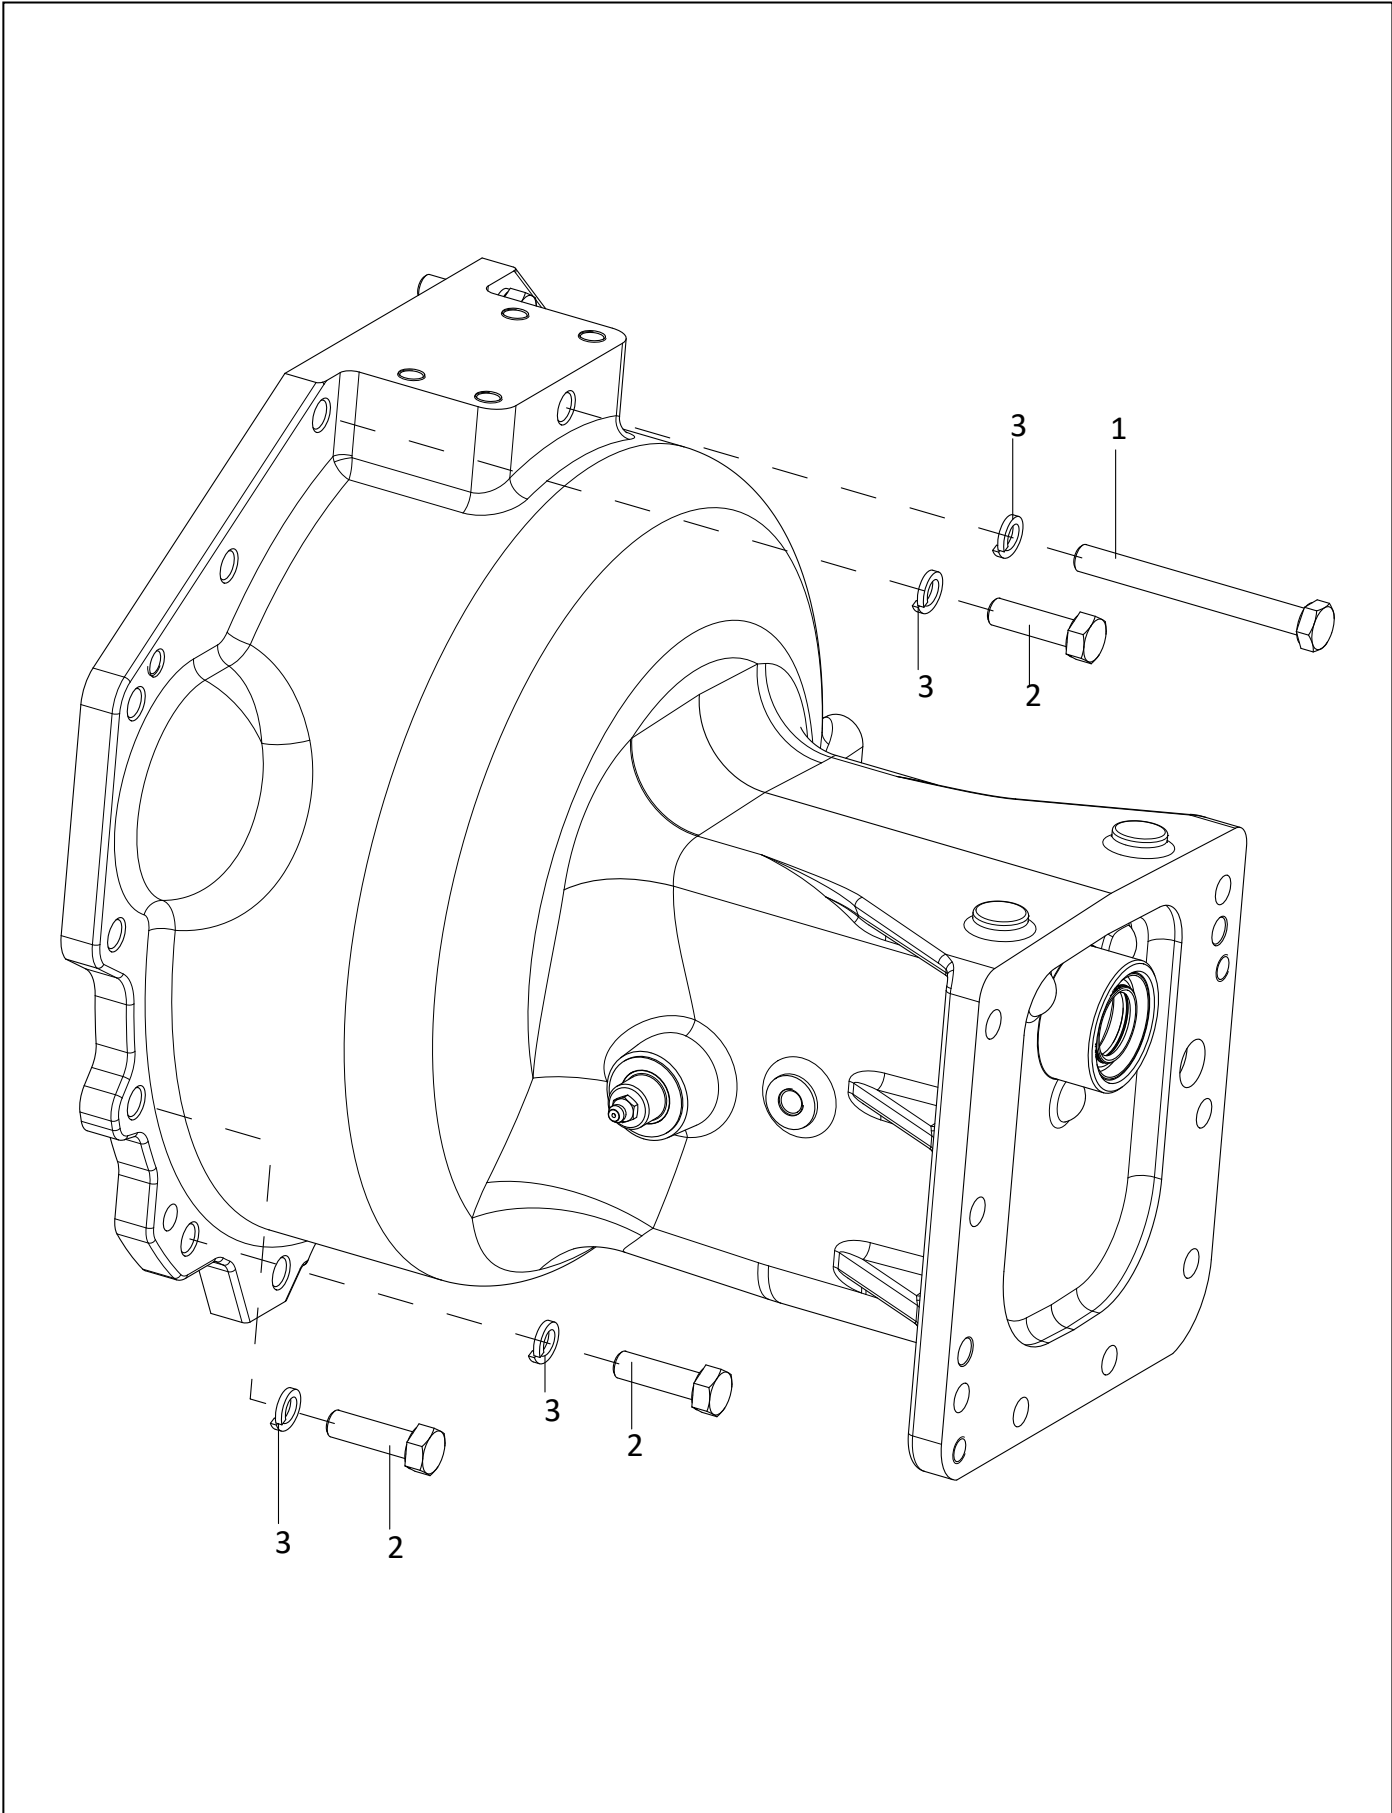


TABLE-55**HARDWARE BUCKLE UP ADAPTOR PLATE AND BACKEND SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D81503430.9	BOLT M10X1.50X95-10.9 HEX HEAD	1
2	D81503870.9	BOLT M10X1.50X35-10.9 HEX HEAD (16 A/F)	13
3	D86500090.9	WASHER M10 SPRING LOCK	14
4	D95010830.9	LOCTITE 5060	8

TABLE-55
HARDWARE BUCKLE UP ADAPTOR PLATE & BACKEND SUBASSEMBLY

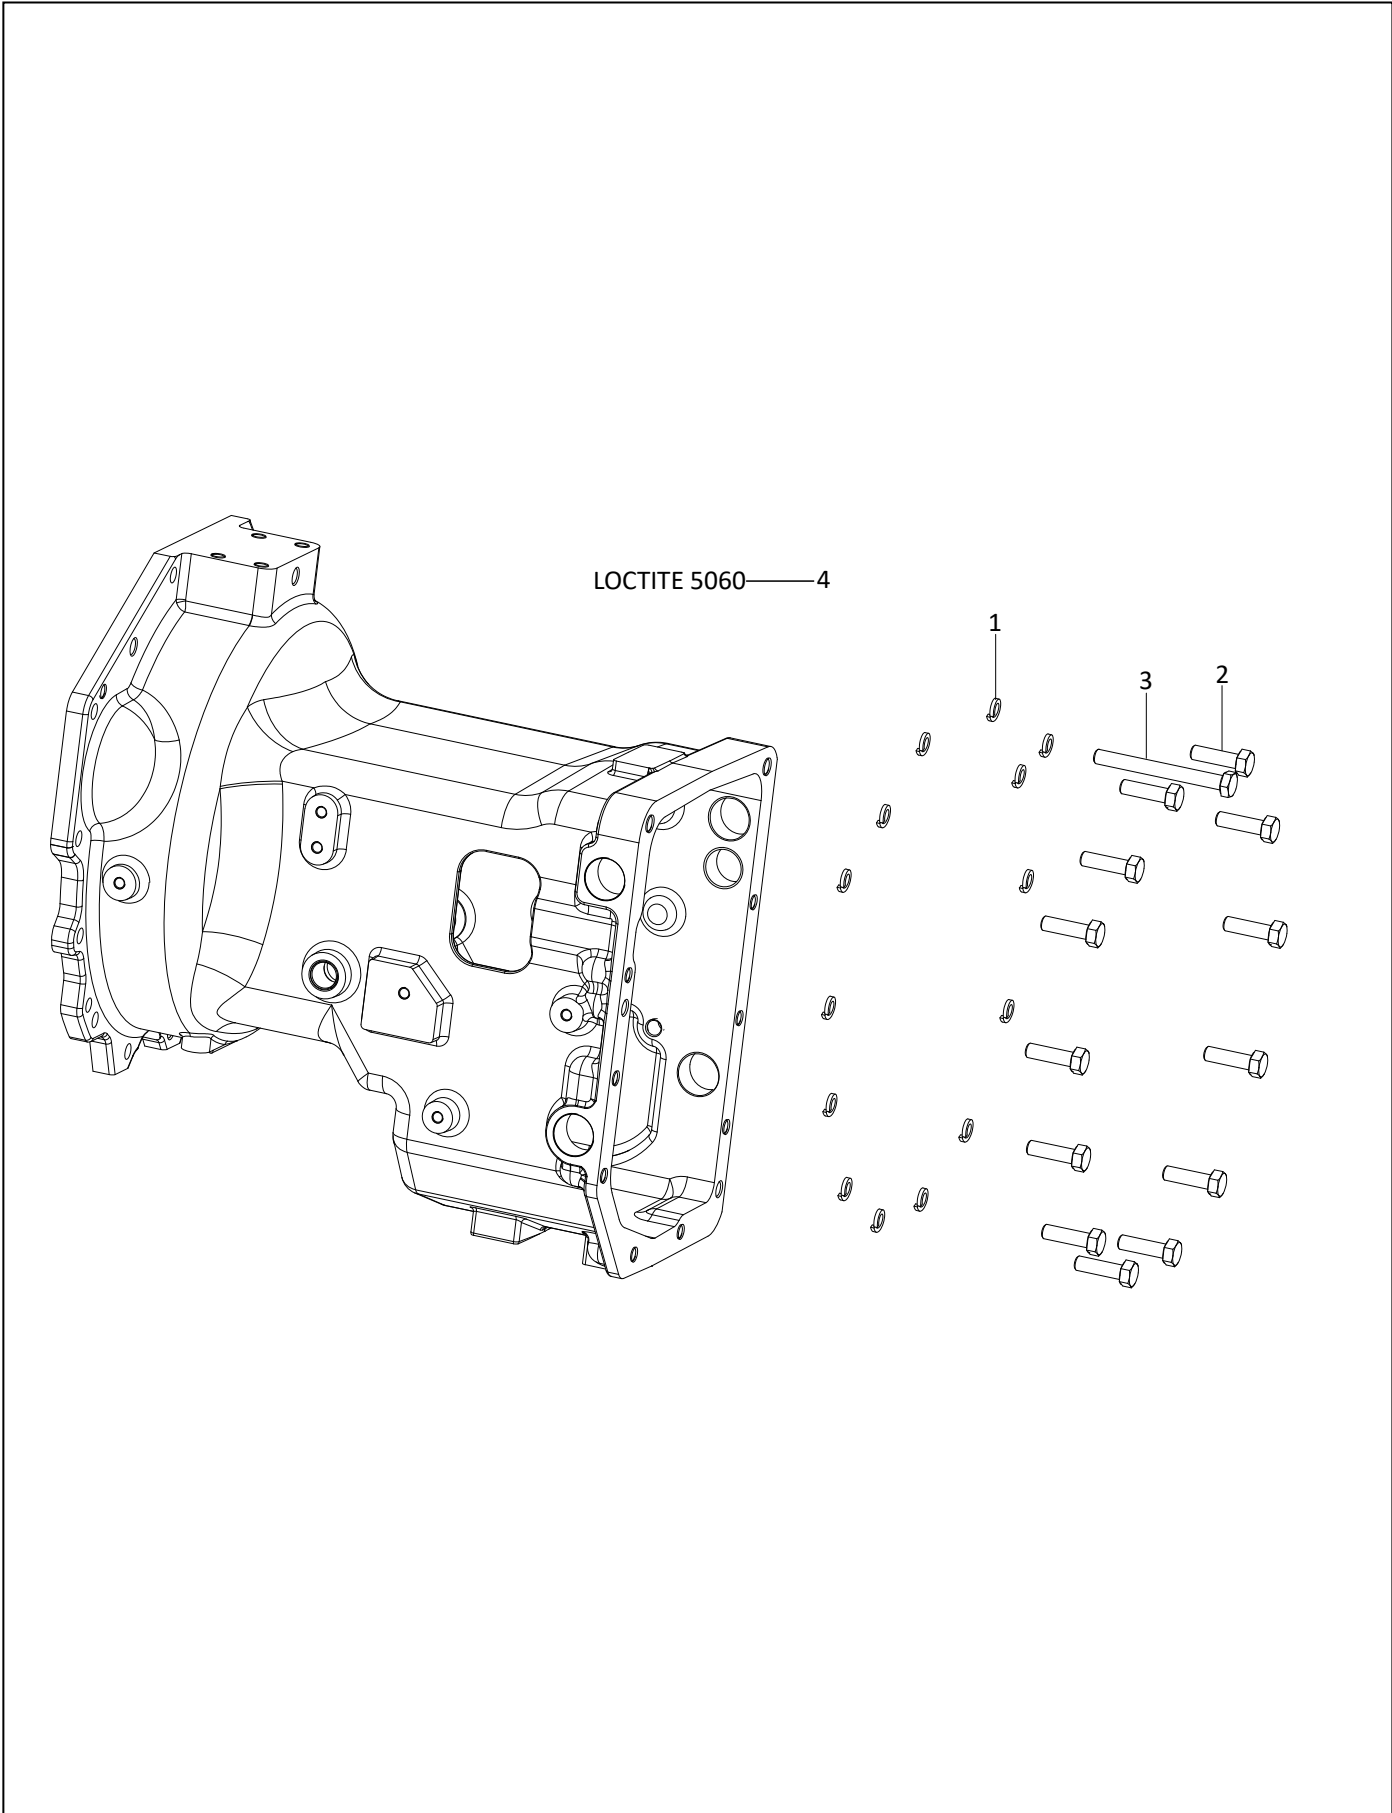


TABLE-55**HARDWARE BUCKLE UP ADAPTOR PLATE & BACKEND SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D86500090.9	WASHER M10 SPRING LOCK	14
2	D81503870.9	BOLT M10X1.50X35-10.9 HEX HEAD (16 A/F)	13
3	D81503430.9	BOLT M10X1.50X95-10.9 HEX HEAD	1
4	D95010830.9	LOCTITE 5060	AR

TABLE-56
TRANSMISSION ASSEMBLY DRESSED UP

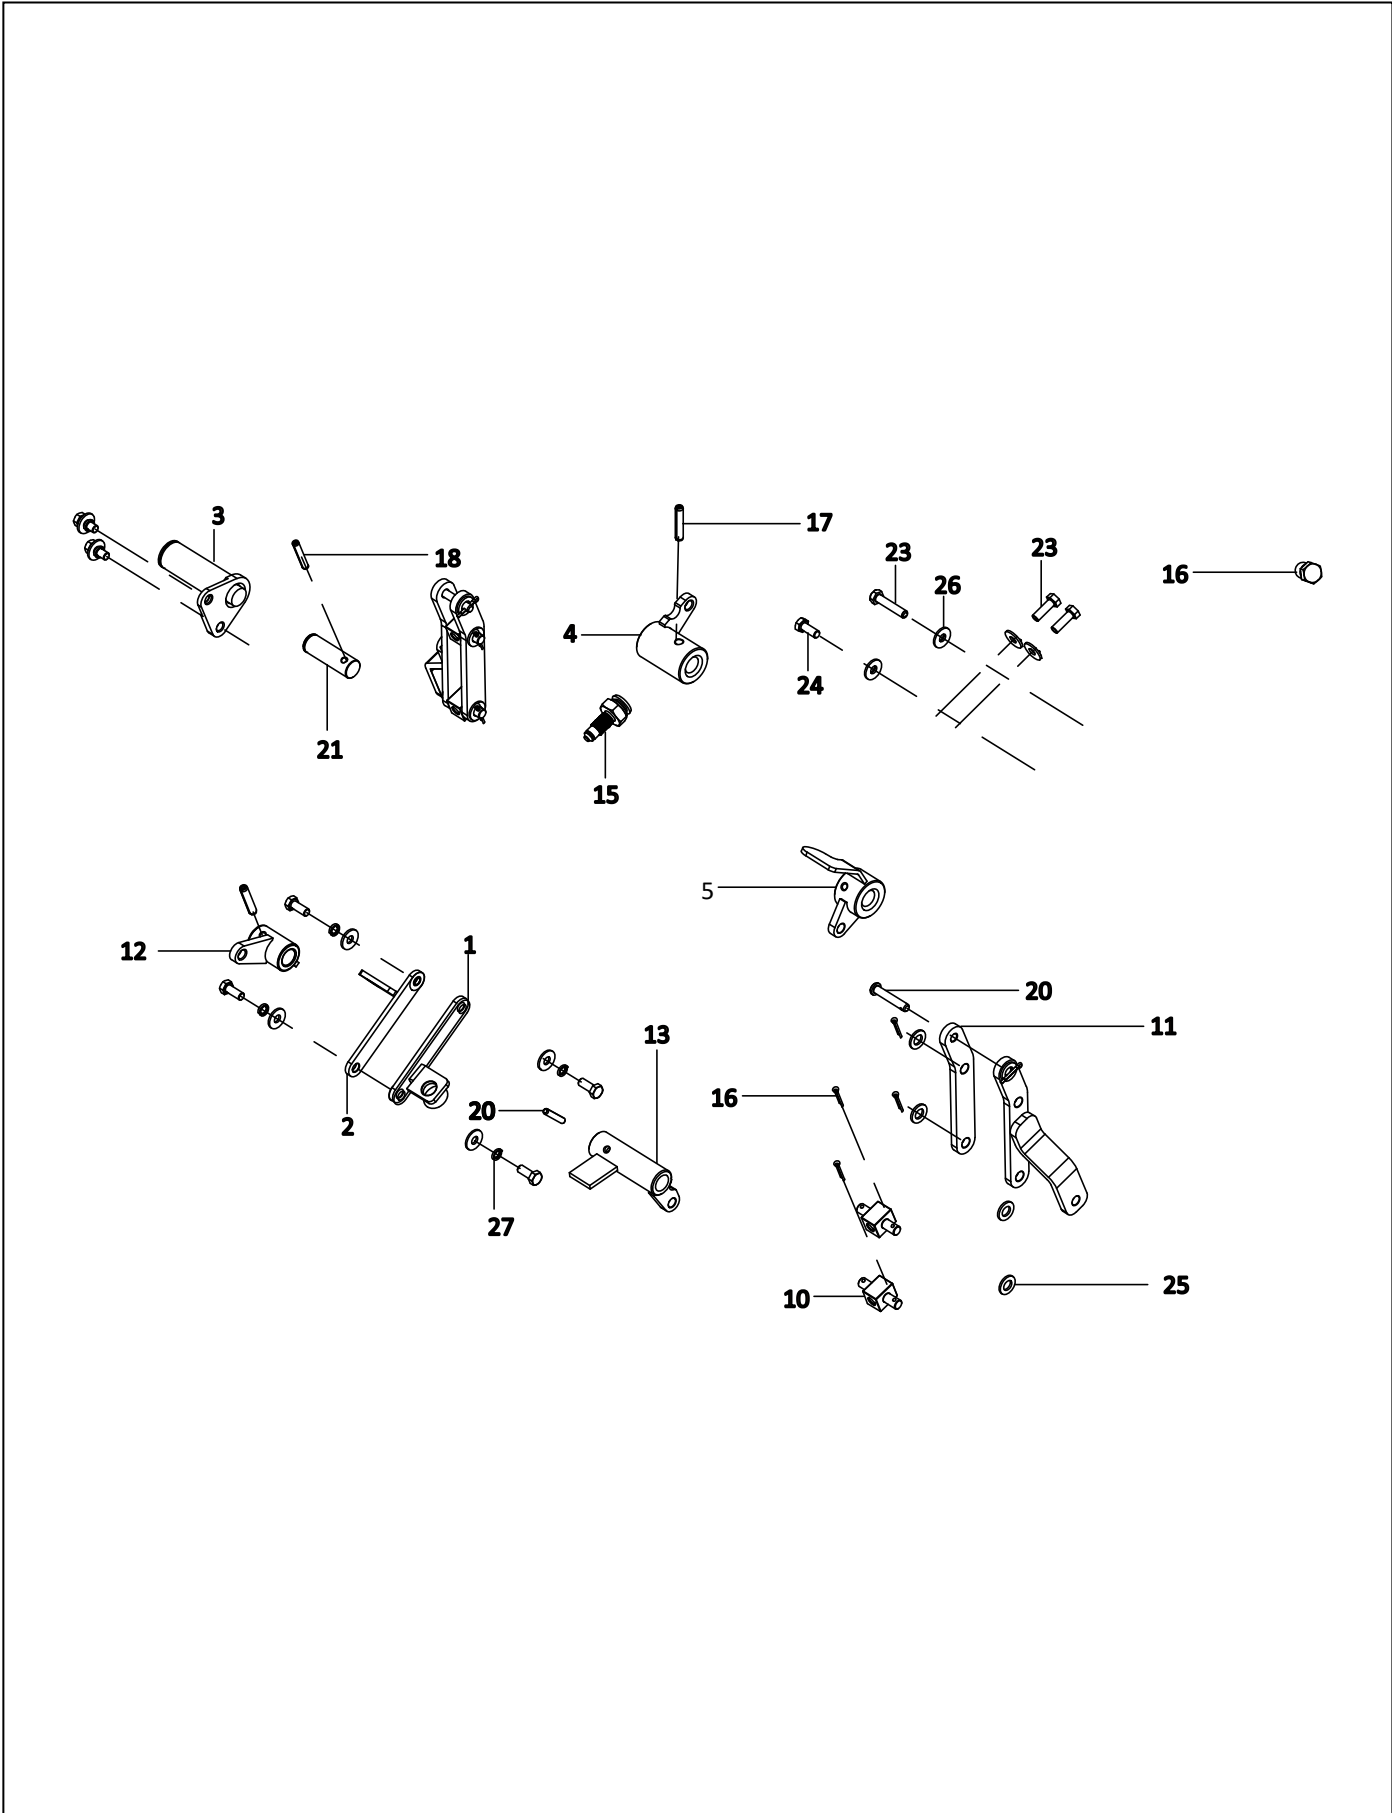


TABLE-56
TRANSMISSION ASSEMBLY DRESSED UP

Fig. No.	Part No.	Description	Qty
1	D10609600.9	BRACKET MID PTO GEAR SHIFT SWITCH HOLDING ASSEMBLY	1
2	D10614830.9	BRACKET PTO SWITCH HOLDING	1
3	D10552830.9	BRACKET ASSEMBLY HIGH LOW MEDIUM AND PTO LEVER HOLDING	1
4	D10552770.9	LEVER AND HUB ASSEMBLY GEAR SHIFTING TRANSMISSION (HIGH LOW MEDIUM)	1
5	D10740510.9	LEVER AND HUB ASSEMBLY GEAR SHIFTING TRANSMISSION (2WD 4WD)	1
8	D10604770.9	LEVER ASSEMBLY BRAKE PEDAL REAR LH	1
9	D10604790.9	LEVER ASSEMBLY BRAKE PEDAL REAR RH	1
10	D10552400.9	BLOCK SWIVEL BRAKE PEDAL REAR	4
11	D10552410.9	LEVER BRAKE PEDAL REAR	2
12	D10617950.9	LEVER AND HUB ASSEMBLY GEAR SHIFTING TRANSMISSION (PTO)	1
13	D10602680.9	LEVER AND HUB ASSEMBLY GEAR SHIFTING TRANSMISSION (MID PTO)	1
14	D10182150.9	PLUG M16X1.5X16	1
15	D10716760.9	SWITCH ASSEMBLY (NO TYPE)	2
16	D10013460.9	PIN 1/8"X0.75" COTTER	10
17	D87500330.9	PIN 8X40 SPRING DOWEL COMBINATION TYPE	2
18	D87000160.9	PIN 1/4"X1.50" SPRING DOWEL COMBINATION TYPE	2
19	D10683440.9	PIN 6.0X35 SPRING DOWEL COMBINATION TYPE	1
20	D93400450.9	PIN 10X45 CLEVIS	2
21	D10552680.9	PIN LEVER 2WD 4WD ASSEMBLY	1
22	D81500590.9	BOLT M8X1.25X25-6.6 HEX HEAD	2
23	D82500100.9	SCREW M8X1.25X40-6.6 HEX HEAD	1
24	D82500040.9	SCREW M8X1.25X20-8.8 HEX HEAD	7
25	D85500140.9	WASHER M10 FLAT	10
26	D10009600.9	WASHER 8.5X22 FLAT PHOSPHATED	10
27	D86500030.9	WASHER M8 SPRING LOCK	10

TABLE-57
BRAKE LINKAGE SUB ASSEMBLY (HST)

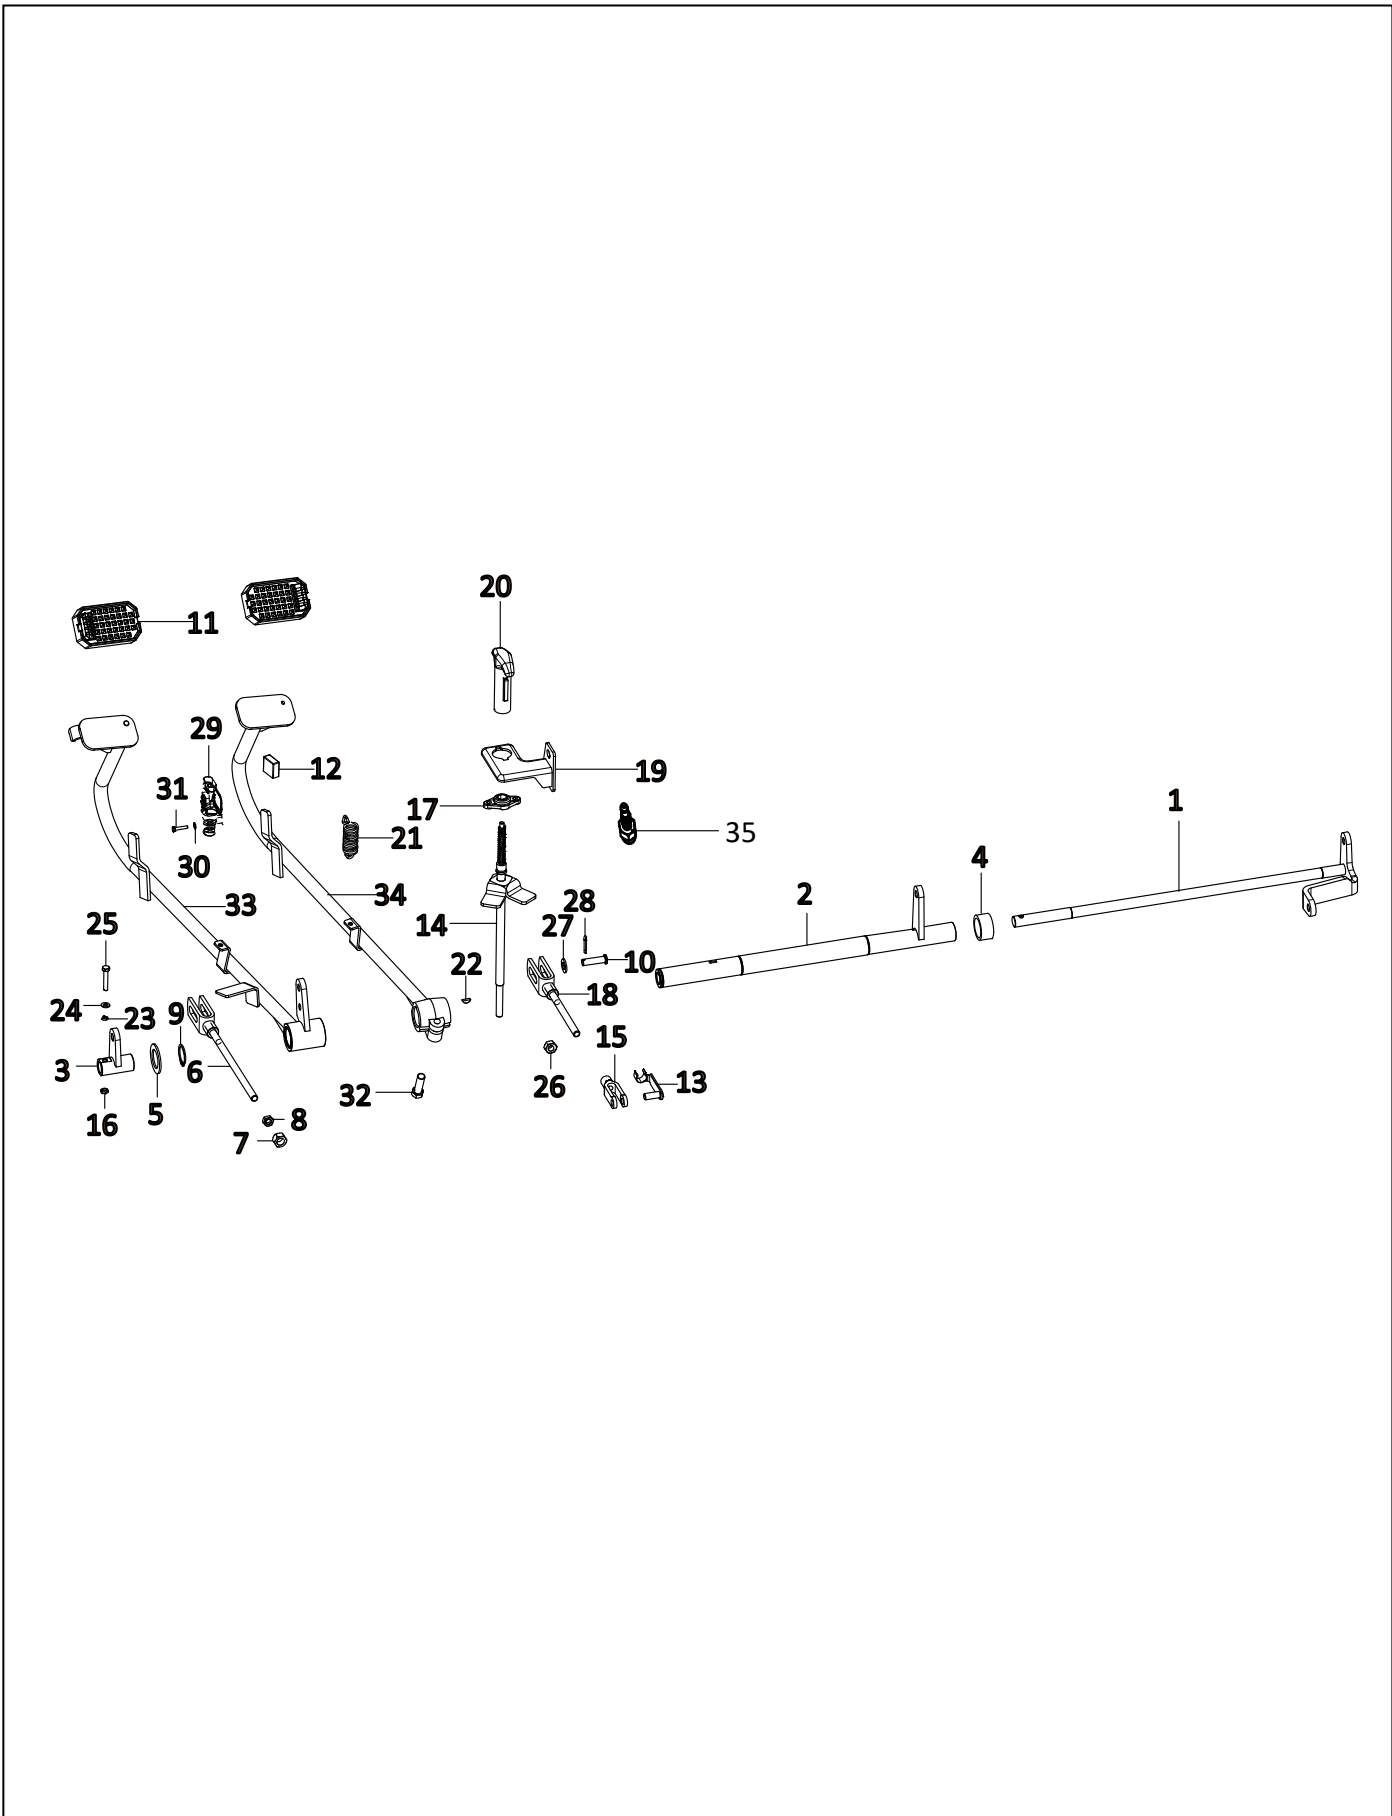


TABLE-57
BRAKE LINKAGE SUB ASSEMBLY (HST)

Fig. No.	Part No.	Description	Qty
1	D10604710.9	BRAKE PEDAL SHAFT ASSEMBLY INNER	1
2	D10604690.9	SHAFT ASSEMBLY BRAKE PEDAL OUTER	1
3	D10604740.9	HUB AND LEVER ASSEMBLY INDEPENDENT PARKING BRAKE RH	1
4	D10471840.9	SPACER BRAKE ACTUATING SHAFT LH	1
5	D10012260.9	WASHER BRAKE PEDAL CROSS SHAFT THRUST	4
6	D10604800.9	ROD TIE AND CLEVIS ASSEMBLY BRAKE PEDAL	2
7	D83500290.9	NUT M12X1.75 HEX	4
8	D83000010.9	NUT 3/8"-24 HEX	5
9	D90000570.9	CIRCLIP A28X1.5 N	2
10	D10258180.9	PIN 10X35 CLEVIS	4
11	D10552220.9	PAD RUBBER TOP PLATE	2
12	D10552230.9	COVER RUBBER RETURN STOPPER	2
13	D10292730.9	PIN 3/8" CLEVIS	3
14	D10610590.9	ROD TIE AND CLEVIS ASSEMBLY INDEPENDENT PARKING BRAKE	1
15	D10293160.9	CLEVIS 3/8"	3
16	D83500070.9	NUT M6X1.00-6 HEX	3
17	D10558920.9	GUIDE SUPPORT LEVER (IGUS)	1
18	D10604820.9	ROD TIE AND CLEVIS ASSEMBLY PARKING BRAKE	2
19	D10604840.9	BRACKET ASSEMBLY INDEPENDENT PARKING BRAKE MOUNTING	1
20	D10564110.9	KNOB ASSEMBLY INDEPENDENT PARKING BRAKE	1
21	D10012250.9	SPRING BRAKE PEDAL RETURN	2
22	D91000050.9	KEY 4X5 WOODRUFF	1
23	D86500040.9	WASHER M6 SPRING LOCK	1
24	D85500040.9	WASHER M6 FLAT	1
25	D81500340.9	BOLT M6X1.00X35-8.0 HEX HEAD	1
26	D83500090.9	NUT M10X1.50-8 HEX	2
27	D85500140.9	WASHER M10 FLAT	8
28	D10013460.9	PIN 1/8"X0.75" COTTER	4
29	D10768840.9	SWITCH ASSEMBLY NC/NO TYPE	1
30	D85500190.9	WASHER M4.0 FLAT	2
31	D81502010.9	BOLT M4X20-6.8 HEX HEAD	2
32	D81000470.9	BOLT 7/16"-14X1.50" HEX HEAD	1
33	D10605700.9	PEDAL ASSEMBLY BRAKE LH (HST)	1
34	D10605730.9	PEDAL ASSEMBLY BRAKE RH (HST)	1
35	D10498400.9	SWITCH ASSEMBLY STOP LAMP	1

TABLE-58
WHEEL AND TYRE ASSEMBLY REAR 33x15.50-16.50 (M/s BKT -TURF)

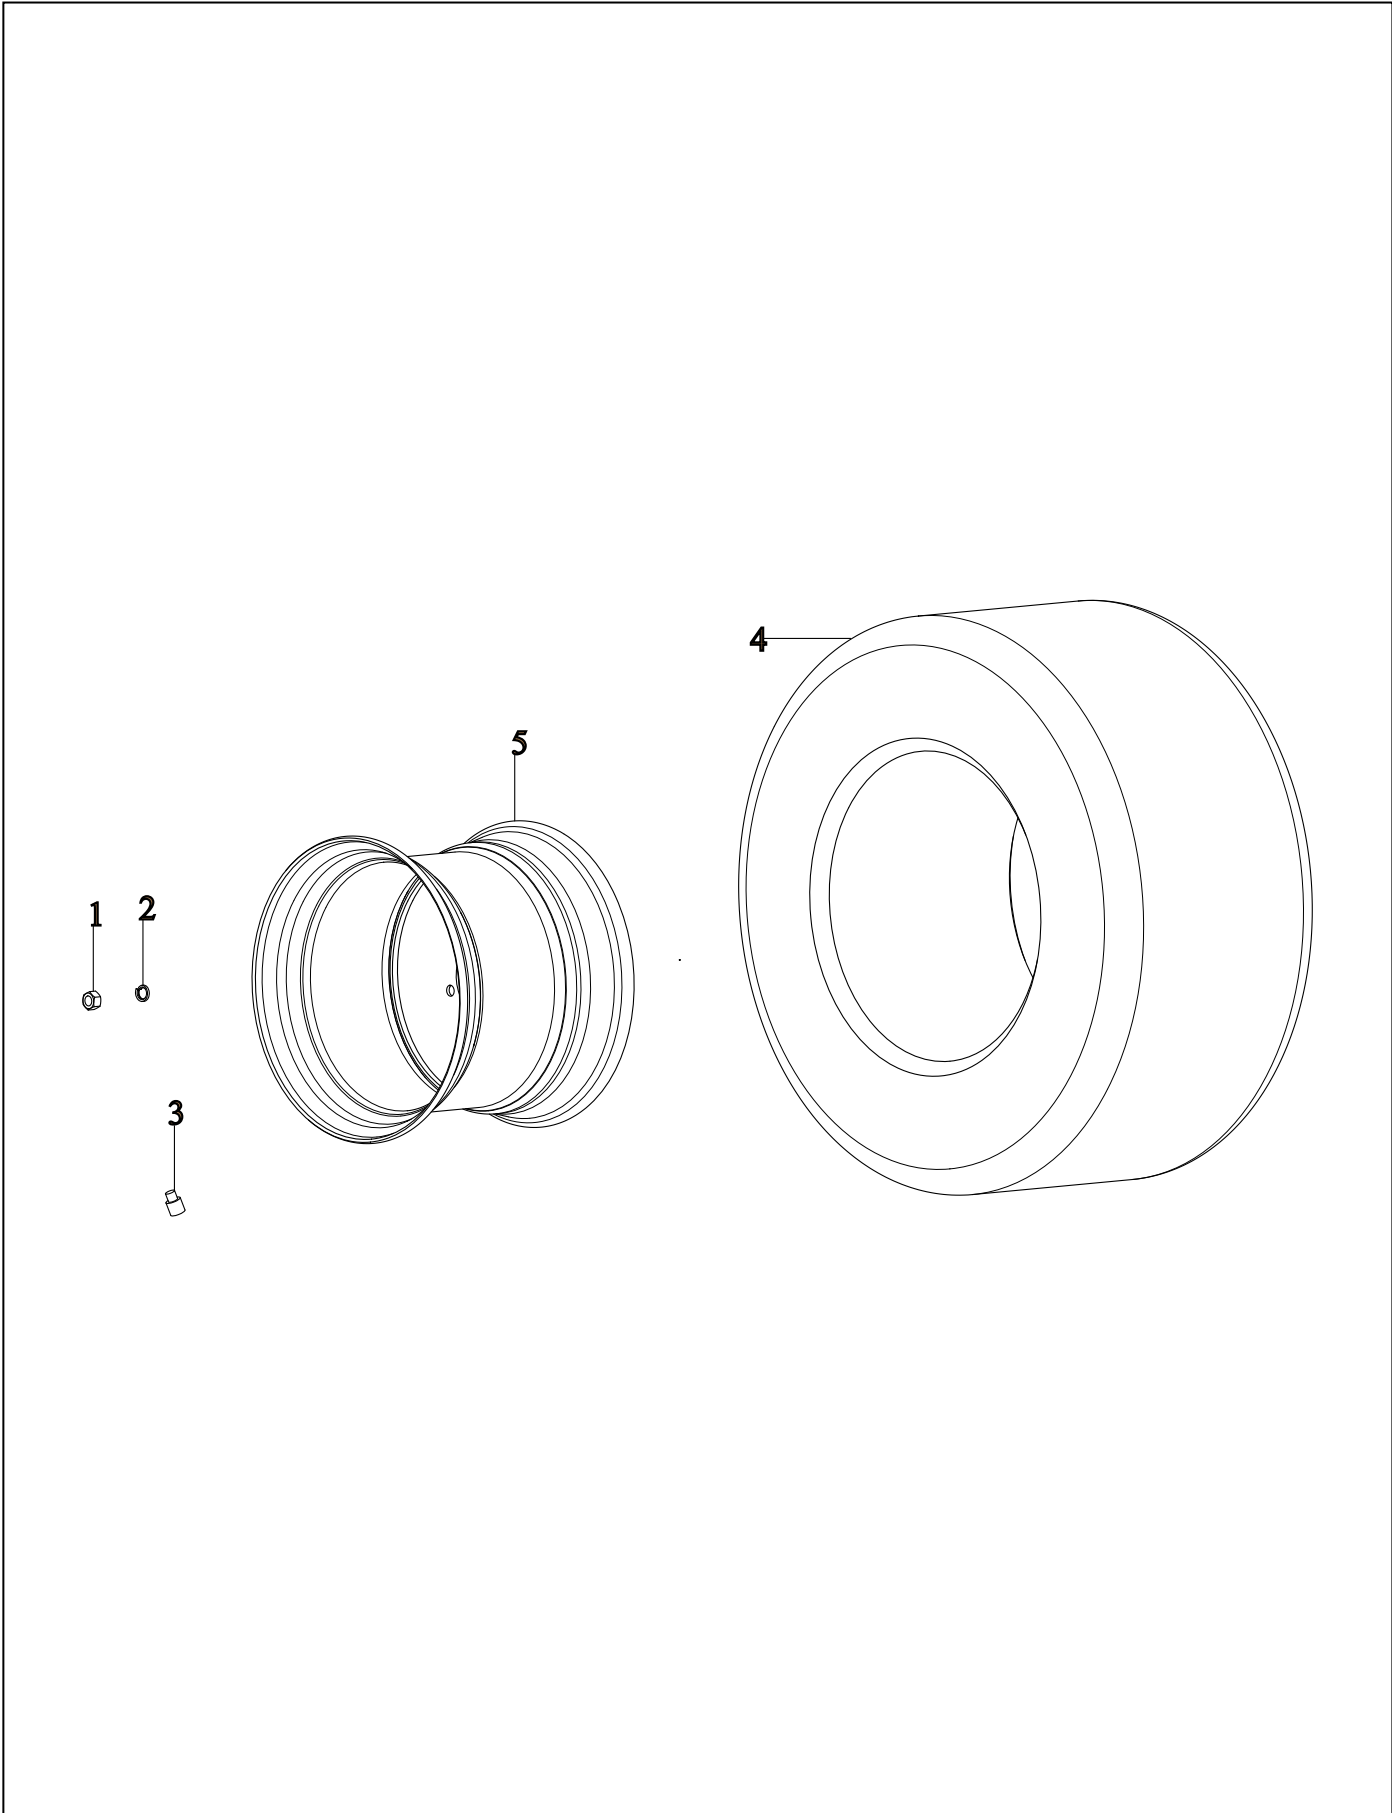


TABLE-58**WHEEL AND TYRE ASSEMBLY REAR 33x15.50-16.50 (M/s BKT -TURF)**

Fig. No.	Part No.	Description	Qty
1	D83501020.9	NUT M16X1.5-10.9 HEX HEAD	10
2	D86500060.9	WASHER M16 SPRING LOCK	10
3	D10538660.9	VALVE TYRE REAR WHEEL 33X15.50-16.5 (TR415)	2
4	D10517720.9	TYRE ASSEMBLY REAR WHEEL 33X15.50-16.5 10PR TL (LG306)	2
5	D10538500.9	RIM ASSEMBLY REAR WHEEL 12X16.5" (ANTIQUUE SILVER)	2

TABLE-59
HYDRAULIC LIFT ASSEMBLY (COMPACT TRACTOR MODEL)

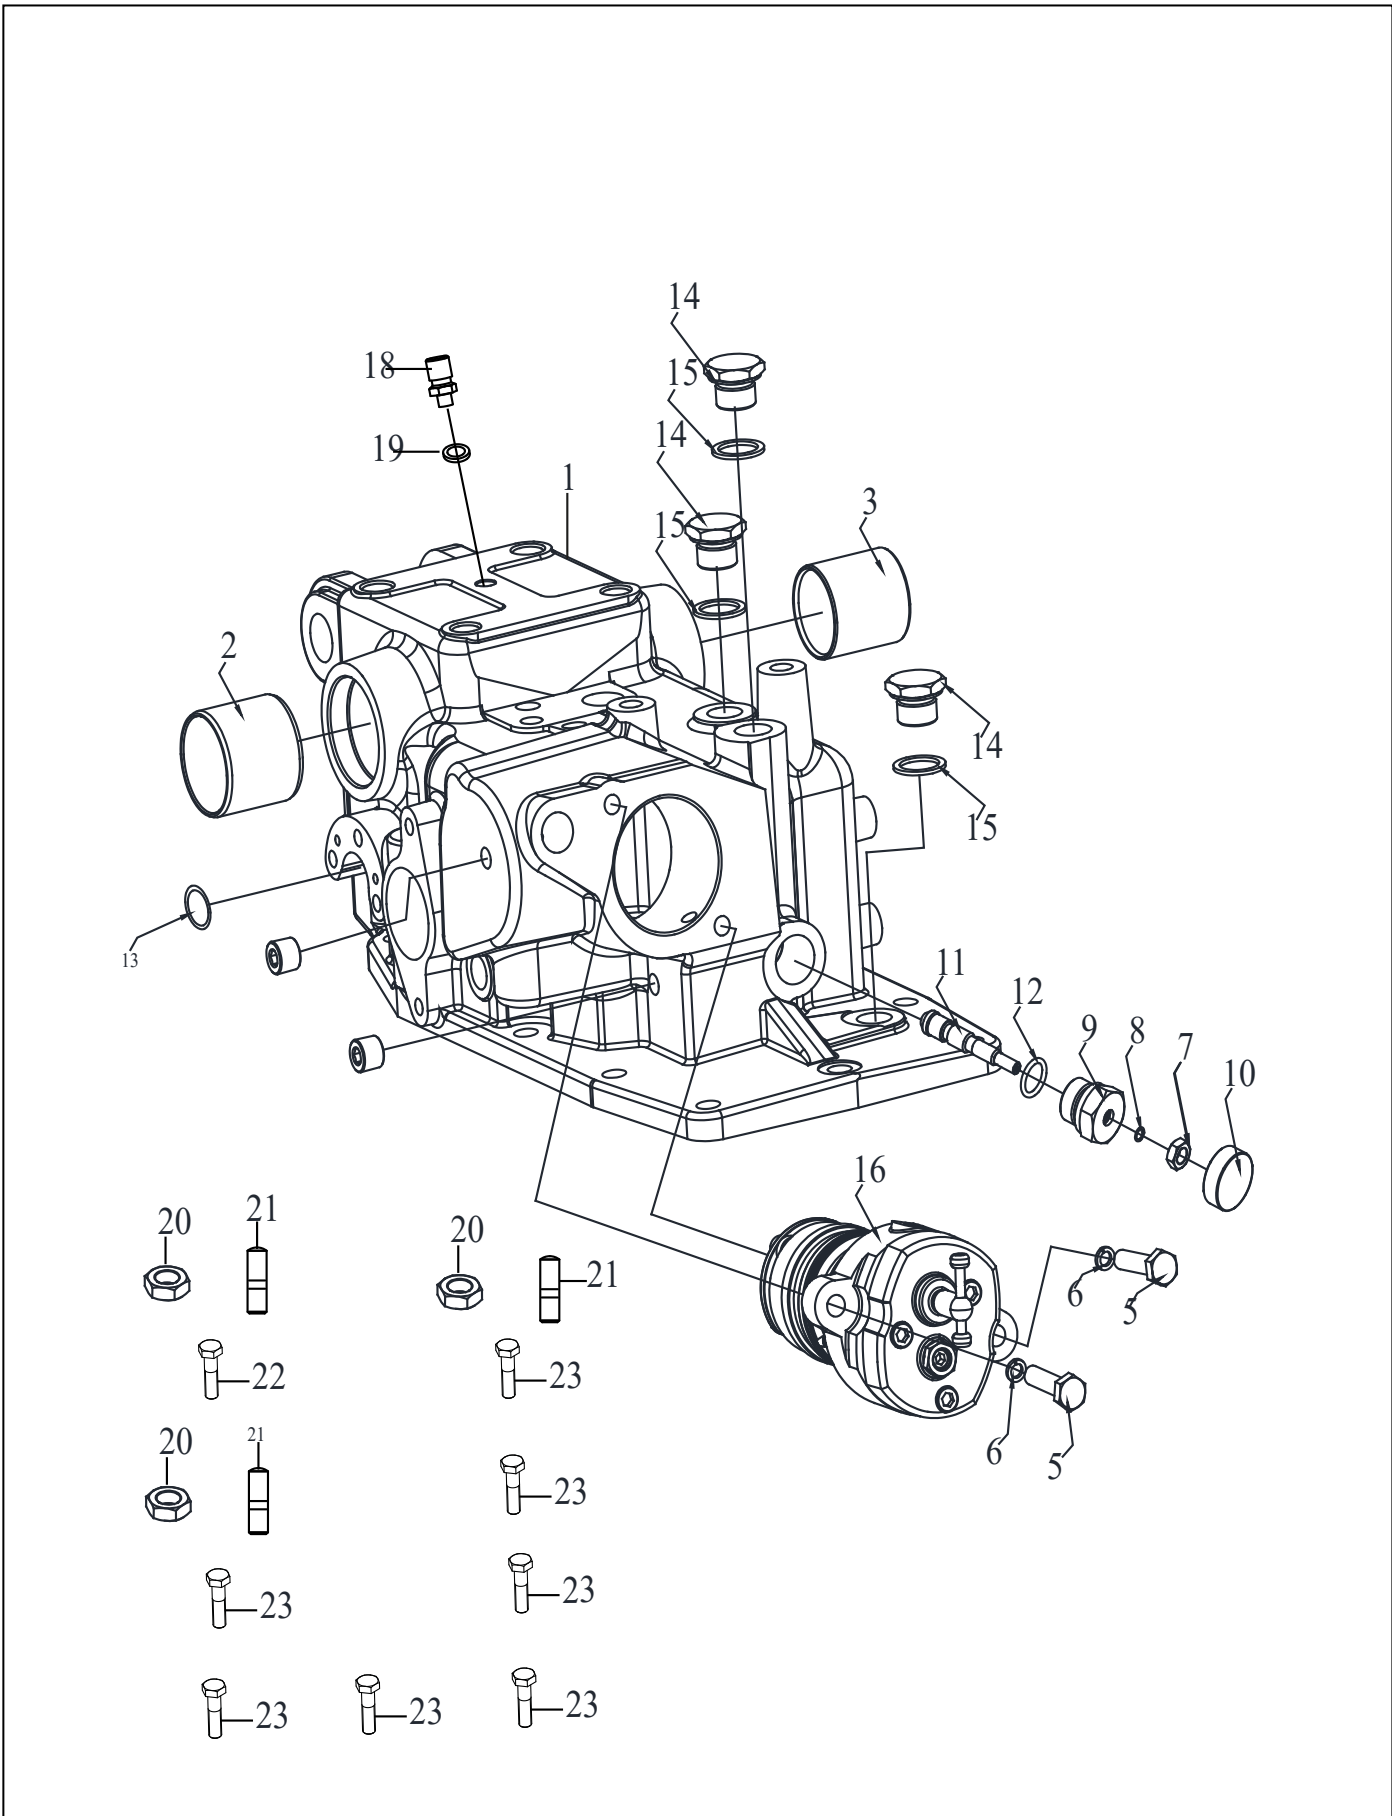


TABLE-59
HYDRAULIC LIFT ASSEMBLY (COMPACT TRACTOR MODEL)

Fig. No.	Part No.	Description	Qty
1	D10711190.9	HOUSING HYDRAULIC LIFT (M/S MITA PART NO 12.0209.01.2)	1
2	D10711200.9	BUSH SERRATION SHAFT (M/S MITA PART NO 40.0014.00.0)	1
3	D10711210.9	BUSH SERRATION SHAFT (M/S MITA PART NO 40.0018.00.0)	1
5	D10700350.9	SCREW M8X1.25X35-8.8 HEX HEAD (M/S MITA PART NO 300007000)	2
6	D10700160.9	WASHER M8 SPRING LOCK (M/S MITA PART NO 320001000)	2
7	D10705840.9	NUT LOCK PRESELECTOR HYDRAULIC LIFT (M/S MITA PART NO 31.0037.00.0)	1
8	D10705830.9	SEAL O RING 1.78X7.6 (M/S MITA PART NO 36.0045.00.0)	1
9	D10711220.9	PLUG PRESELECTOR HYDRAULIC LIFT (M/S MITA PART NO 44.0281.00.0)	1
10	D10705930.9	KNOB PRESELECTOR HYDRAULIC LIFT (M/S MITA PART NO 43.0028.00.0)	1
11	D10705810.9	VALVE PRESELECTOR HYDRAULIC LIFT (M/S MITA PART NO 12.0003.15.0)	1
12	D10711230.9	SEAL O RING (M/S MITA PART NO 36.0121.00.0)	1
13	D11236250.9	SEAL O RING (M/S MITA PART NO 900530)	1
14	D10705800.9	PLUG M18X1.5 (M/S MITA PART NO 44.0010.00.0)	3
15	D10700730.9	WASHER HYDRAULIC LIFT CONTROL (M/S MITA PART NO 320002000)	3
16	D10711250.9	VALVE CONTROL ASSEMBLY HYDRAULIC LIFT (M/S MITA PART NO 11.0144.00.4)	1
17	D10711750.9	KIT SEAL CONTROL VALVE (M/S MITA PART NO 95.0015.02.4)	1
18	D10512920.9	BREATHER ASSEMBLY HYDRAULIC LIFT OIL	1
19	D10366570.9	WASHER COPPER HYDRAULIC BREATHER	1
20	D83500130.9	NUT M10X1.50-10P HEX	3
21	D84500340.9	STUD B M10X1.5X40-10.9	3
22	D81503340.9	BOLT M10X1.50X90-10.9 HEX HEAD	1
23	D81503300.9	BOLT M10X1.50X28-10.9 HEX HEAD	7

TABLE-60
CYLINDER ASSY

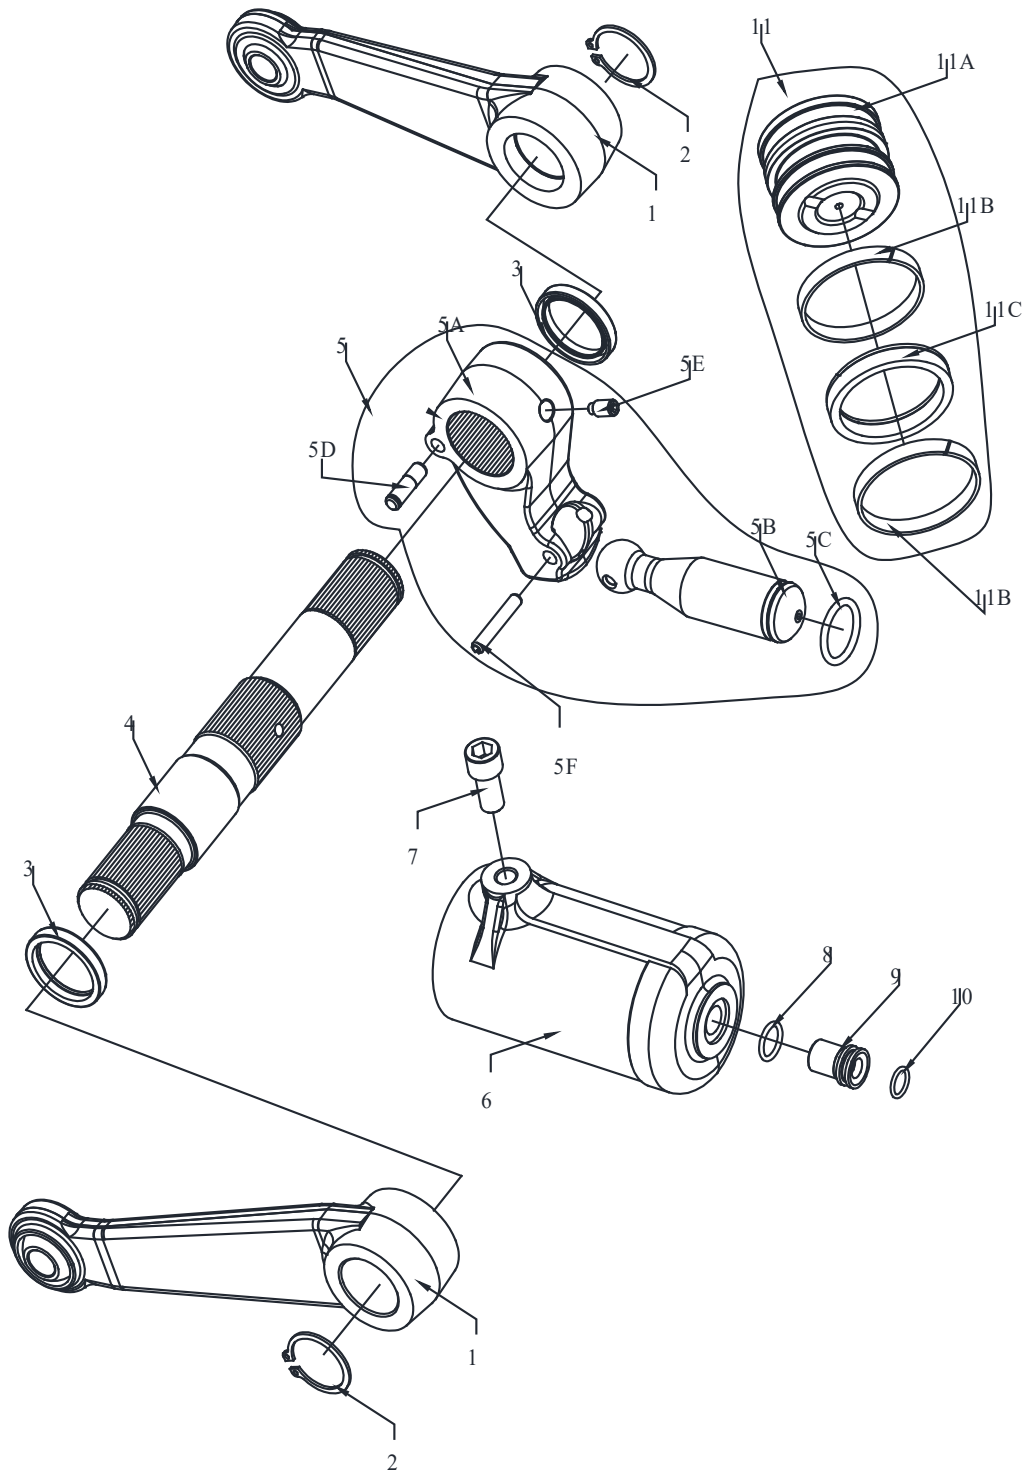


TABLE-60
CYLINDER ASSY

Fig. No.	Part No.	Description	Qty
1	D10711260.9	ARM ASSEMBLY HYDRAULIC LIFT (M/S MITA PART NO 13.0048.08.2)	2
2	D10711270.9	CIRCLIP HYDRAULIC LIFT (M/S MITA PART NO 33.0010.00.0)	2
3	D10711280.9	SEAL 35X45X7 SHAFT HYDRAULIC LIFT (M/S MITA PART NO 36.0096.00.0)	2
4	D10711290.9	SHAFT HYDRAULIC LIFT (M/S MITA PART NO 13.0027.06.0)	1
5	D10711300.9	KIT RAM ARM ASSEMBLY HYDRAULIC LIFT (M/S MITA PART NO 13.0021.05.4)	1
5A	D10711310.9	ARM HYDRAULIC LIFT RAM (M/S MITA PART NO 13.0021.05.0)	1
5B	D10711320.9	ROD CONNECTING HYDRAULIC LIFT (M/S MITA PART NO 13.0013.04.0)	1
5C	D10711330.9	SEAL O RING (M/S MITA PART NO 36.0090.00.0)	1
5D	D10711340.9	PIN RAM ARM HYDRAULIC LIFT (M/S MITA PART NO 34.0212.00.0)	1
5E	D10711350.9	SCREW M8X16 (M/S MITA PART NO 30.0036.00.0)	1
5F	D10711360.9	PIN RAM ARM HYDRAULIC LIFT (M/S MITA PART NO 38.0024.00.0)	1
6	D10711370.9	CYLINDER HYDRAULIC LIFT (M/S MITA PART NO 13.0030.01.0)	1
7	D10711380.9	BOLT M12X25 ALLEN HYDRAULIC LIFT (M/S MITA PART NO 30.0154.00.0)	1
8	D11236250.9	SEAL O RING (M/S MITA PART NO 900530)	1
9	D10711390.9	PLUG CYLINDER HYDRAULIC LIFT (M/S MITA PART NO 30.0052.01.0)	1
10	D10705940.9	SEAL O RING 2.4X15.3 (M/S MITA PART NO 36.0103.00.0)	1
11	D10711400.9	KIT PISTON ASSEMBLY HYDRAULIC LIFT (M/S MITA PART NO 13.0019.02.2)	1
11A	D10711410.9	PISTON HYDRAULIC LIFT (M/S MITA PART NO 13.0019.02.0)	1
11B	D10711420.9	RING PISTON HYDRAULIC LIFT (M/S MITA PART NO 36.0115.00.0)	2
11C	D10711430.9	SEAL PISTON HYDRAULIC LIFT (M/S MITA PART NO 36.0114.00.0)	1

TABLE-61
INTERNAL LEVER ASSY

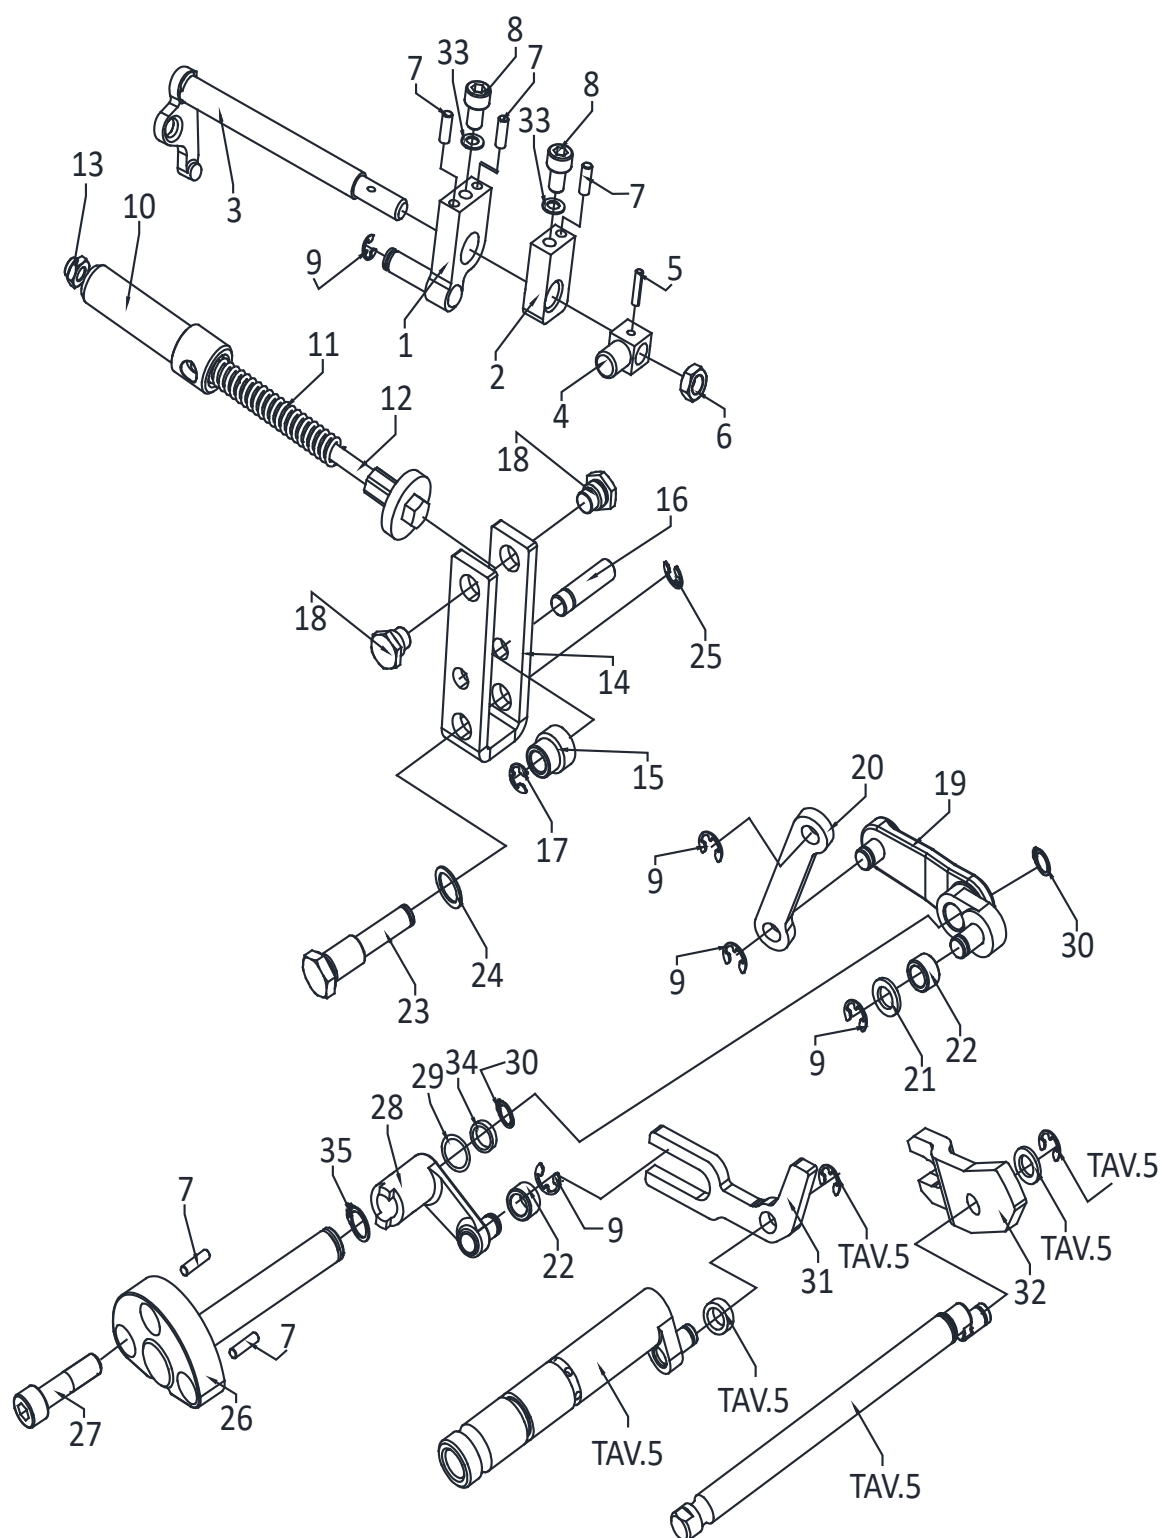


TABLE-61
INTERNAL LEVER ASSY

Fig. No.	Part No.	Description	Qty
1	D10711440.9	SUPPORT ASSEMBLY HYDRAULIC LIFT (M/S MITA PART NO 14.0005.14.2)	1
2	D10711450.9	SUPPORT HYDRAULIC LIFT (M/S MITA PART NO 14.0004.14.0)	1
3	D10711460.9	LEVER HYDRAULIC LIFT (M/S MITA PART NO 14.0006.14.2)	1
4	D10711470.9	PIN HYDRAULIC LIFT (M/S MITA PART NO 34.0593.00.0)	1
5	D10711480.9	PIN HYDRAULIC LIFT (M/S MITA PART NO 38.0071.00.0)	1
6	D10711490.9	NUT M8 HYDRAULIC LIFT (M/S MITA PART NO 31.0076.00.0)	1
7	D10711500.9	ROLLER HYDRAULIC LIFT (M/S MITA PART NO 46.0002.00.0)	5
8	D10711510.9	BOLT M6X16 ALLEN HYDRAULIC LIFT (M/S MITA PART NO 30.0003.00.0)	2
9	D10700800.9	CIRCLIP HYDRAULIC LIFT (M/S MITA PART NO 330003000)	5
10	D10711520.9	SEAT SPRING HYDRAULIC LIFT (M/S MITA PART NO 14.0002.21.0)	1
11	D10711530.9	SPRING HYDRAULIC LIFT (M/S MITA PART NO 35.0060.00.0)	1
12	D10711540.9	ROD ASSEMBLY HYDRAULIC LIFT (M/S MITA PART NO 14.0007.22.2)	1
13	D10711550.9	NUT M6 HYDRAULIC LIFT (M/S MITA PART NO 31.0017.00.0)	1
14	D10711560.9	BRACKET HYDRAULIC LIFT (M/S MITA PART NO 14.0005.20.0)	1
15	D10711570.9	ROLLER HYDRAULIC LIFT (M/S MITA PART NO 14.0082.08.0)	1
16	D10711580.9	PIN BRACKET HYDRAULIC LIFT (M/S MITA PART NO 34.0106.00.0)	1
17	D10711590.9	CIRCLIP HYDRAULIC LIFT (M/S MITA PART NO 33.0014.00.0)	1
18	D10711600.9	PIN BRACKET HYDRAULIC LIFT (M/S MITA PART NO 34.0177.00.0)	2
19	D10711610.9	COMPENSATOR HYDRAULIC LIFT (M/S MITA PART NO 14.0024.01.2)	1
20	D10711620.9	LINK HYDRAULIC LIFT (M/S MITA PART NO 14.0013.06.0)	1
21	D10711630.9	WASHER HYDRAULIC LIFT(M/S MITA PART NO 32.0024.00.0)	1
22	D10700570.9	ROLLER HYDRAULIC LIFT (M/S MITA PART NO 140001080)	2
23	D10711640.9	PIN BRACKET HYDRAULIC LIFT (M/S MITA PART NO 34.0161.00.0)	1
24	D10711650.9	WASHER 14.5X20X1.0 HYDRAULIC LIFT (M/S MITA PART NO 32.0011.00.0)	1
25	D10700820.9	CIRCLIP HYDRAULIC LIFT (M/S MITA PART NO 330005000)	1
26	D10711660.9	HUB ASSEMBLY HYDRAULIC LIFT (M/S MITA PART NO 34.0592.00.3)	1
27	D10711670.9	BOLT M8X20 ALLEN HYDRAULIC LIFT (M/S MITA PART NO 30.0064.00.0)	3
28	D10711680.9	LEVER HYDRAULIC LIFT (M/S MITA PART NO 14.0018.10.2)	1
29	D10711690.9	SEAL O RING (M/S MITA PART NO 36.0076.00.0)	1
30	D10711700.9	CIRCLIP HYDRAULIC LIFT (M/S MITA PART NO 33.0011.00.0)	2
31	D10711710.9	LEVER DRAFT HYDRAULIC LIFT (M/S MITA PART NO 14.0038.16.0)	1
32	D10711720.9	LEVER POSITION HYDRAULIC LIFT (M/S MITA PART NO 14.0037.16.0)	1
33	D10711730.9	WASHER COPPER 6.4X10X1.0 HYDRAULIC LIFT (M/S MITA PART NO 32.0268.00.0)	2
34	D10711740.9	RING HYDRAULIC LIFT (M/S MITA PART NO 32.0269.00.0)	1
35	D10706390.9	CIRCLIP HYDRAULIC LIFT (M/S MITA PART NO 33.0012.00.0)	1

TABLE-63
CONTROL LEVERS ASSY

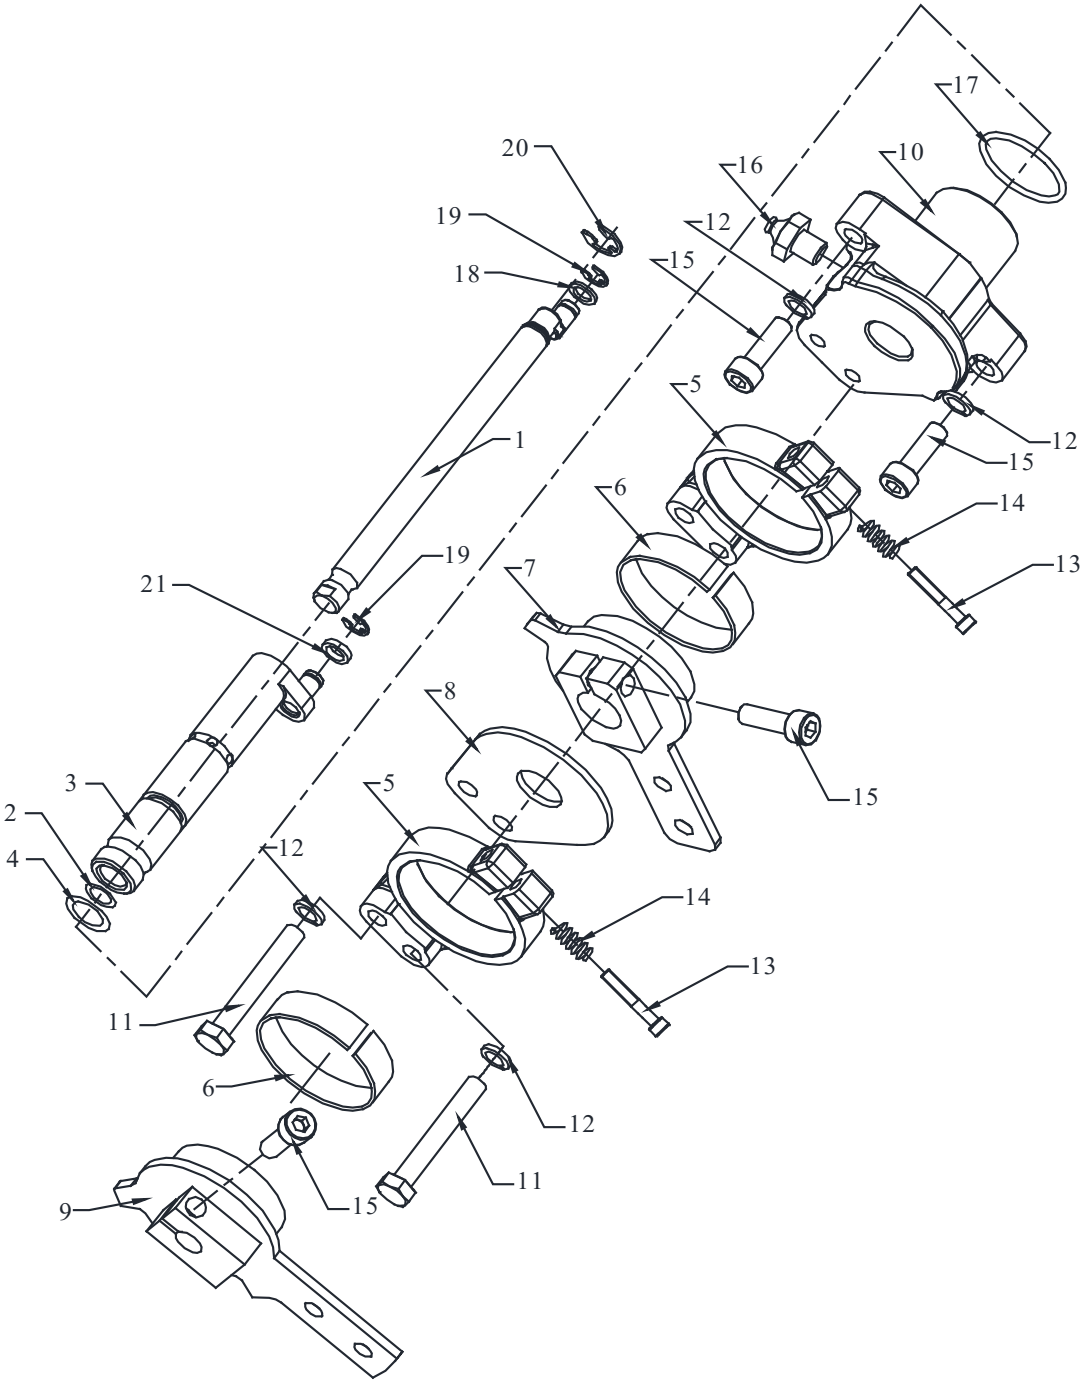


TABLE-63
CONTROL LEVERS ASSY

Fig. No.	Part No.	Description	Qty
1	D10711840.9	SHAFT HYDRAULIC LIFT POSITION CONTROL LEVER (M/S MITA PART NO 16.0075.09.0)	1
2	D10711850.9	SEAL O RING (M/S MITA PART NO 36.0202.00.0)	1
3	D10711860.9	SHAFT HYDRAULIC LIFT DRAFT CONTROL LEVER (M/S MITA PART NO 16.0058.06.2)	1
4	D10711870.9	SEAL O RING (M/S MITA PART NO 36.0035.00.0)	1
5	D10700220.9	PLATE FRICTION HYDRAULIC LIFT CONTROL LEVER (M/S MITA PART NO 160001020)	2
6	D10700210.9	FRICTION DISC HYDRAULIC LIFT CONTROL LEVER (M/S MITA PART NO 160001030)	2
7	D10711880.9	LEVER HYDRAULIC LIFT DRAFT CONTROL (M/S MITA PART NO 16.0180.04.3)	1
8	D10711890.9	FLANGE HYDRAULIC LIFT (M/S MITA PART NO 16.0016.10.3)	1
9	D10711900.9	LEVER HYDRAULIC LIFT POSITION CONTROL (M/S MITA PART NO 16.0118.08.3)	1
10	D10711910.9	QUADRANT HYDRAULIC LIFT (M/S MITA PART NO 16.0073.01.0)	1
11	D10711920.9	BOLT M8X70 HYDRAULIC LIFT (M/S MITA PART NO 30.0267.00.0)	2
12	D10700160.9	WASHER M8 SPRING LOCK (M/S MITA PART NO 320001000)	4
13	D10700170.9	SCREW M6X1.00X40-6.6 HEX HEAD (M/S MITA PART NO 300014000)	2
14	D10700180.9	SPRING HYDRAULIC LIFT CONTROL LEVER PIVOT (M/S MITA PART NO 350008000)	2
15	D10700140.9	SCREW M8X1.25X30-8.8 HEX HEAD (M/S MITA PART NO 300069000)	4
16	D10700500.9	GREASE NIPPLE A M10X1 (M/S MITA PART NO 420002000)	1
17	D10711930.9	SEAL O RING QUADRANT (M/S MITA PART NO 36.0203.00.0)	1
18	D10711630.9	WASHER HYDRAULIC LIFT(M/S MITA PART NO 32.0024.00.0)	1
19	D10700800.9	CIRCLIP HYDRAULIC LIFT (M/S MITA PART NO 330003000)	2
20	D10711700.9	CIRCLIP HYDRAULIC LIFT (M/S MITA PART NO 33.0011.00.0)	1
21	D10711940.9	WASHER HYDRAULIC LIFT (M/S MITA PART NO 32.0267.00.0)	1

TABLE-64
PUMP HYDRAULIC LIFT ASSEMBLY

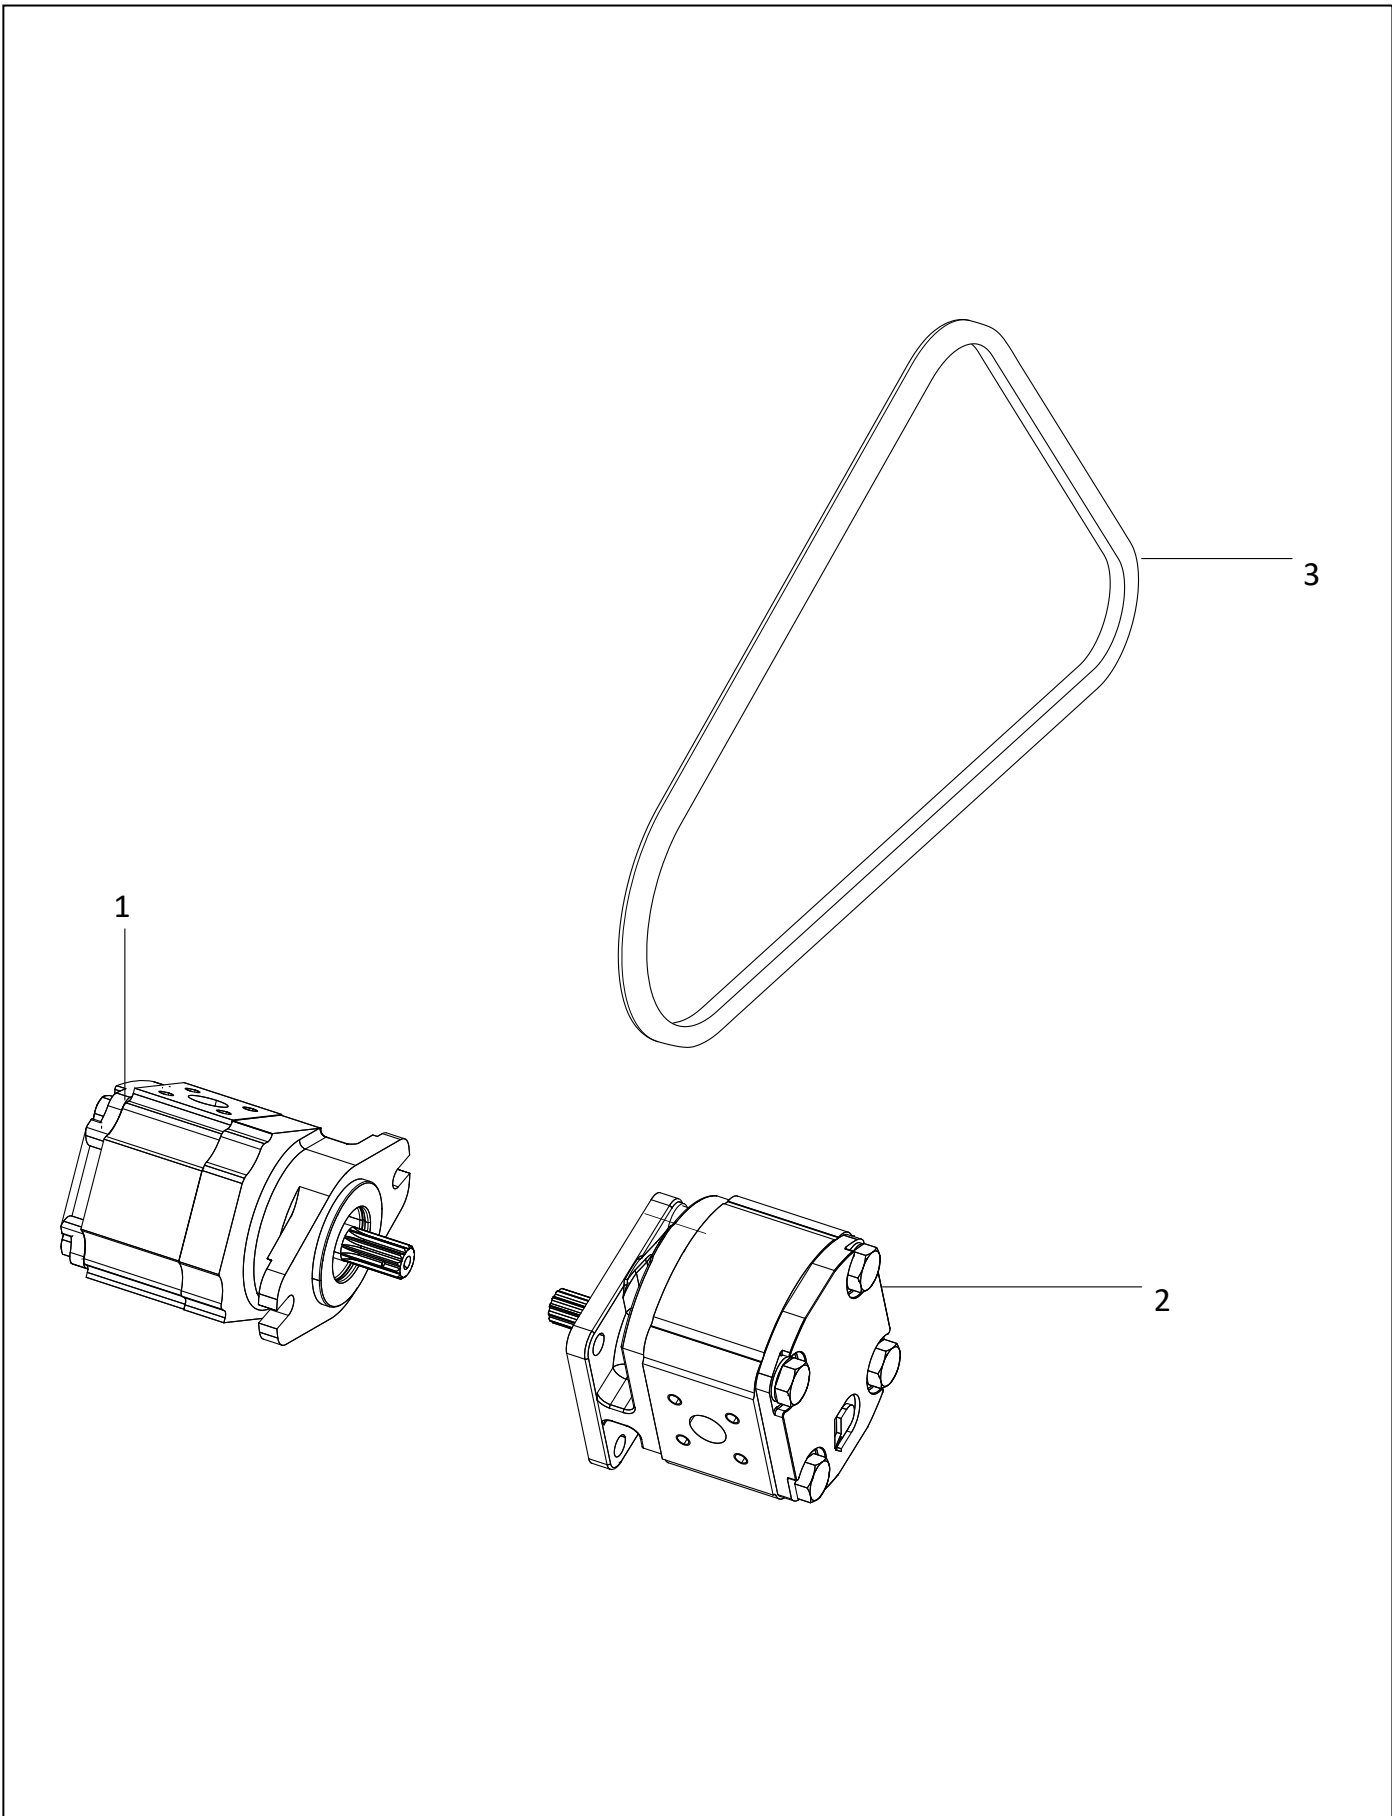


TABLE-65
TUBING HYDRAULIC SUCTION SUBASSEMBLY

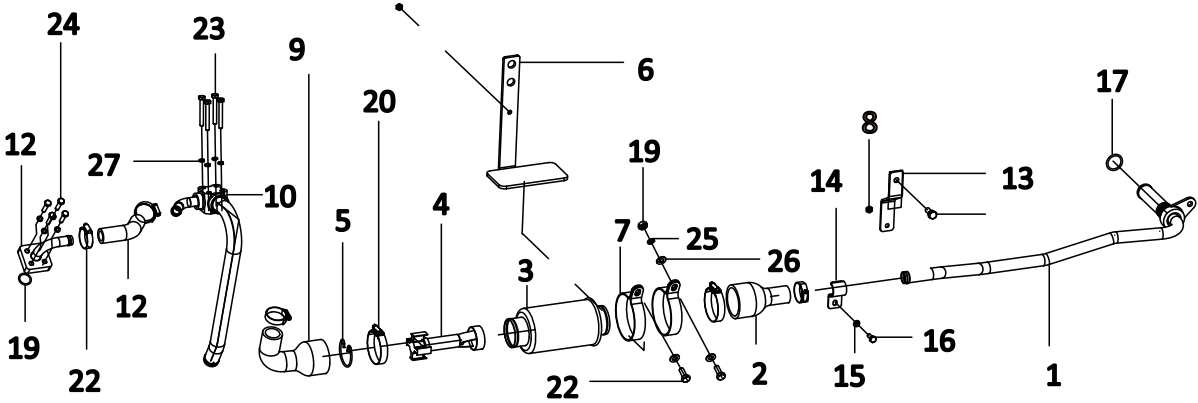


TABLE-65
TUBING HYDRAULIC SUCTION SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10606020.9	TUBE AND STRAINER ASSEMBLY HYDRAULIC SUCTION	1
2	D10606010.9	HOSE HYDRAULIC SUCTION TUBE TO STRAINER	1
3	D10528850.9	STRAINER ASSEMBLY HYDRAULIC OIL 102 LPM	1
4	D10603860.9	STRAINER HYDRAULIC SUCTION (MAGNETIC)	1
5	D10603870.9	CLIP WIRE STRAINER	1
6	D10557960.9	BRACKET ASSEMBLY HYDRAULIC STRAINER MOUNTING	1
7	D10527110.9	CLAMP SUCTION STRAINER HOLDING	2
8	D83500070.9	NUT M6X1.00-6 HEX	1
9	D10603190.9	HOSE HYDRAULIC SUCTION STRAINER TO TUBE	1
10	D10558000.9	TUBE ASSEMBLY HYDRAULIC SUCTION STRAINER TO PUMP	1
11	D10558040.9	HOSE STEERING SUCTION	1
12	D10558050.9	TUBE ASSEMBLY STEERING SUCTION HOSE TO PUMP	1
13	D10606040.9	BRACKET ASSEMBLY SUCTION TUBE HOLDING	1
14	D10606030.9	CLAMP HYDRAULIC SUCTION TUBING	1
15	D85500110.9	WASHER M6 FLAT	1
16	D81500360.9	BOLT M6X1.00X16-9.8 HEX HEAD	1
17	D10016350.9	SEAL O RING 2.65X25.00	1
18	D93601170.9	SEAL O RING 2.0X19	2
19	D83500060.9	NUT M8X1.25-6 HEX	2
20	D10330480.9	CLAMP HOSE WORM DRIVE 60MM	2
21	D10013970.9	CLAMP HOSE 35A	4
22	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	4
23	D81501760.9	BOLT M6X1.00X45-10.9 HEX HEAD	4
24	D81500270.9	BOLT M6X1.00X25-9.8 HEX HEAD	4
25	D86500030.9	WASHER M8 SPRING LOCK	4
26	D85500050.9	WASHER M8 FLAT	4
27	D86500040.9	WASHER M6 SPRING LOCK	8

TABLE-66
TUBING AUXILLARY VALVE SUBASSEMBLY

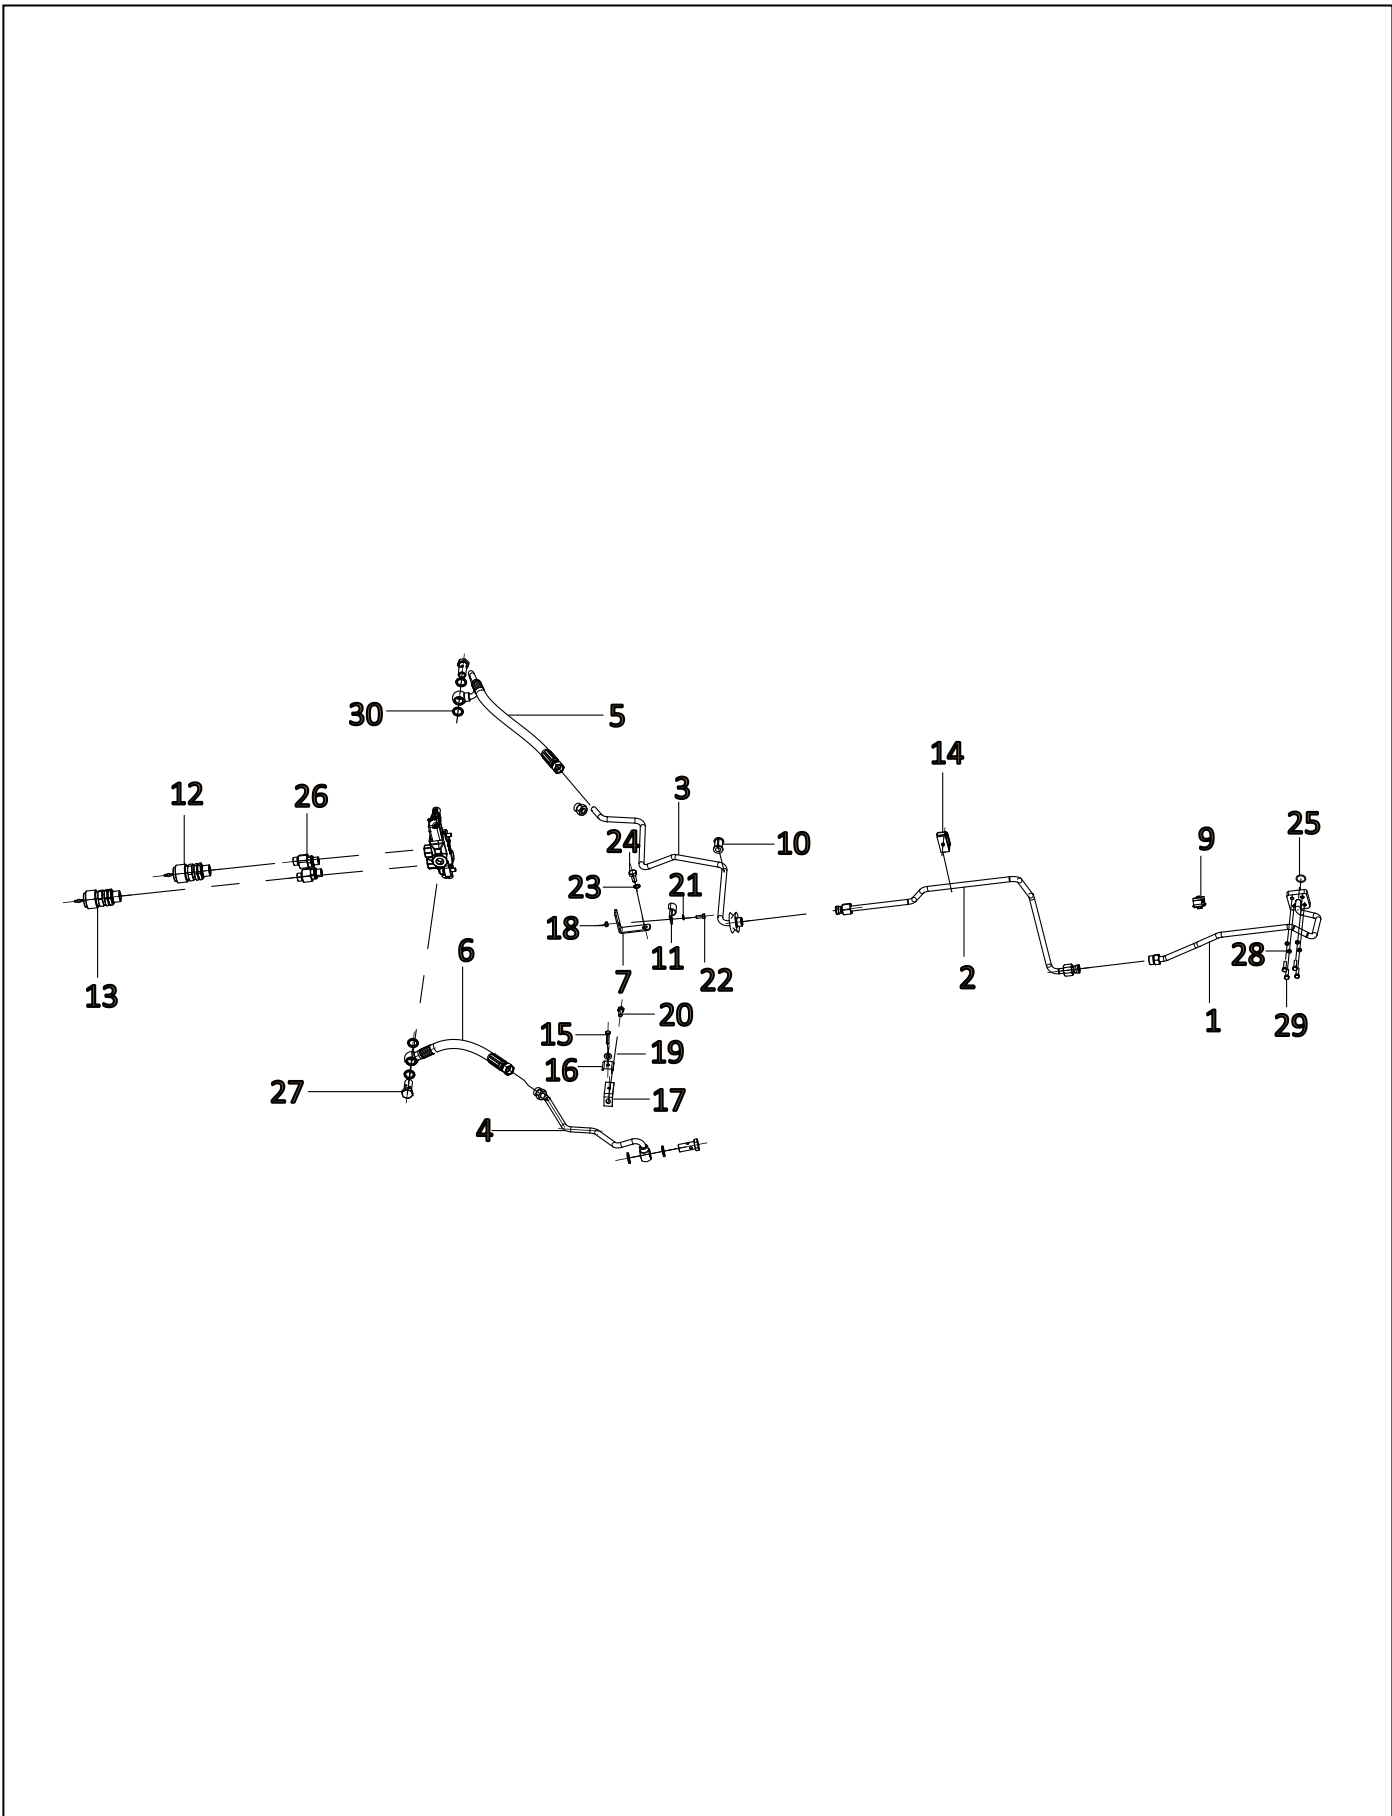


TABLE-66
TUBING AUXILLARY VALVE SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10607360.9	TUBE ASSEMBLY HYDRAULIC PRESSURE TANDEM PUMP TO CONNECTOR	1
2	D10607340.9	TUBE ASSEMBLY HYDRAULIC PRESSURE CONNECTOR FRONT	1
3	D10869930.9	TUBE ASSEMBLY HYDRAULIC PRESSURE CONNECTOR	1
4	D10869910.9	TUBE ASSEMBLY SPOOL VALVE TO HYDRAULIC LIFT	1
5	D10565330.9	HOSE ASSEMBLY HYDRAULIC PRESSURE CONNECTOR TO SPOOL VALVE INLET	1
6	D10565340.9	HOSE ASSEMBLY SPOOL VALVE TO HYDRAULIC LIFT	1
7	D10609280.9	BRACKET ASSEMBLY HYDRAULIC TUBE HOLDING	1
8	D83500070.9	NUT M6X1.00-6 HEX	1
9	D10408760.9	CLAMP ASSEMBLY TUBING HYDRAULIC PRESSURE	1
10	D10413940.9	GROMMET TUBE RETURN STEERING MOTOR TO RESERVOIR	1
11	D10548020.9	CLAMP TUBE HOLDING DIA 12	1
12	D10193330.9	COUPLING ASSEMBLY VALVE HYDRAULIC REMOTE (POPPET TYPE)	1
13	D10193340.9	COUPLING ASSEMBLY VALVE HYDRAULIC REMOTE (POPPET TYPE)	1
14	D10402170.9	CLAMP ASSEMBLY TUBING HYDRAULIC PRESSURE 1	1
15	D10466130.9	BOLT M6X30-5.8 HEX HEAD (FTES SRUBA M6X30-5.8)	1
16	D10587620.9	CLAMP ASSEMBLY HYDRAULIC PRESSURE	1
17	D10587630.9	BRACKET ASSEMBLY HYDRAULIC PRESSURE TUBE HOLDING	1
18	D83500070.9	NUT M6X1.00-6 HEX	1
19	D85500050.9	WASHER M8 FLAT	1
20	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	1
21	D85500110.9	WASHER M6 FLAT	1
22	D81500360.9	BOLT M6X1.00X16-9.8 HEX HEAD	1
23	D86500050.9	WASHER M10 SPRING LOCK	1
24	D81500200.9	BOLT M10X1.50X20-6.6 HEX HEAD	1
25	D93601170.9	SEAL O RING 2.0X19	1
26	D10514960.9	ADAPTOR 3/4"-16 UNF AND M18X1.50 (S TYPE)	2
27	D10174960.9	BOLT BANJO M18X1.50	3
28	D86500040.9	WASHER M6 SPRING LOCK	4
29	D81500270.9	BOLT M6X1.00X25-9.8 HEX HEAD	4
30	D10174950.9	SEAL BANJO BOLT DISTRIBUTOR TO CYLINDER TUBE	6

TABLE-67
LINKAGE THREE POINT COMPACT TRACTOR SUBASSEMBLY

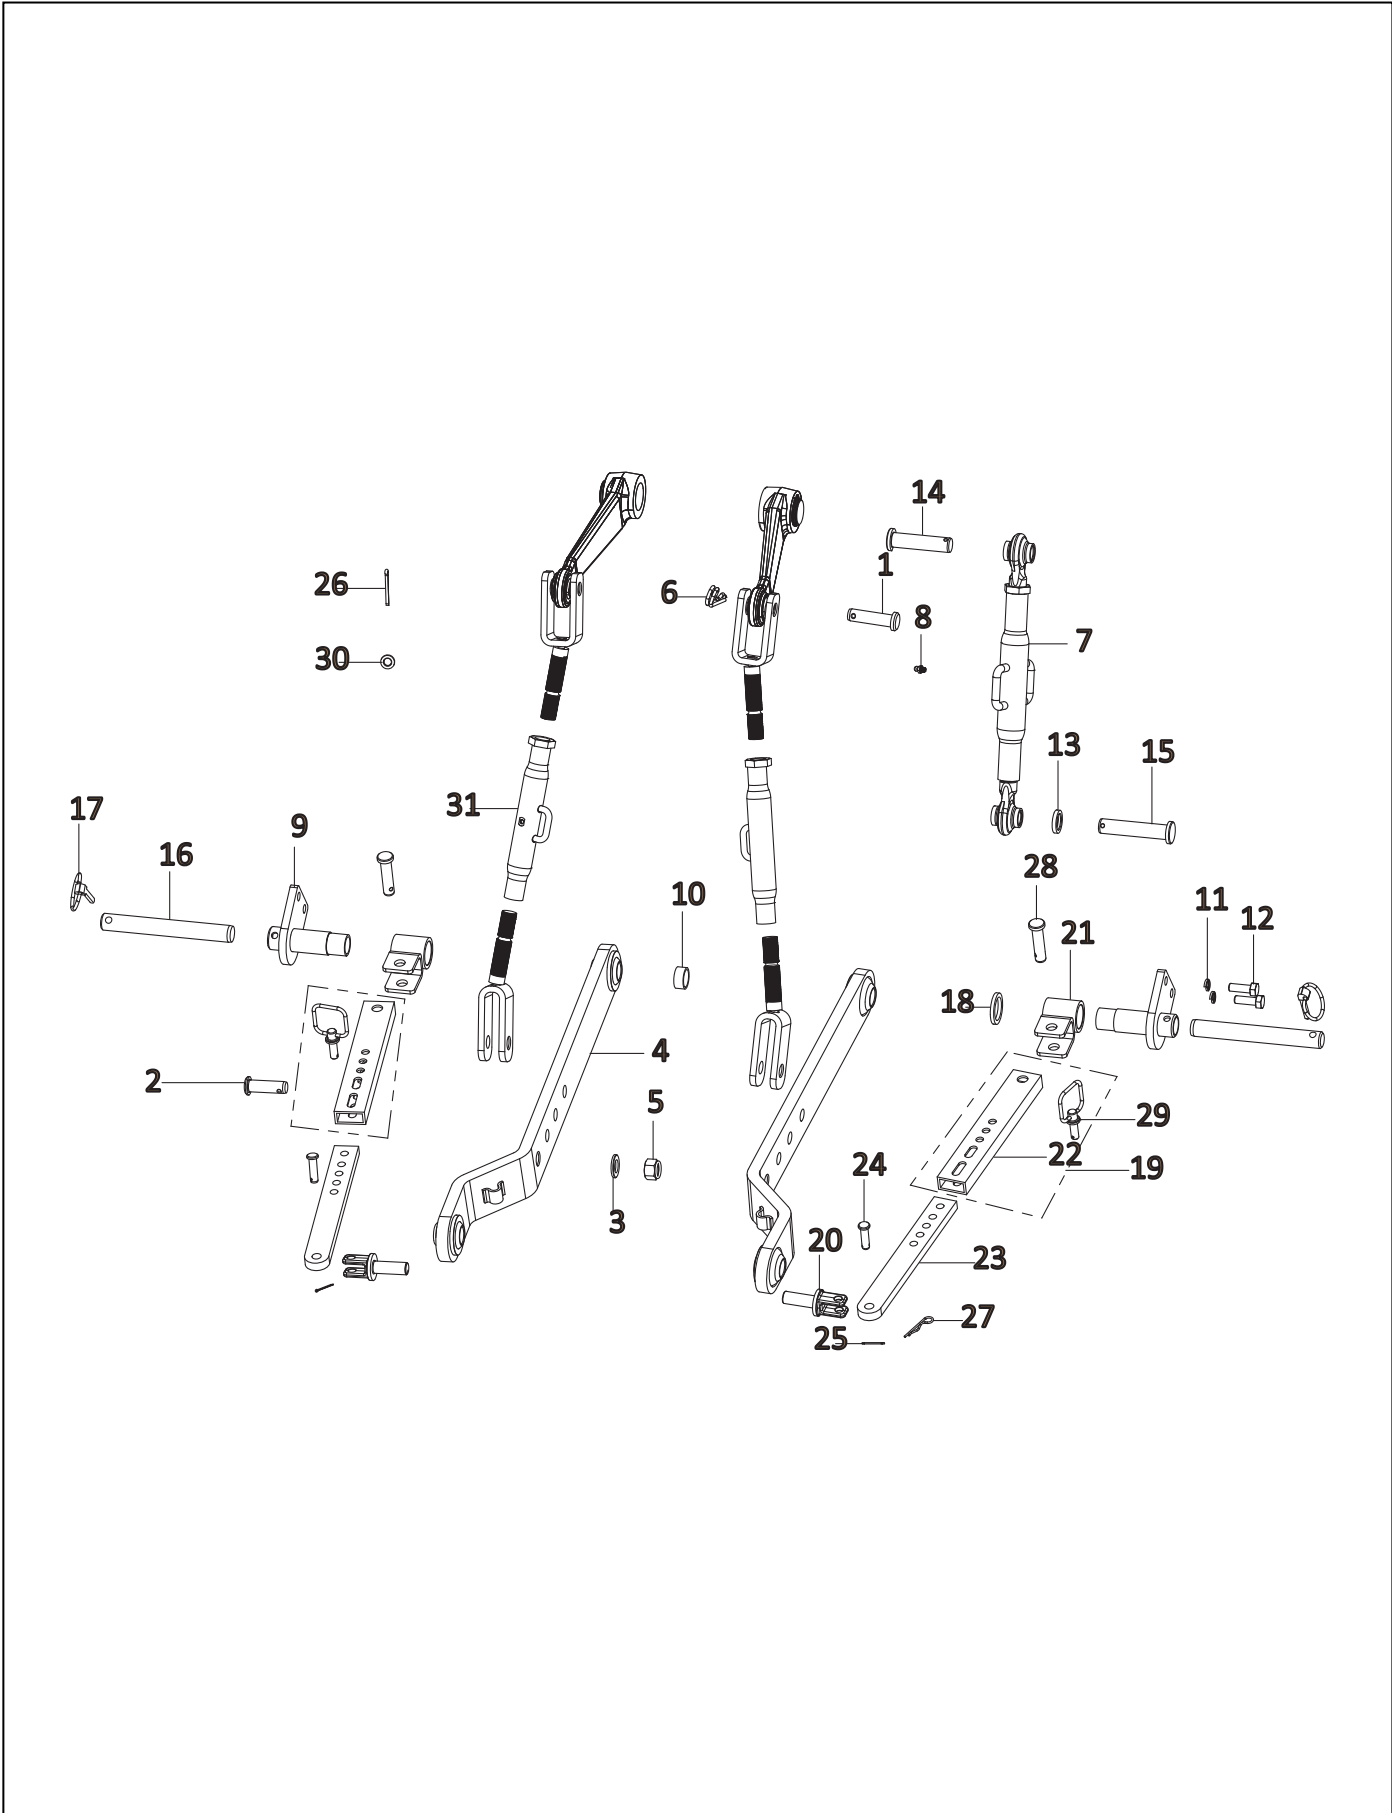


TABLE-67**LINKAGE THREE POINT COMPACT TRACTOR SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D10549080.9	PIN UPPER HYDRAULIC LIFT LEVELING	2
2	D10549090.9	PIN LOWER HYDRAULIC LIFT LEVELING	2
3	D85500020.9	WASHER M16 FLAT	2
4	D10549100.9	LINK ASSEMBLY HYDRAULIC LOWER LINK	2
5	D83500980.9	NUT M16X2.0X8.8 HEX NYLOCK	2
6	D87500530.9	PIN 4.0X75 SPRING R TYPE DOUBLE COIL (IS:6483)	6
7	D10551090.9	LINK ASSEMBLY HYDRAULIC LIFT UPPER	1
8	D92500010.9	GREASE NIPPLE B M6	3
9	D10773380.9	PIN ASSEMBLY LOWER LINK MOUNTING	2
10	D10551310.9	WASHER M23X12.5 LOWER LINK MOUNTING	2
11	D86500050.9	WASHER M10 SPRING LOCK	4
12	D81502320.9	BOLT M10X1.50X30-10.9 HEX HEAD	4
13	D85500470.9	WASHER M20X30X5.0 FLAT	2
14	D10554400.9	PIN HYDRAULIC LIFT UPPER	1
15	D10674130.9	PIN HYDRAULIC LIFT UPPER	1
16	D10773400.9	PIN LOWER LINK MOUNTING	2
17	D10212630.9	PIN LYNCH LOCKING ASSEMBLY	2
18	D10551300.9	WASHER M30X4.5 LOWER LINK MOUNTING	2
19	D10551180.9	STAY BAR ASSEMBLY (RECTANGLE TYPE)	2
20	D10710000.9	BOLT EYE STAY BAR	2
21	D10551210.9	BRACKET PIVOT STAY BAR RECTANGLE TYPE	2
22	D10551190.9	CHANNEL OUTER HOLLOW STAY BAR RECTANGLE TYPE	2
23	D10551200.9	CHANNEL INNER SOLID STAY BAR RECTANGLE TYPE	2
24	D10551220.9	PIN PIVOT STAY BAR	2
25	D88400220.9	PIN 2.5X25.0 COTTER (ZINC PLATED)	2
26	D88400090.9	PIN 4.0X40.0 COTTER	2
27	D87500500.9	PIN 2X51 SPRING R TYPE (IS:6483)	2
28	D10553020.9	PIN U BOLT STAY BAR	2
29	D10551240.9	PIN AND RING ASSEMBLY STAY BAR	2
30	D85500870.9	WASHER M10 FLAT DIA 18	2
31	D10549000.9	ROD ASSEMBLY HYDRAULIC LIFT LEVELING	2

TABLE-68
HITCH REAR SWINGING DRAWBAR SUBASSEMBLY

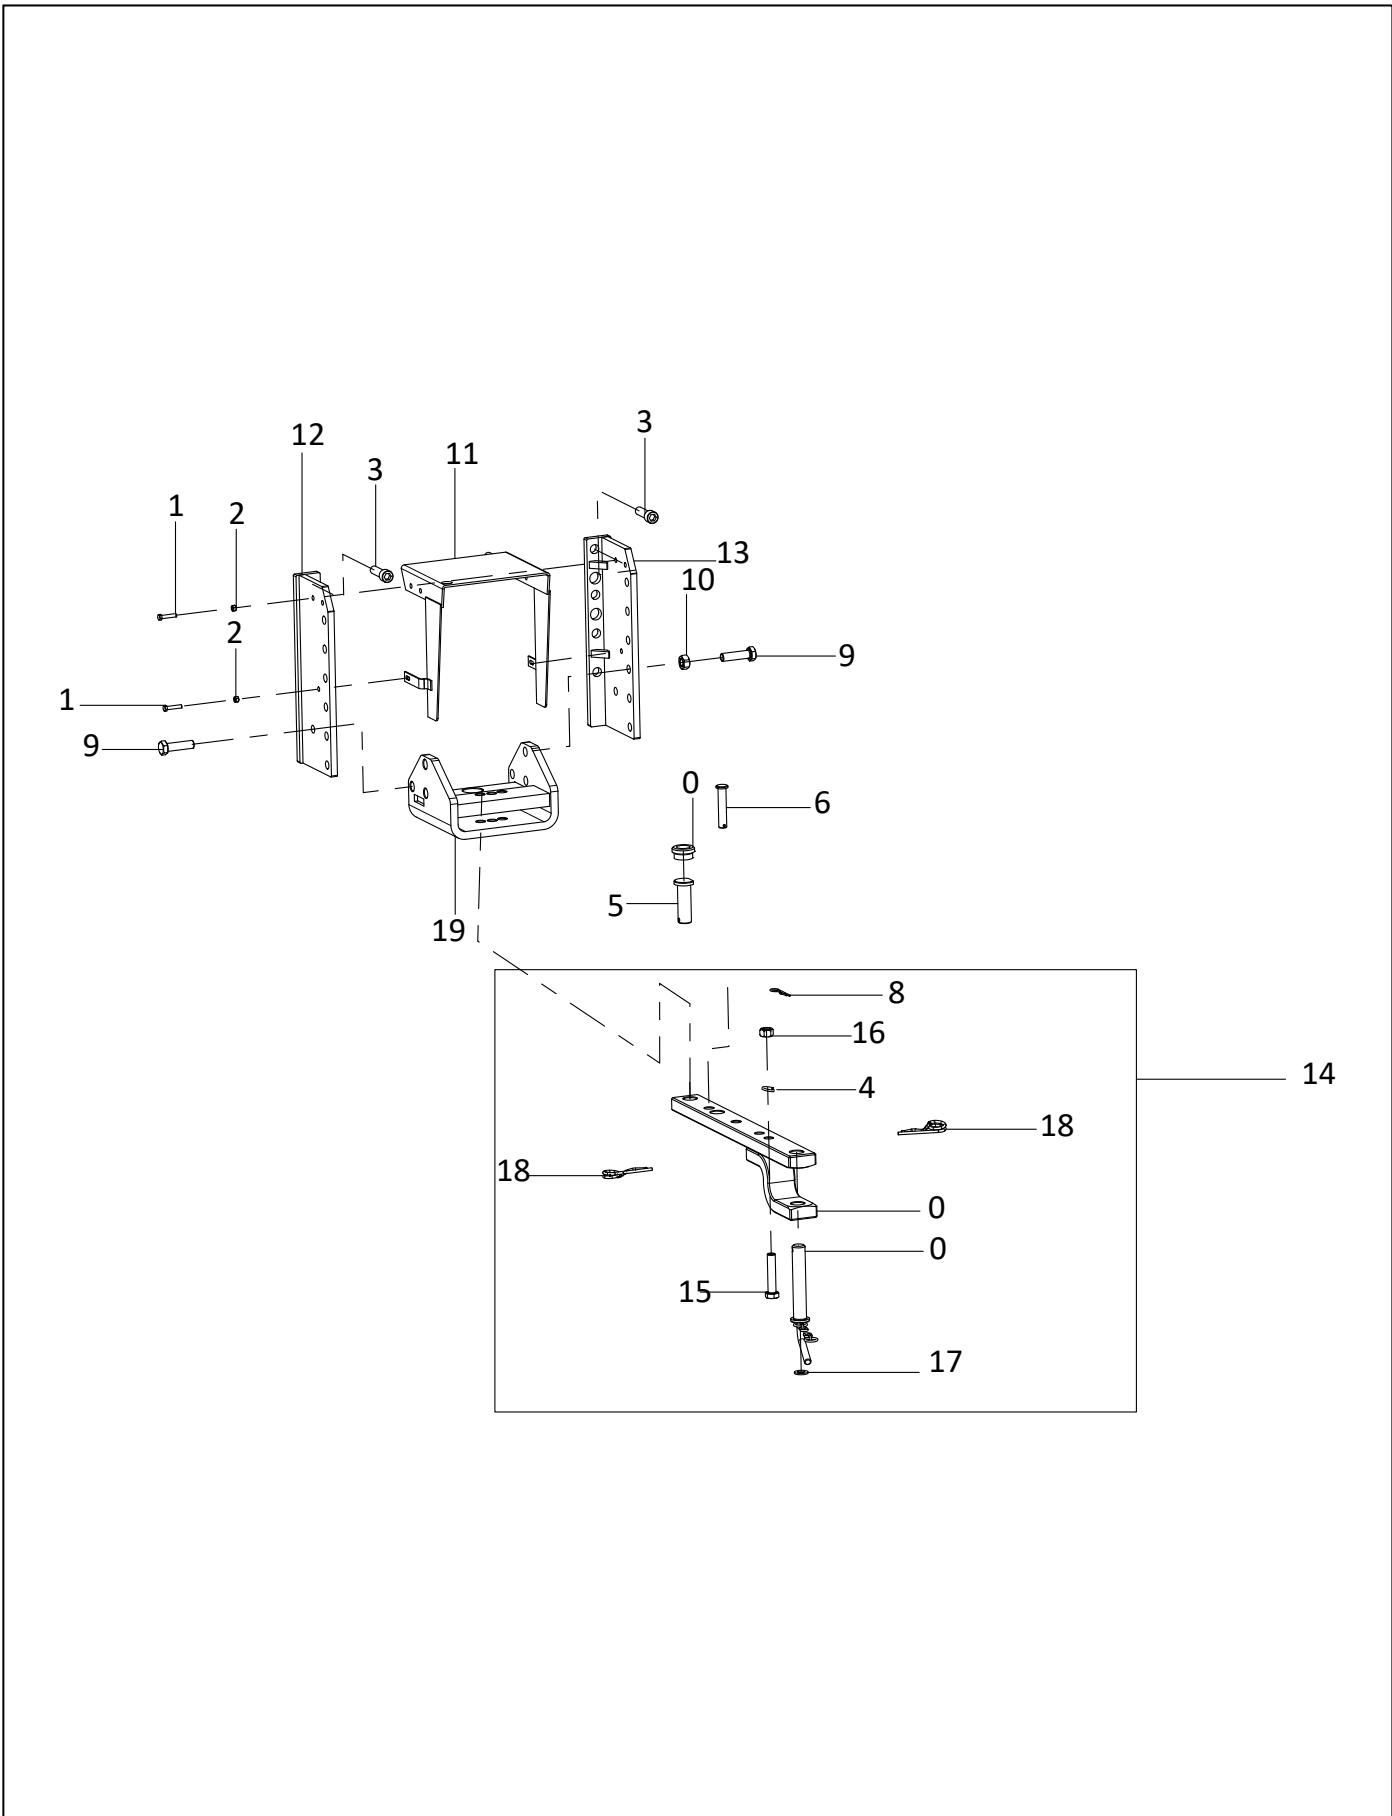


TABLE-68**HITCH REAR SWINGING DRAWBAR SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D82500600.9	BOLT M5X0.80X25-8.8 HEX HEAD	6
2	D83500010.9	NUT M5X0.8-6 PLATED	2
3	D81503350.9	BOLT M12X1.75X40-10.9 ALLEN	8
4	D86500020.9	WASHER M12 SPRING LOCK	14
5	D10550270.9	PIN LOADING SWINGING DRAWBAR MOUNTING	1
6	D10550280.9	PIN GUIDING SWINGING DRAWBAR MOUNTING	1
7	D87500530.9	PIN 4.0X75 SPRING R TYPE DOUBLE COIL (IS:6483)	1
8	D87500500.9	PIN 2X51 SPRING R TYPE (IS:6483)	1
9	D10007150.9	BOLT M12X1.75X45-10.9 HEX HEAD	6
10	D83500760.9	NUT M12X1.75-6 HEX (GRADE 10.9)	6
11	D10549940.9	GUARD PTO ASSEMBLY	1
12	D83500010.9	NUT M5X0.8-6 PLATED	4
13	D10550010.9	BRACKET ASSEMBLY TOW HOOK MOUNTING RH	1
14	D10550000.9	BRACKET ASSEMBLY TOW HOOK MOUNTING LH	1
15	D10550150.9	SWINGING DRAWBAR ASSEMBLY	1
16	D81500700.9	BOLT M12X1.75X60	2
17	D83500290.9	NUT M12X1.75 HEX	2
18	D86500020.9	WASHER M12 SPRING LOCK	2
19	D85500140.9	WASHER M10 FLAT	1
20	D87500530.9	PIN 4.0X75 SPRING R TYPE DOUBLE COIL (IS:6483)	1
21	D10550220.9	BRACKET SWINGING DRAWBAR MOUNTING ASSEMBLY	1

TABLE-69
HARNESS SUBASSEMBLY

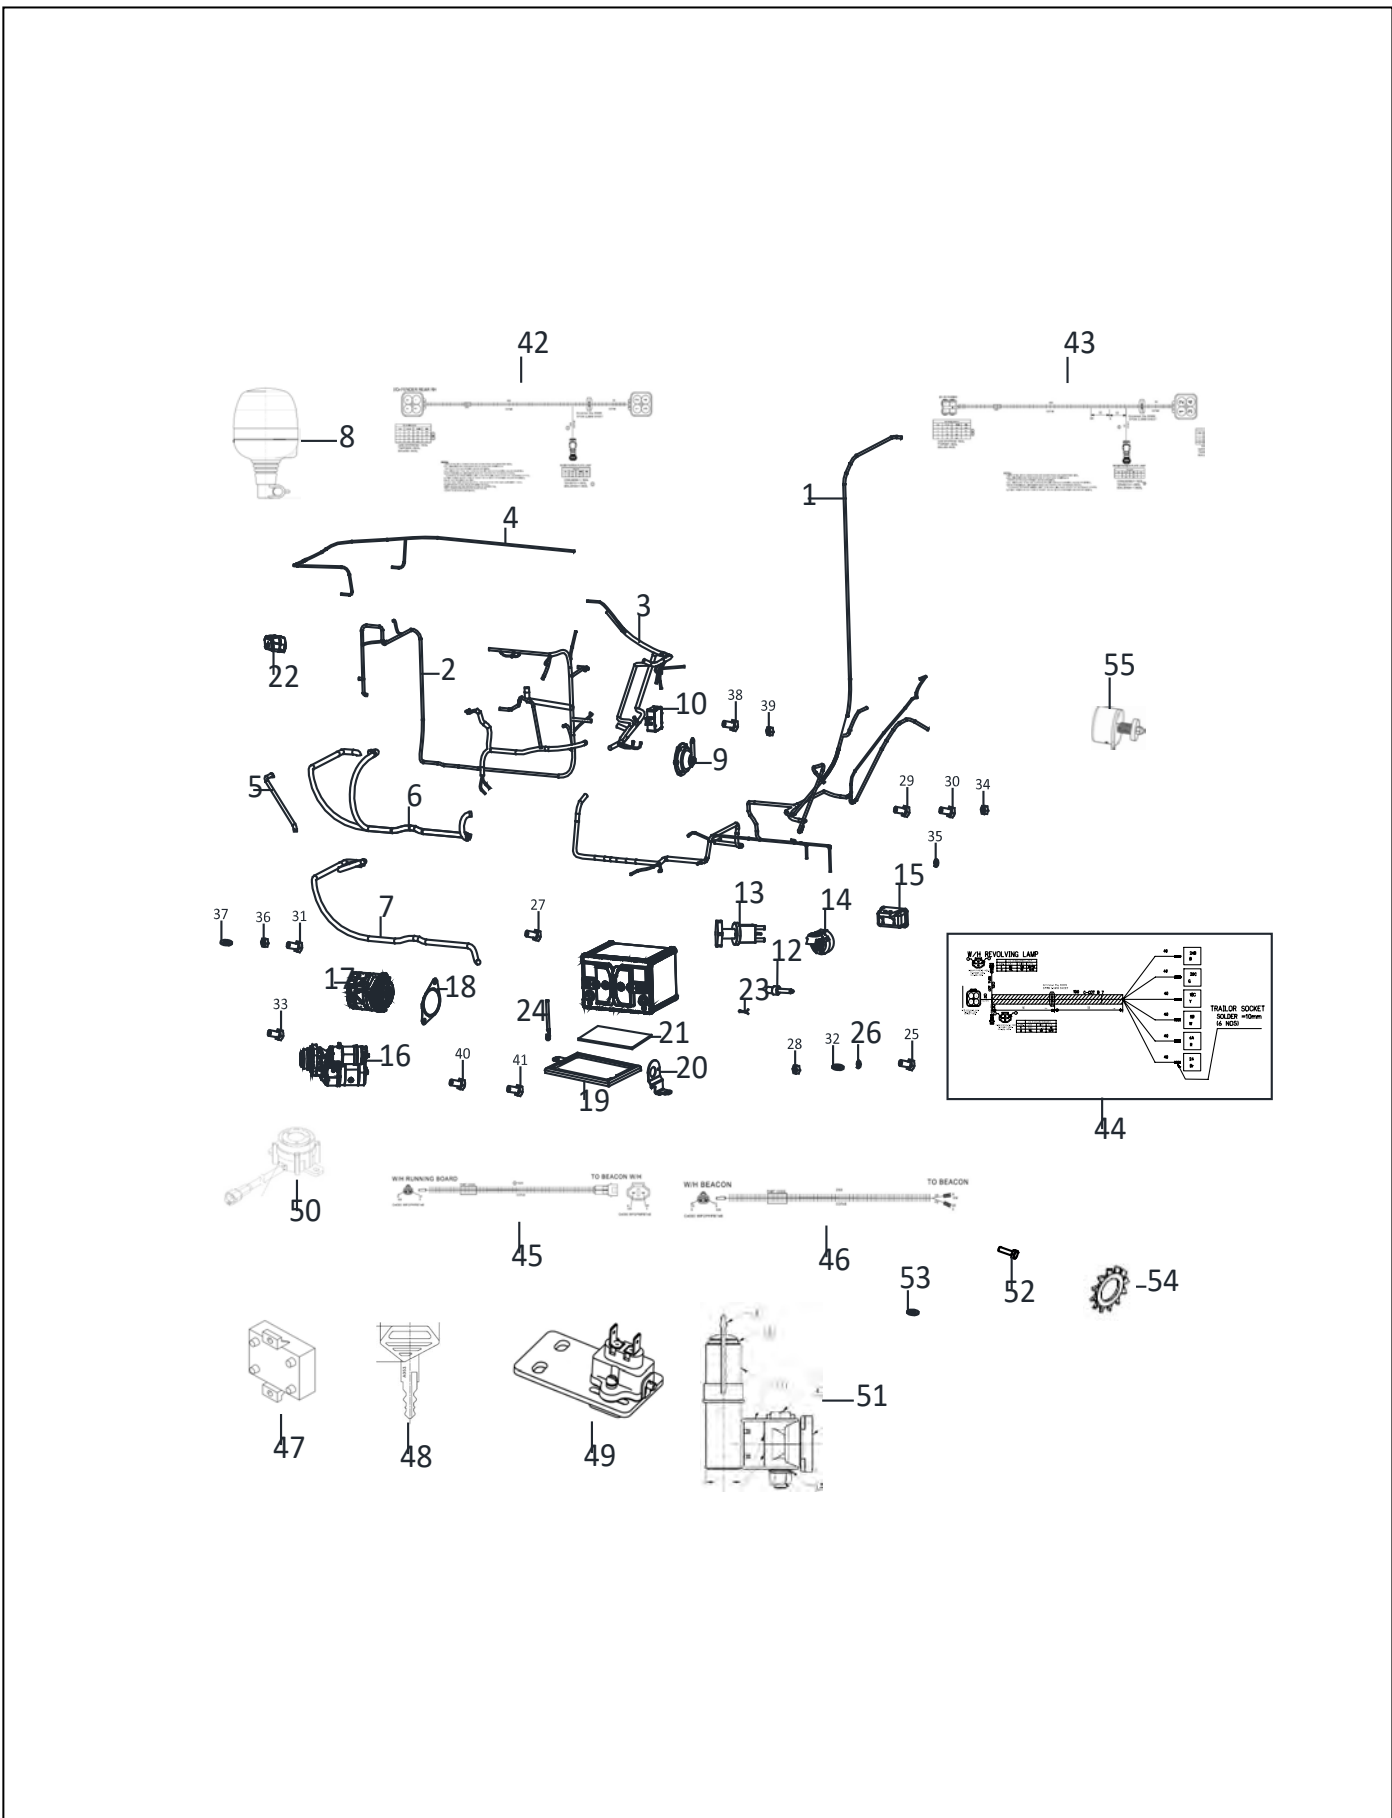


TABLE-69
HARNESS SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10609170.9	HARNESS ASSEMBLY INSTRUMENT PANEL TO RUNNING BOARD	1
2	D10566850.9	HARNESS ASSEMBLY MAIN	1
3	D10612710.9	HARNESS ASSEMBLY INSTRUMENT PANEL	1
4	D10566880.9	HARNESS ASSEMBLY PROJECTOR LAMP	1
5	D10561440.9	CABLE ASSEMBLY BATTERY TO STARTER GROUND	1
6	D10569020.9	CABLE ASSEMBLY BATTERY ISOLATOR TO STARTER SOLENOID	1
7	D10569030.9	CABLE ASSEMBLY BATTERY POSITIVE TO ISOLATOR	1
8	D10492030.9	BEACON LAMP	1
9	D10028020.9	HORN AND BRACKET ASSEMBLY	1
10	D10531210.9	FLASHER ASSEMBLY INDICATOR LIGHT	1
12	D10768850.9	UNIT CRUISE CONTROLLER	1
13	D10480920.9	ISOLATOR ASSEMBLY BATTERY	1
14	D10135490.9	SOCKET ASSEMBLY TRAILER ELECTRICAL	1
15	D10301710.9	CONTROL UNIT ASSEMBLY GLOW PLUG	1
16	D10520220.9	STARTER MOTOR ASSEMBLY	1
17	D10520230.9	ALTERNATOR ASSEMBLY (42 AMPERE)	1
18	D10524980.9	GASKET STARTER MOTOR	1
19	D10584540.9	BRACKET ASSEMBLY TOP BATTERY HOLD	1
20	D10568430.9	BRACKET BATTERY CUTOFF SWITCH MOUNTING	1
21	D10547100.9	RUBBER PAD BATTERY SUPPORT	1
22	D10589150.9	LAMP ASSEMBLY VEHICLE REGISTRATION PLATE	1
23	D10013470.9	PIN 1/8"X1.00" COTTER	1
24	D10547090.9	ROD BATTERY HOLD DOWN	2
25	D81501420.9	BOLT M8X1.25X15 HEX HEAD	2
26	D86500030.9	WASHER M8 SPRING LOCK	1
27	D81500340.9	BOLT M6X1.00X35-8.0 HEX HEAD	1
28	D10017930.9	NUT M6X1.00 HEX NYLOCK	1
29	D82500220.9	SCREW M6X1.00X15-8.8 HEX HEAD	2
30	D82501120.9	SCREW M5X0.80X16-6.6 HEX HEAD	1
31	D10101750.9	BOLT M10X1.50X25-8.8 HEX HEAD	3
32	D10525010.9	SPACER ALTERNATOR ADJUSTMENT	1
33	D81500470.9	BOLT M10X1.50X115 HEX HEAD	1
34	D83500090.9	NUT M10X1.50-8 HEX	2
35	D86500050.9	WASHER M10 SPRING LOCK	4
36	D85000040.9	WASHER 5/16" FLAT	2
37	D85500090.9	WASHER M5 FLAT	3
38	D10216680.9	SCREW M5X0.80X20 CROSS RECESSED PAN HEAD	3
39	D83500190.9	NUT M5X0.80 NYLOCK HEX	3
40	D82500920.9	SCREW M5X0.8X15 ALLEN	2
41	D82500670.9	SCREW 3.5X16 PAN HEAD TAPPING (ISO 1481)	2

TABLE-69
HARNESS SUBASSEMBLY

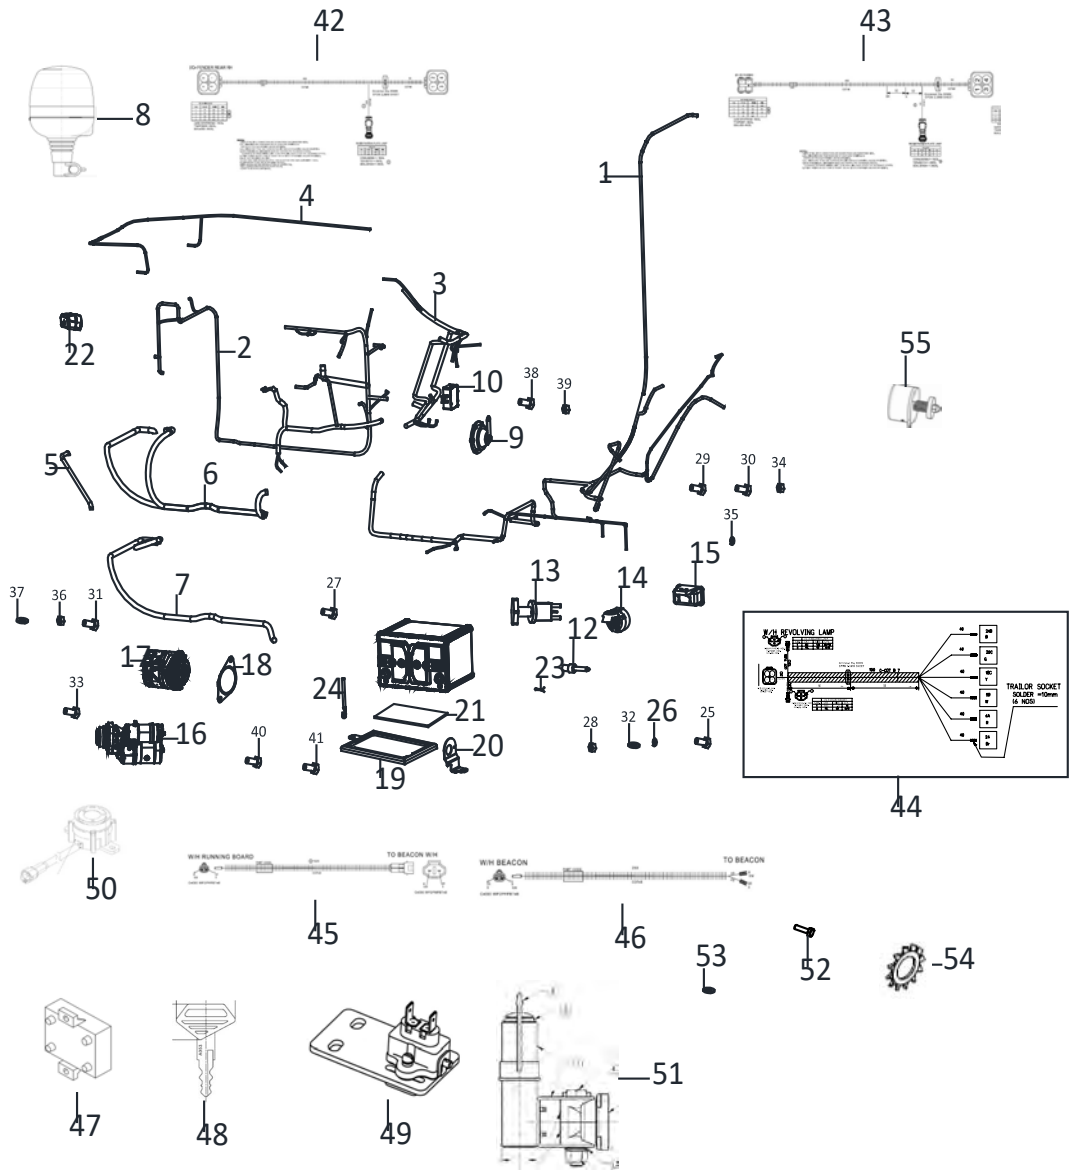


TABLE-69
HARNESS SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
42	D10566920.9	HARNESS ASSEMBLY FENDER RH	1
43	D10566910.9	HARNESS ASSEMBLY FENDER LH	1
44	D10668190.9	HARNESS TRAILER SOCKET	1
45	D10566890.9	HARNESS ASSEMBLY RUNNING BOARD TO BEACON LAMP	1
46	D10566900.9	HARNESS ASSEMBLY PIGTAIL BEACON LAMP	1
47	D10744970.9	UNIT ENGINE SHUT OFF CONTROLLER TIMER (SEAT AND PARK OPC)	1
48	D10786890.9	KEY IGNITION LOCK FARMTRAC	1
49	D10513610.9	SWITCH ASSEMBLY STOP LAMP (SPRING TYPE)	1
50	D10645940.9	BUZZER ASSEMBLY	1
51	D10523390.9	BRACKET ASSEMBLY BEACON	4
52	D81502010.9	BOLT M4X20-6.8 HEX HEAD	4
53	D85500190.9	WASHER M4.0 FLAT	1
54	D86000090.9	WASHER 1/4 LOCK EXTERNAL TOOTH	1
55	D10768860.9	CRUISE CONTROL SOLENOID	1

TABLE-70
HOOD FRONT SUBASSEMBLY

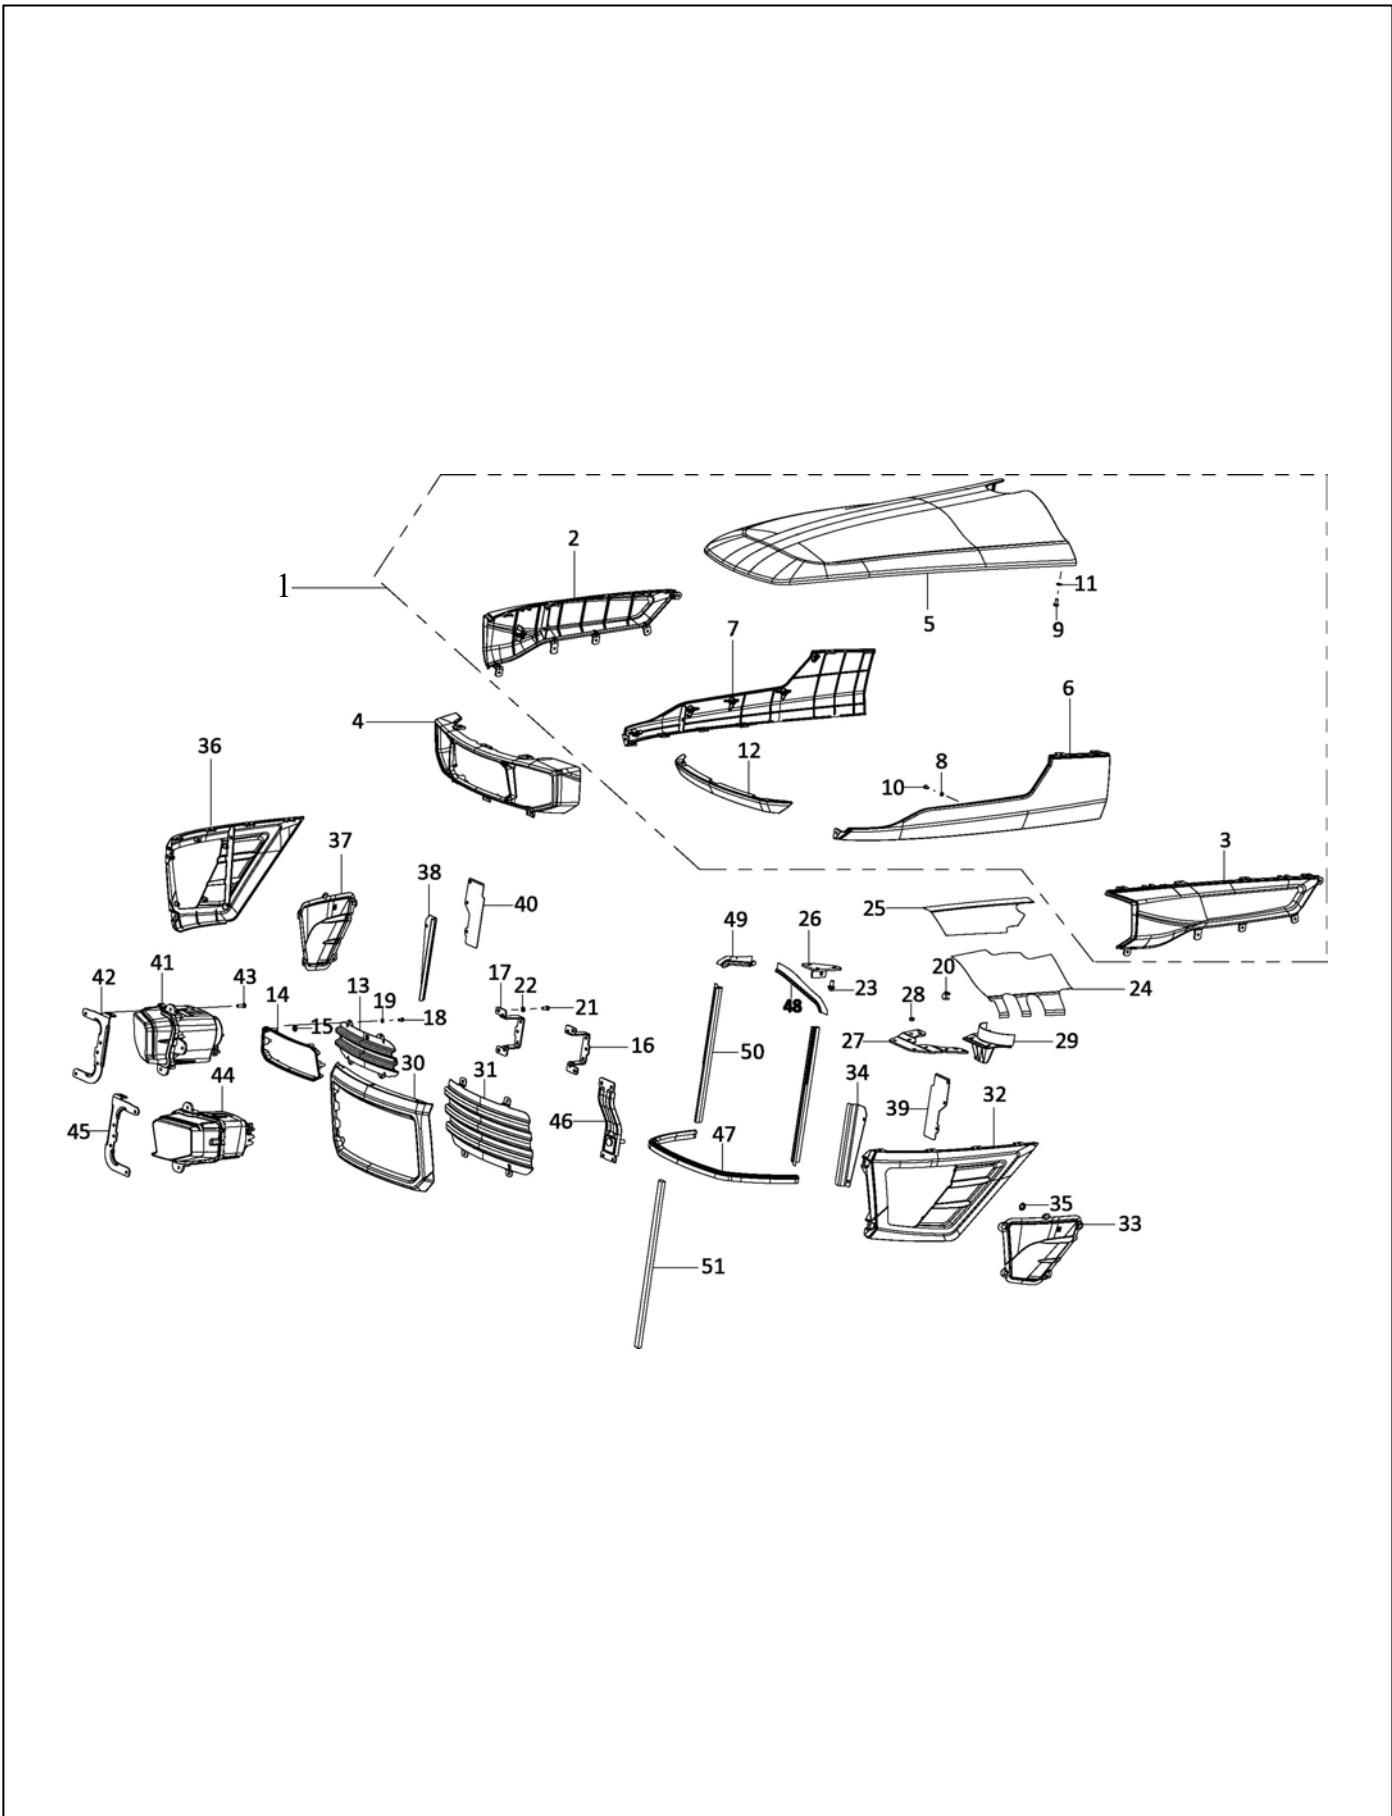


TABLE-70**HOOD FRONT SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D10563880.9	HOOD TOP FRONT ASSEMBLY	1
2	D10563930.9	PANEL CLADDING HOOD SIDE RH	1
3	D10563920.9	PANEL CLADDING HOOD SIDE LH	1
4	D10563950.9	FRAME HEAD LAMP	1
5	D10563890.9	PANEL HOOD TOP	1
6	D10563900.9	PANEL HOOD SIDE LH	1
7	D10563910.9	PANEL HOOD SIDE RH	1
8	D10777370.9	WASHER M5 HOOD TOP FRONT	19
9	D10392470.9	SCREW M6 CROSS RECESSED	15
10	D82501160.9	SCREW M5X0.80X10 CROSS RECESSED PAN HEAD	19
11	D10777380.9	WASHER M6 HOOD TOP FRONT	11
12	D10563940.9	PANEL HOOD FRONT MIDDLE	1
13	D10559820.9	MESH TOP FRONT	1
14	D10563960.9	BEZEL HOOD FRONT CHROME	1
15	D85500550.9	WASHER STAR LOCK 6.0 DIA	6
16	D10575660.9	BRACKET HEAD LAMP MOUNTING FRAME LOWER LH	1
17	D10575670.9	BRACKET HEAD LAMP MOUNTING FRAME LOWER RH	1
18	D82500030.9	SCREW M5X0.80X10-6.6 HEX HEAD	4
19	D85500090.9	WASHER M5 FLAT	4
20	D10568750.9	CLAMP WIRING HARNESS	6
21	D82500220.9	SCREW M6X1.00X15-8.8 HEX HEAD	30
22	D85500040.9	WASHER M6 FLAT	62
23	D81501580.9	BOLT M8X1.25X16 HEX HEAD FLANGED	7
24	D10576960.9	SHEET HEAT INSULATION HOOD TOP PANEL	1
25	D10576970.9	SHEET HEAT INSULATION HOOD SIDE PANEL LH	1
26	D10659950.9	BRACKET ASSEMBLY GAS STRUT MOUNTING FRONT	1
27	D10662370.9	BRACKET HINGE TOP FRONT HOOD	1
28	D83500220.9	NUT M6X1.00-5 HEX	13
29	D10808860.9	COVER AIR DEFLECTOR HOOD FRONT	1
30	D10563990.9	PANEL HOOD FRONT LOWER	1
31	D10559790.9	MESH LOWER FRONT	1
32	D10563970.9	PANEL HOOD FRONT LOWER SIDE LH	1
33	D10559800.9	MESH SIDE LH	1
34	D10568050.9	BRACKET RADIATOR SEALING SIDE LOWER LH	1
35	D85500560.9	WASHER STAR LOCK 10.0 DIA	10
36	D10563980.9	PANEL HOOD FRONT LOWER SIDE RH	1
37	D10559810.9	MESH SIDE RH	1
38	D10568060.9	BRACKET RADIATOR SEALING SIDE LOWER RH	1
39	D10568030.9	BRACKET RADIATOR SEALING SIDE UPPER LH	1
40	D10568040.9	BRACKET RADIATOR SEALING SIDE UPPER RH	1

TABLE-70
HOOD FRONT SUBASSEMBLY

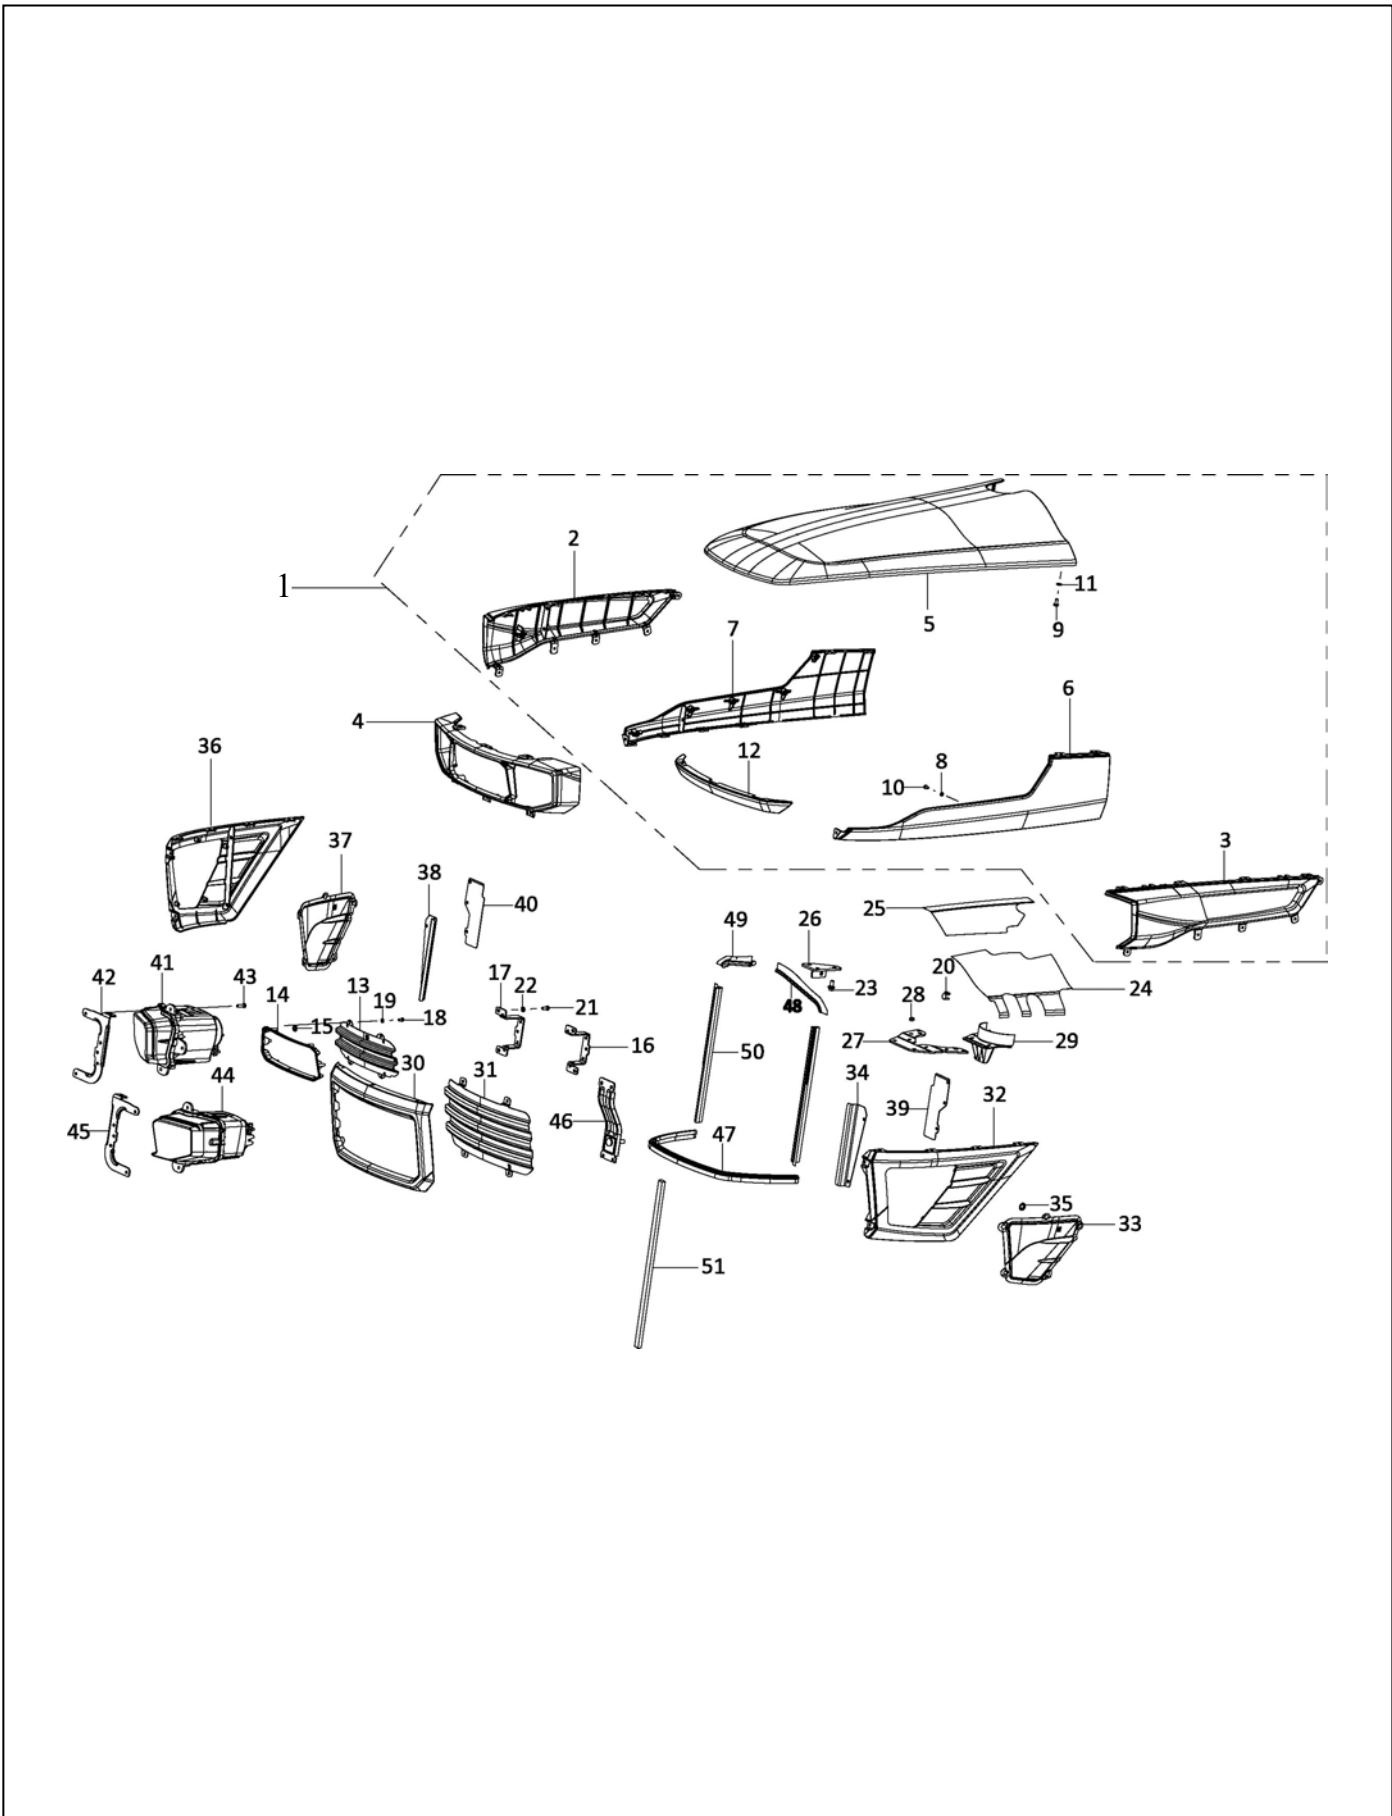


TABLE-70
HOOD FRONT SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
41	D10570600.9	HEAD LAMP ASSEMBLY LHD (RH)	1
42	D10575650.9	BRACKET HEAD LAMP MOUNTING FRAME RH	1
43	D10034950.9	SCREW M6X1.00X20-6.6 HEX HEAD	17
44	D10570590.9	HEAD LAMP ASSEMBLY LHD (LH)	1
45	D10575640.9	BRACKET HEAD LAMP MOUNTING FRAME LH	1
46	D10562250.9	BRACKET ASSEMBLY PIN MOUNTING LATCH HOOD	1
47	D10568390.9	BEADING FRONT HOOD LOWER	1
48	D10568350.9	BEADING RADIATOR SEALING TOP LH	1
49	D10568360.9	BEADING RADIATOR SEALING TOP RH	1
50	D10568370.9	BEADING RADIATOR SEALING SIDE	2
51	D10573740.9	FOAM SEALING HEAD LAMP	2

TABLE-71
LATCH ASSEMBLY HOOD FRONT

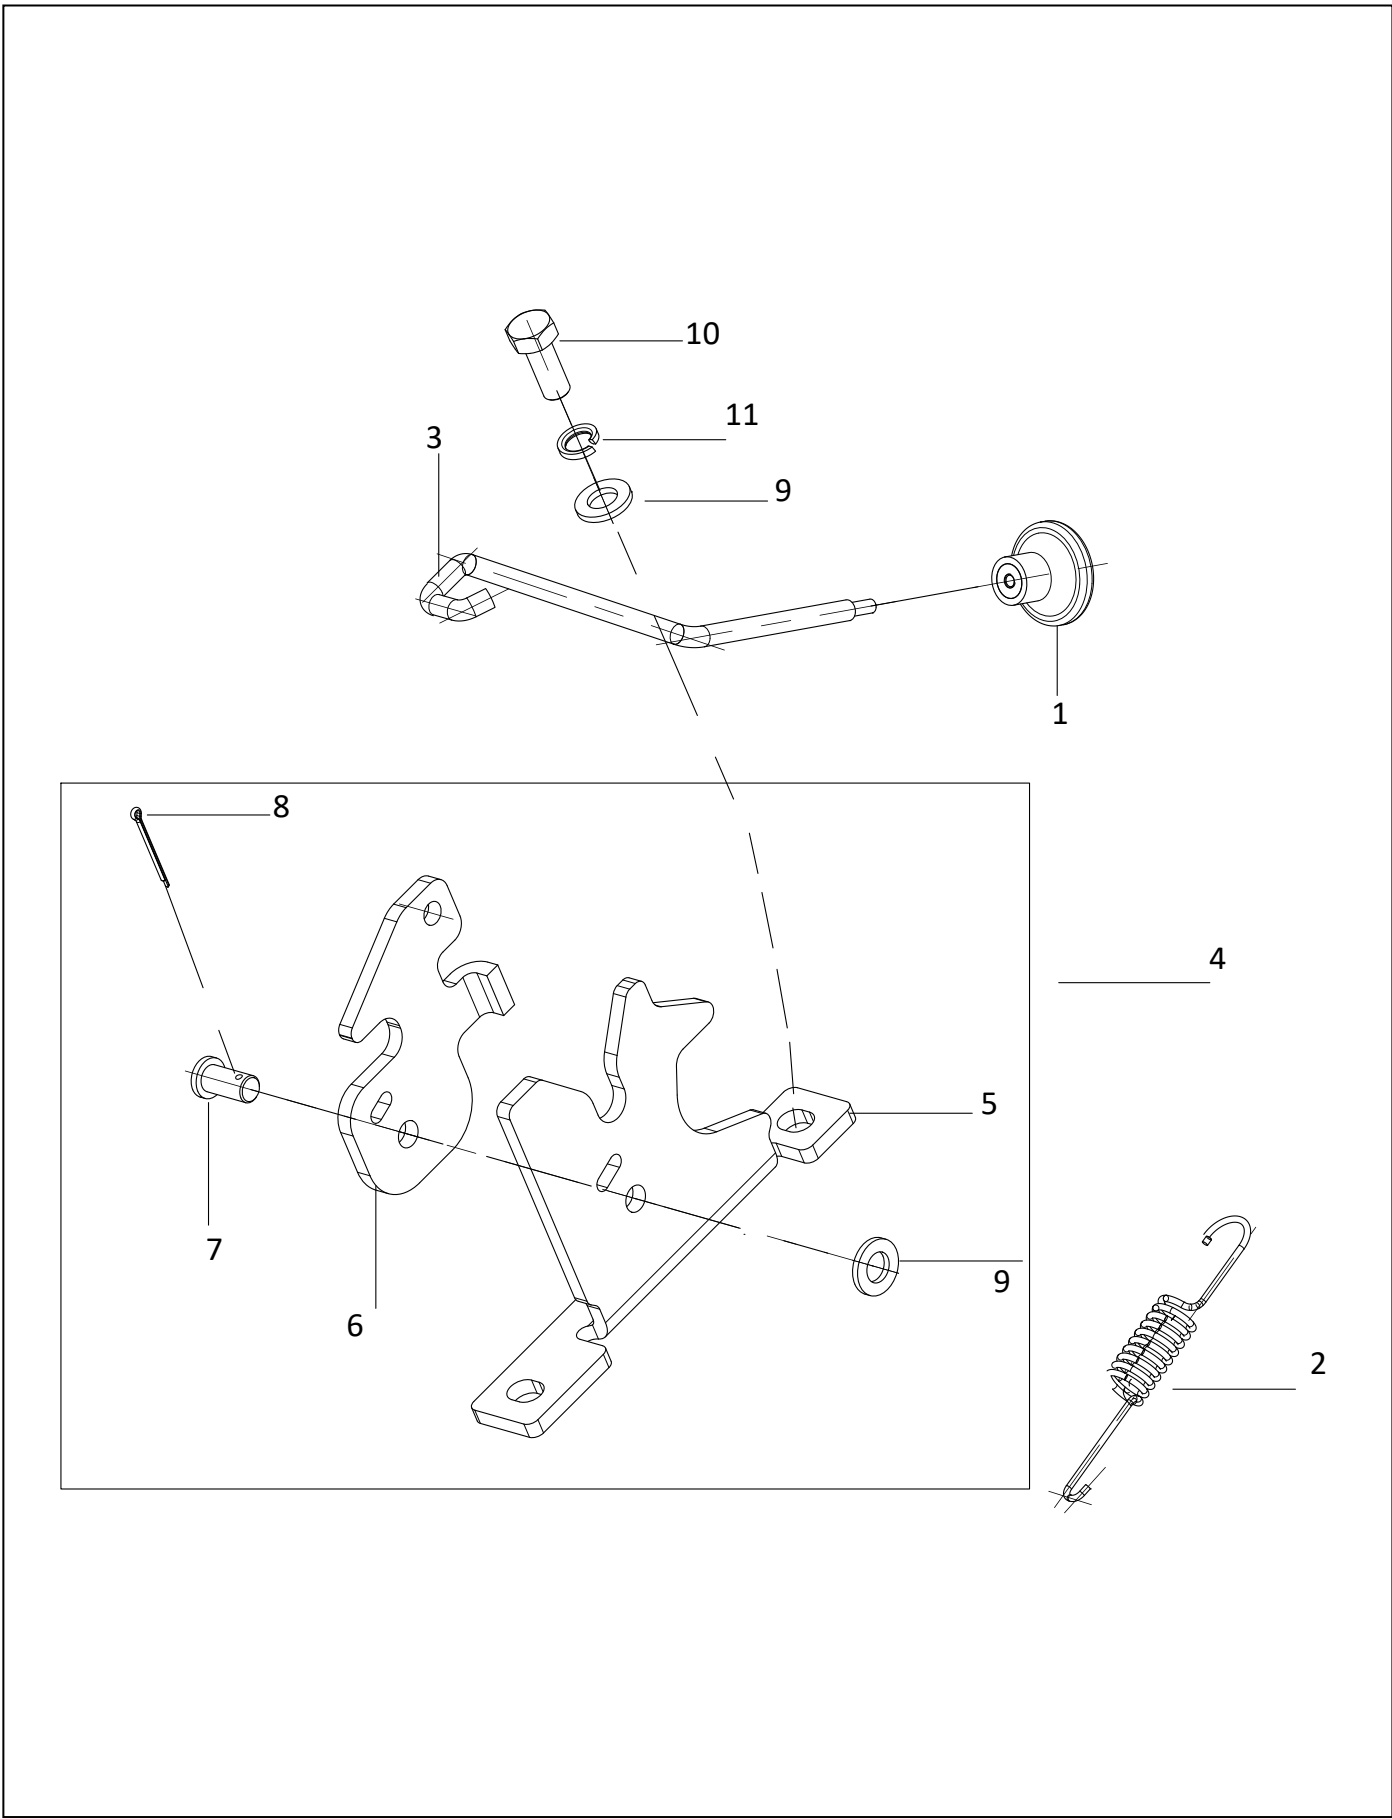


TABLE-71**LATCH ASSEMBLY HOOD FRONT**

Fig. No.	Part No.	Description	Qty
1	D10587650.9	KNOB PULL ROD LATCH HOOD	1
2	D10560880.9	SPRING LATCH HOOD	1
3	D10560870.9	PULL ROD LATCH HOOD	1
4	D10560830.9	LATCH ASSEMBLY HOOD	1
5	D10560840.9	PLATE REAR LATCH HOOD	1
6	D10560850.9	PLATE FRONT LATCH HOOD	1
7	D10560890.9	PIN LATCH HOOD	1
8	D88400030.9	PIN 2.5X25.0 COTTER	1
9	D10034590.9	WASHER M8 FLAT	1
10	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	2
11	D86500030.9	WASHER M8 SPRING LOCK	2

TABLE-72
COVER ASSEMBLY ENGINE SIDE RH

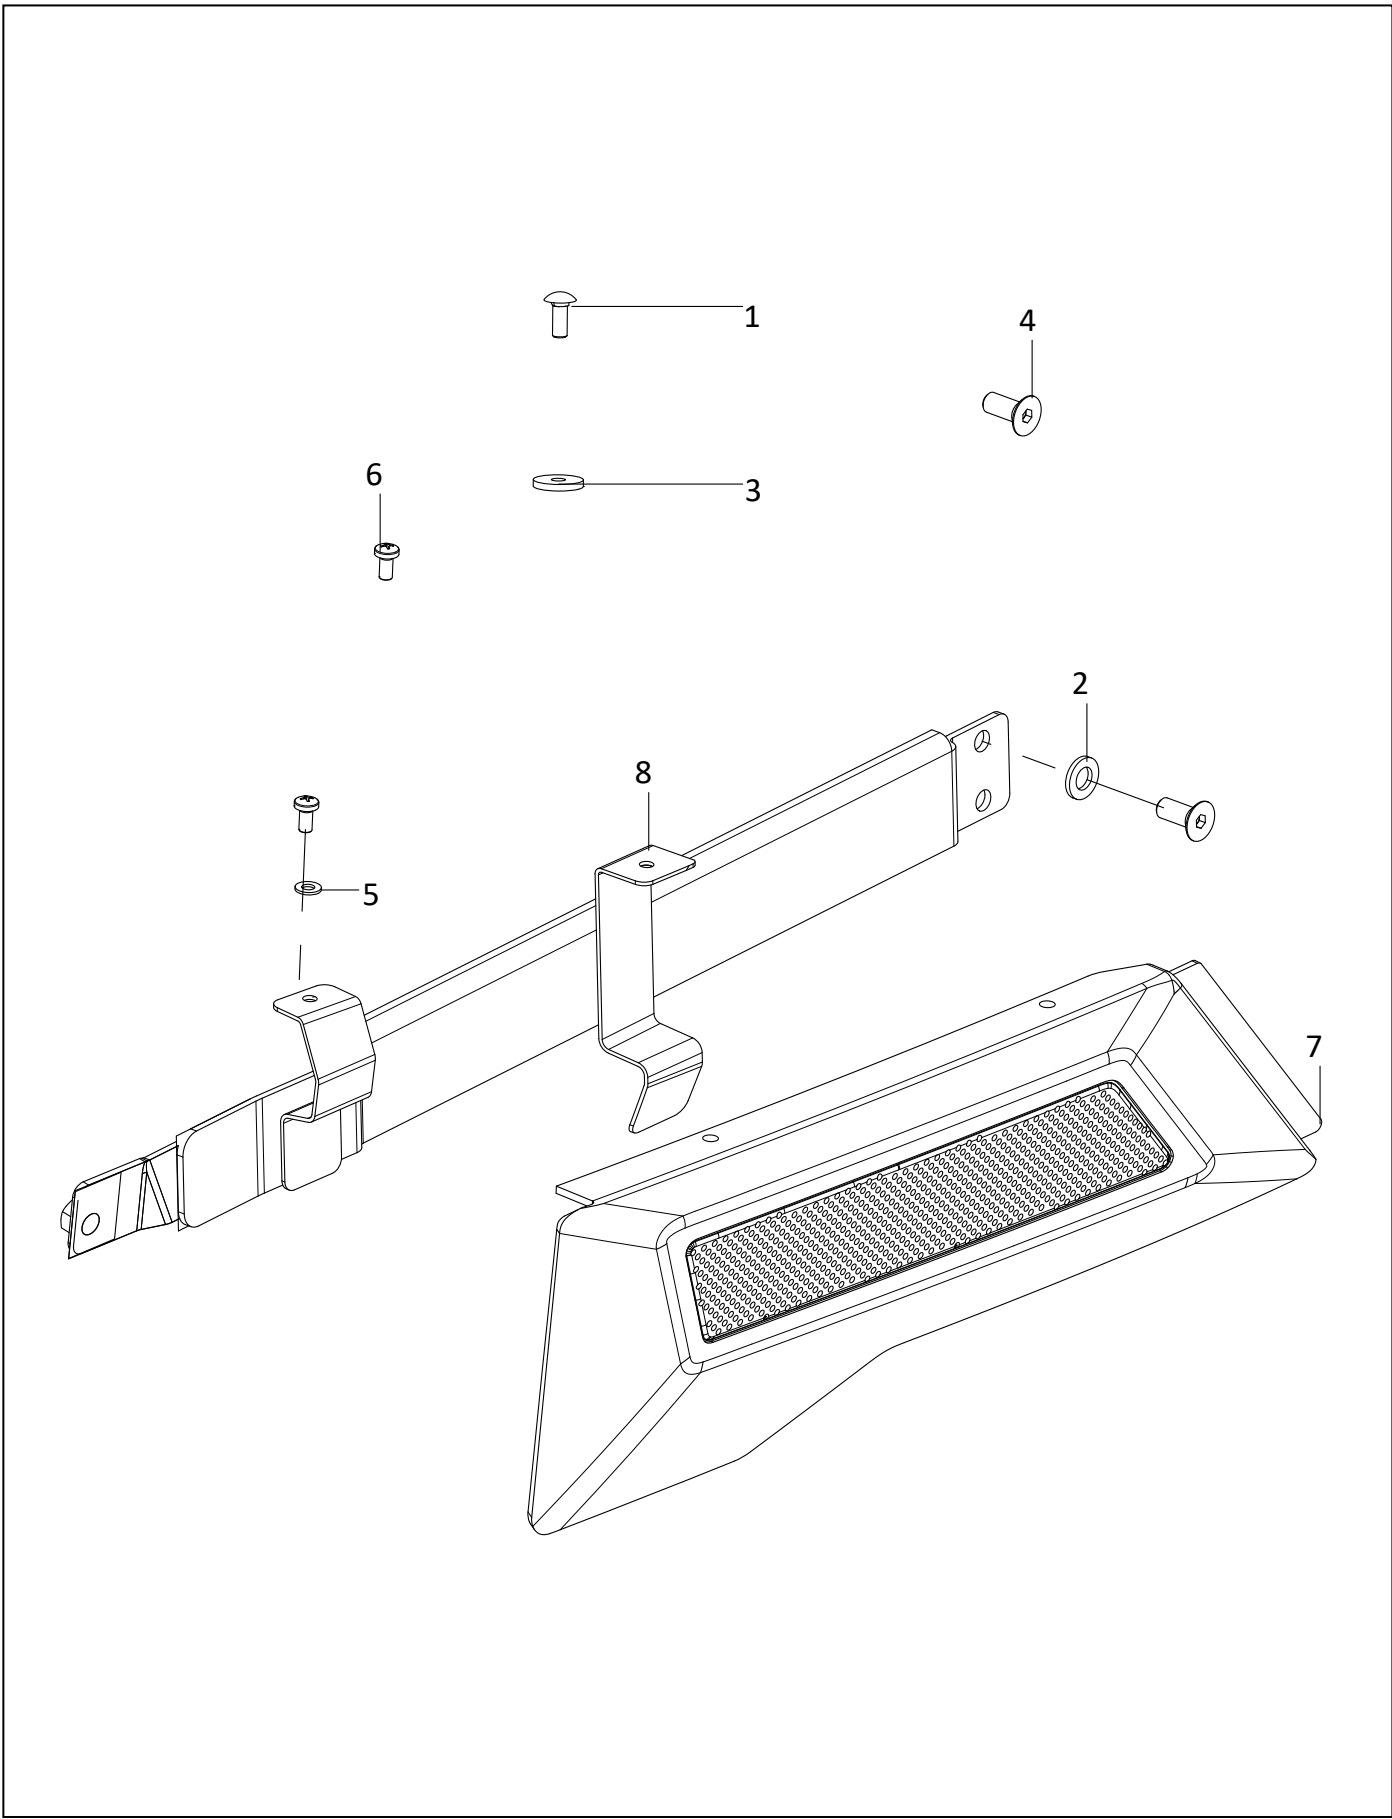


TABLE-72**COVER ASSEMBLY ENGINE SIDE RH**

Fig. No.	Part No.	Description	Qty
1	D82501140.9	SCREW M8X1.25X16 TRUSS HEAD CROSS SLOTTED	1
2	D10034590.9	WASHER M8 FLAT	2
3	D86500030.9	WASHER M8 SPRING LOCK	2
4	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	2
5	D85500090.9	WASHER M5 FLAT	2
6	D82501120.9	SCREW M5X0.80X16-6.6 HEX HEAD	2
7	D10573710.9	PANEL ENGINE SIDE COVER RH	1
8	D10583190.9	BRACKET ASSEMBLY ENGINE SIDE COVER RH	1

TABLE-73
COVER ASSEMBLY ENGINE SIDE LH

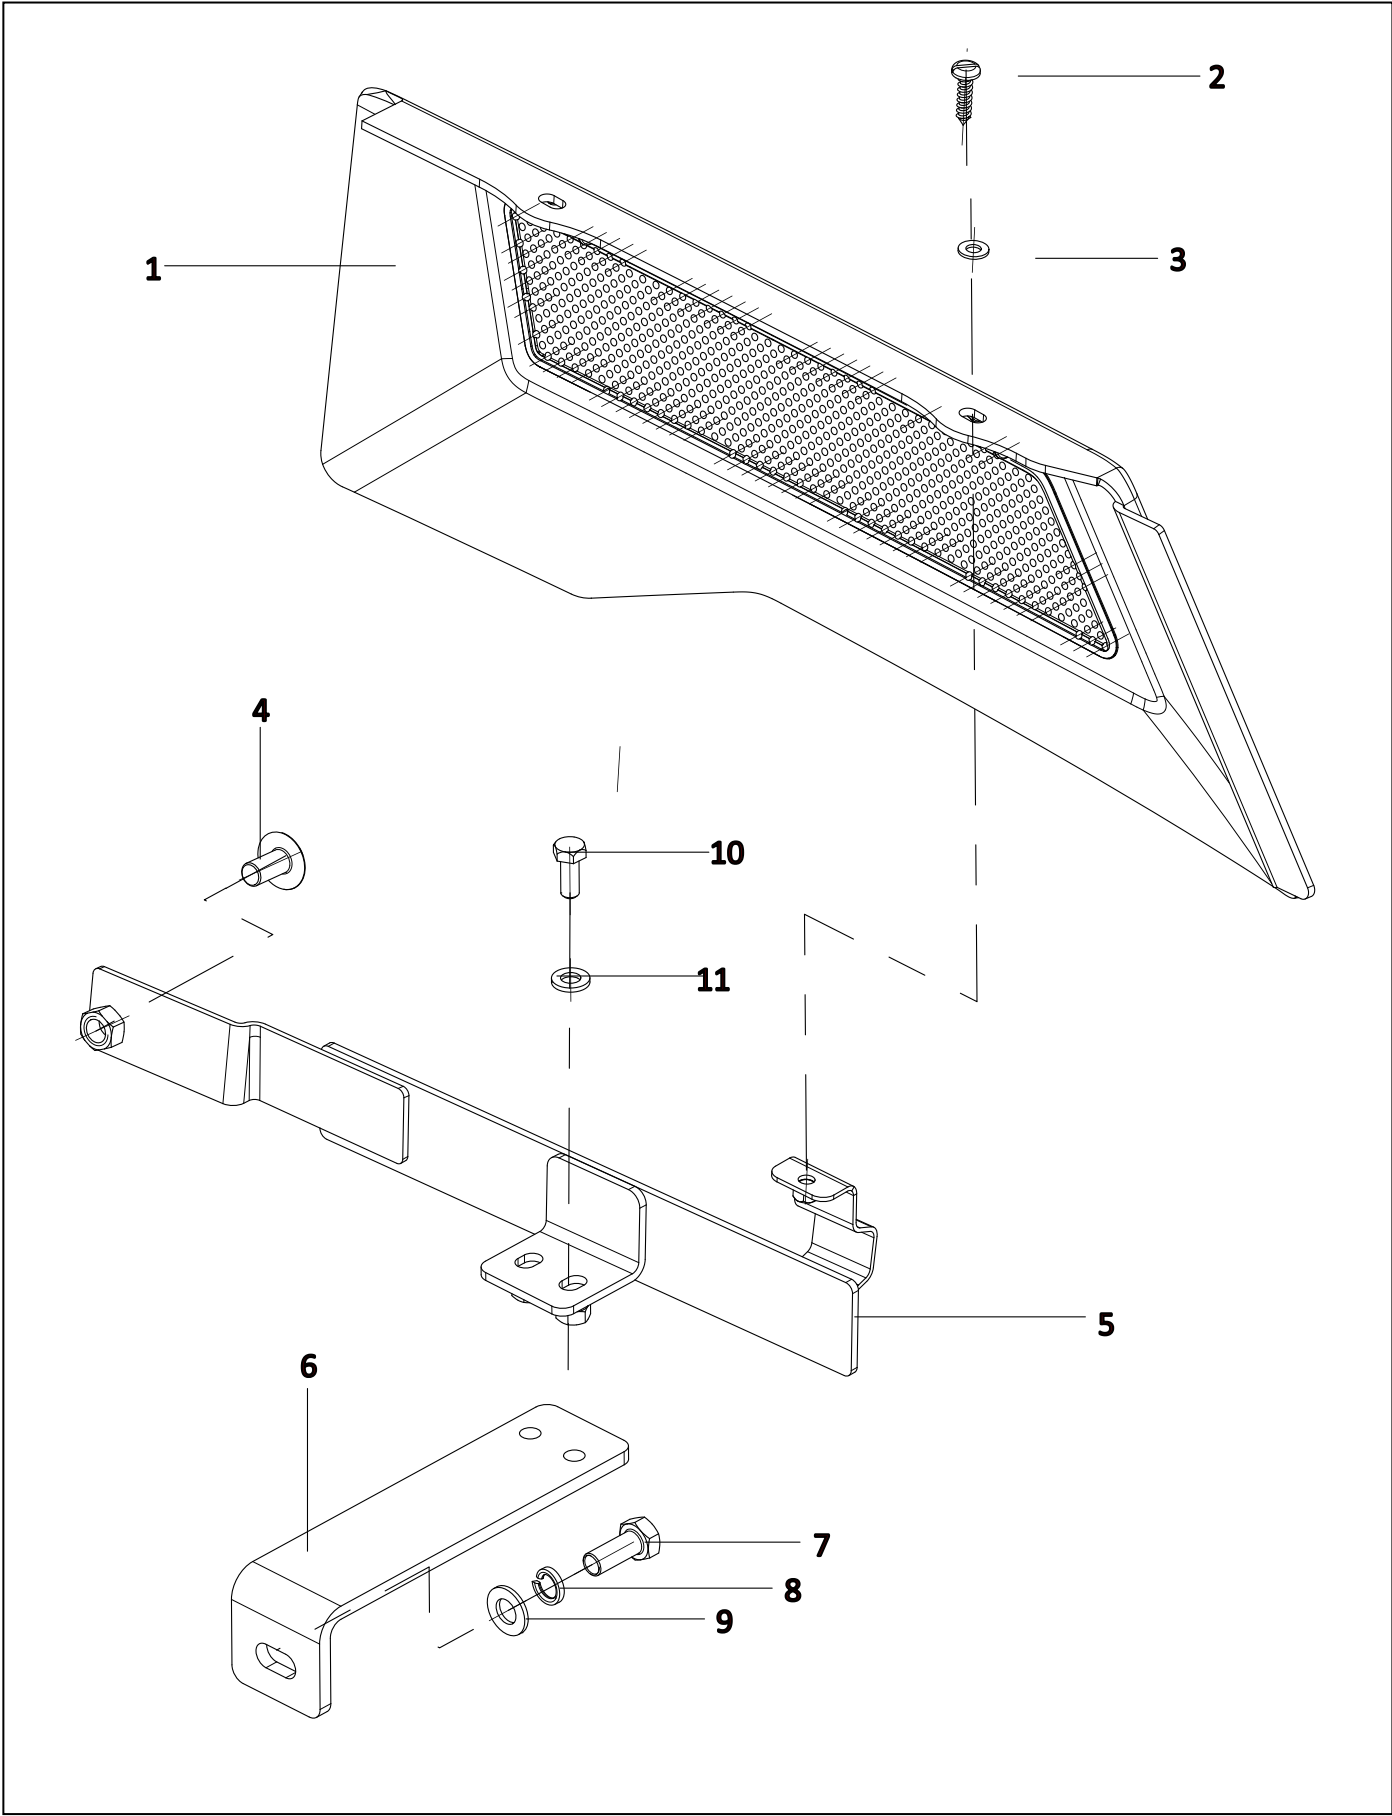


TABLE-73**COVER ASSEMBLY ENGINE SIDE LH**

Fig. No.	Part No.	Description	Qty
1	D10573700.9	PANEL ENGINE SIDE COVER LH	1
2	D10216680.9	SCREW M5X0.80X20 CROSS RECESSED PAN HEAD	2
3	D85500090.9	WASHER M5 FLAT	2
4	D82501140.9	SCREW M8X1.25X16 TRUSS HEAD CROSS SLOTTED	1
5	D10583180.9	BRACKET ASSEMBLY ENGINE SIDE COVER LH	1
6	D10778030.9	BRACKET ASSEMBLY ENGINE SIDE COVER INNER LH	1
7	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	1
8	D86500030.9	WASHER M8 SPRING LOCK	1
9	D85500050.9	WASHER M8 FLAT	1
10	D82500220.9	SCREW M6X1.00X15-8.8 HEX HEAD	2
11	D85500040.9	WASHER M6 FLAT	2

TABLE-74
GUIDE SUPPORT AND GAS SPRING FRONT HOOD SUBASSEMBLY

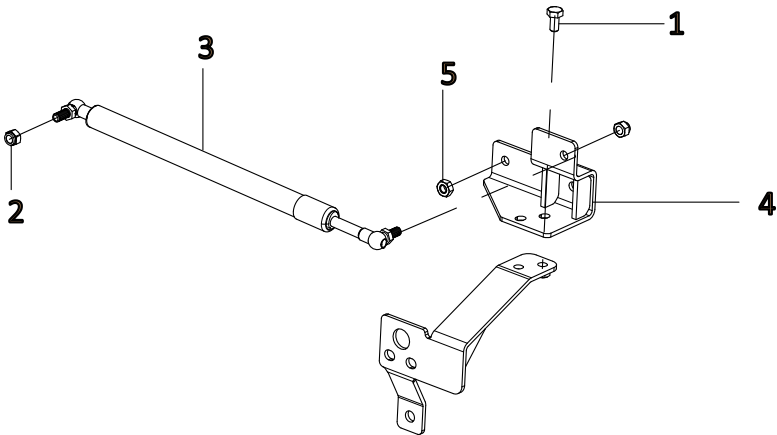


TABLE-74**GUIDE SUPPORT AND GAS SPRING FRONT HOOD SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D81503090.9	BOLT M8X1.25X16-8.8 HEX HEAD	2
2	D83500160.9	NUT M8X1.25 NYLOCK HEX	2
3	D10656550.9	STRUT BONNET OPENING	1
4	D10659960.9	BRACKET ASSEMBLY GAS STRUT MOUNTING REAR	1
5	D83500110.9	NUT M8X1.25-8 HEX	2

TABLE-75
GUIDE SUPPORT AND RADIATOR FRAME SUBASSEMBLY

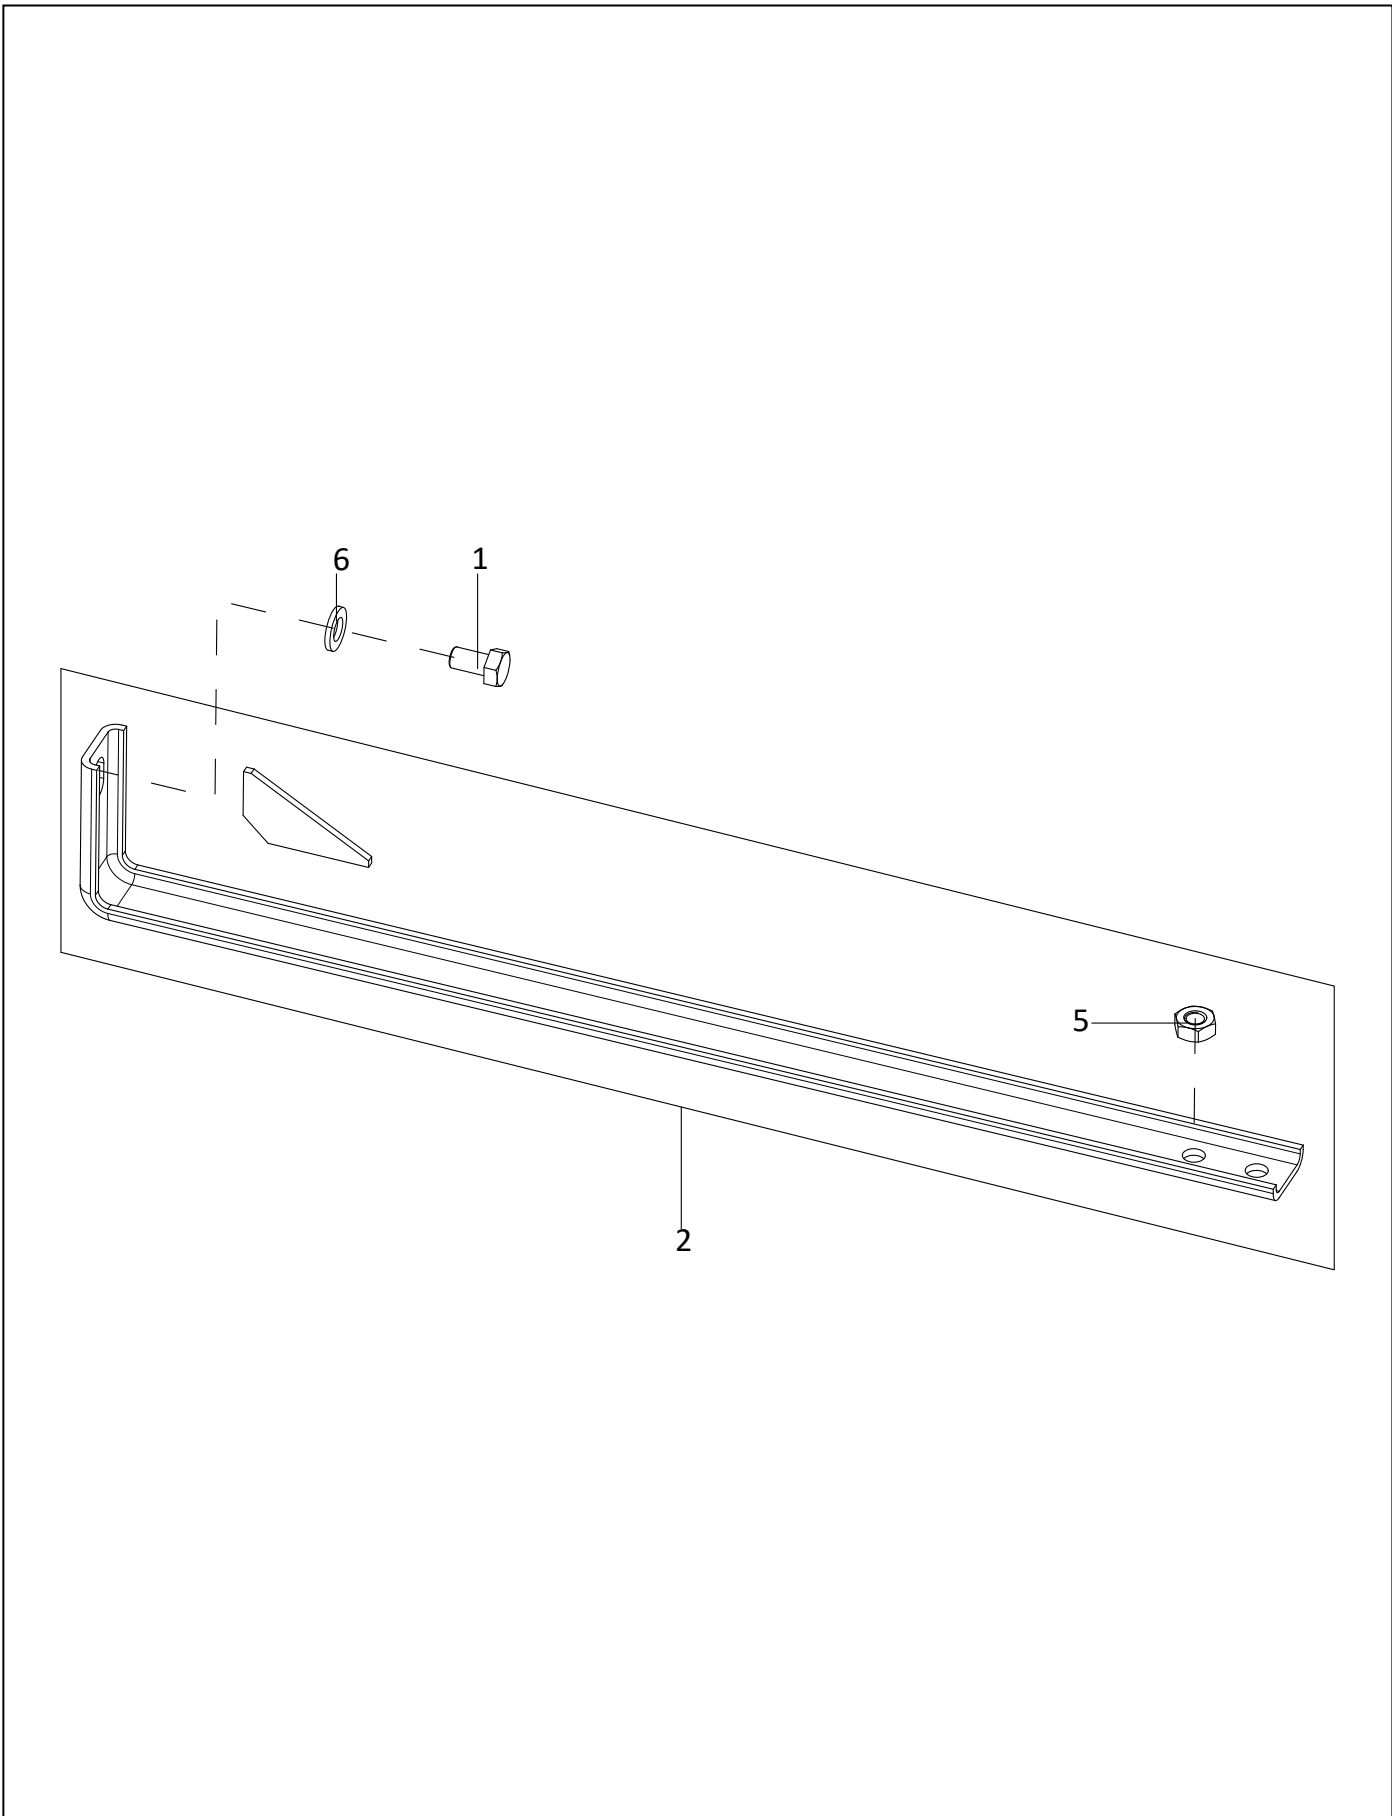


TABLE-76
HOOD REAR SUBASSEMBLY

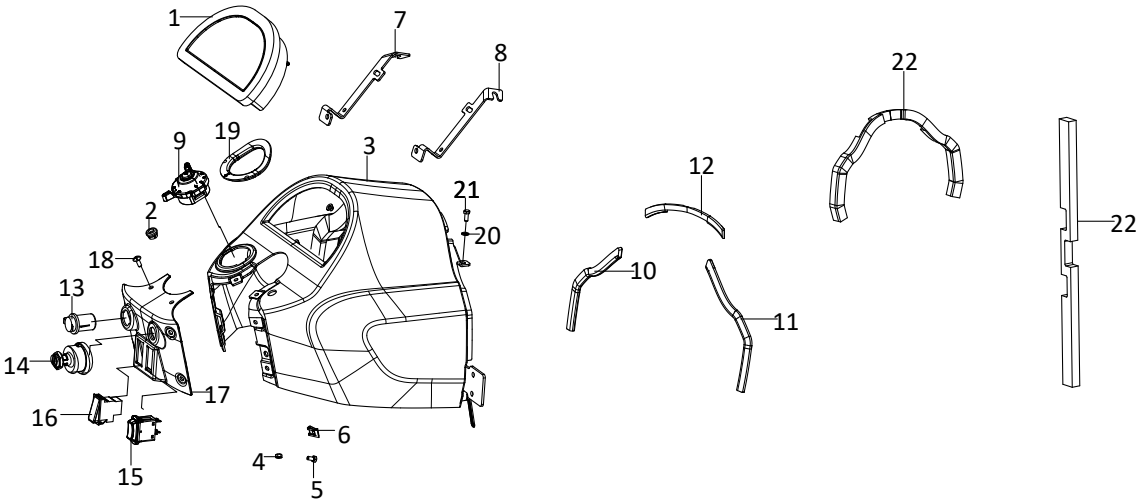


TABLE-76**HOOD REAR SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D10562590.9	CLUSTER ASSEMBLY INSTRUMENT	1
2	D10026540.9	GROMMET HAND THROTTLE CONTROL LEVER	1
3	D10565410.9	HOOD ASSEMBLY REAR	1
4	D83500220.9	NUT M6X1.00-5 HEX	2
5	D82500050.9	SCREW M6X1.00X12-6.8 HEX HEAD	2
6	D10565480.9	CLIP NUT M6	4
7	D10565460.9	BRACKET CLUSTER MOUNTING LH	1
8	D10565470.9	BRACKET CLUSTER MOUNTING RH	1
9	D10560720.9	SWITCH ASSEMBLY COMBINATION	1
10	D10568400.9	BEADING REAR HOOD LH	1
11	D10568410.9	BEADING REAR HOOD RH	1
12	D10571520.9	BEADING REAR HOOD MIDDLE	1
13	D10590410.9	SOCKET MOBILE CHARGER ASSEMBLY	1
14	D10498410.9	SWITCH ASSEMBLY HEATER AND STARTER	1
15	D10495450.9	SWITCH ASSEMBLY BEACON LAMP	1
15-1	D10842940.9	SWITCH ASSEMBLY HAZARD	1
16	D10768830.9	SWITCH ASSEMBLY CRUISE CONTROL	1
17	D10612700.9	PANEL HOOD REAR (HST)	1
18	D82501190.9	SCREW M6X1.0X16 TRUSS HEAD CROSS SLOTTED	6
19	D10565440.9	GROMMET REAR HOOD	1
20	D85500040.9	WASHER M6 FLAT	4
21	D82500220.9	SCREW M6X1.00X15-8.8 HEX HEAD	4
22	D10635460.9	FOAM SEALING REAR HOOD	1

TABLE-77
ROPS FOLDABLE SUBASSEMBLY COMPACT

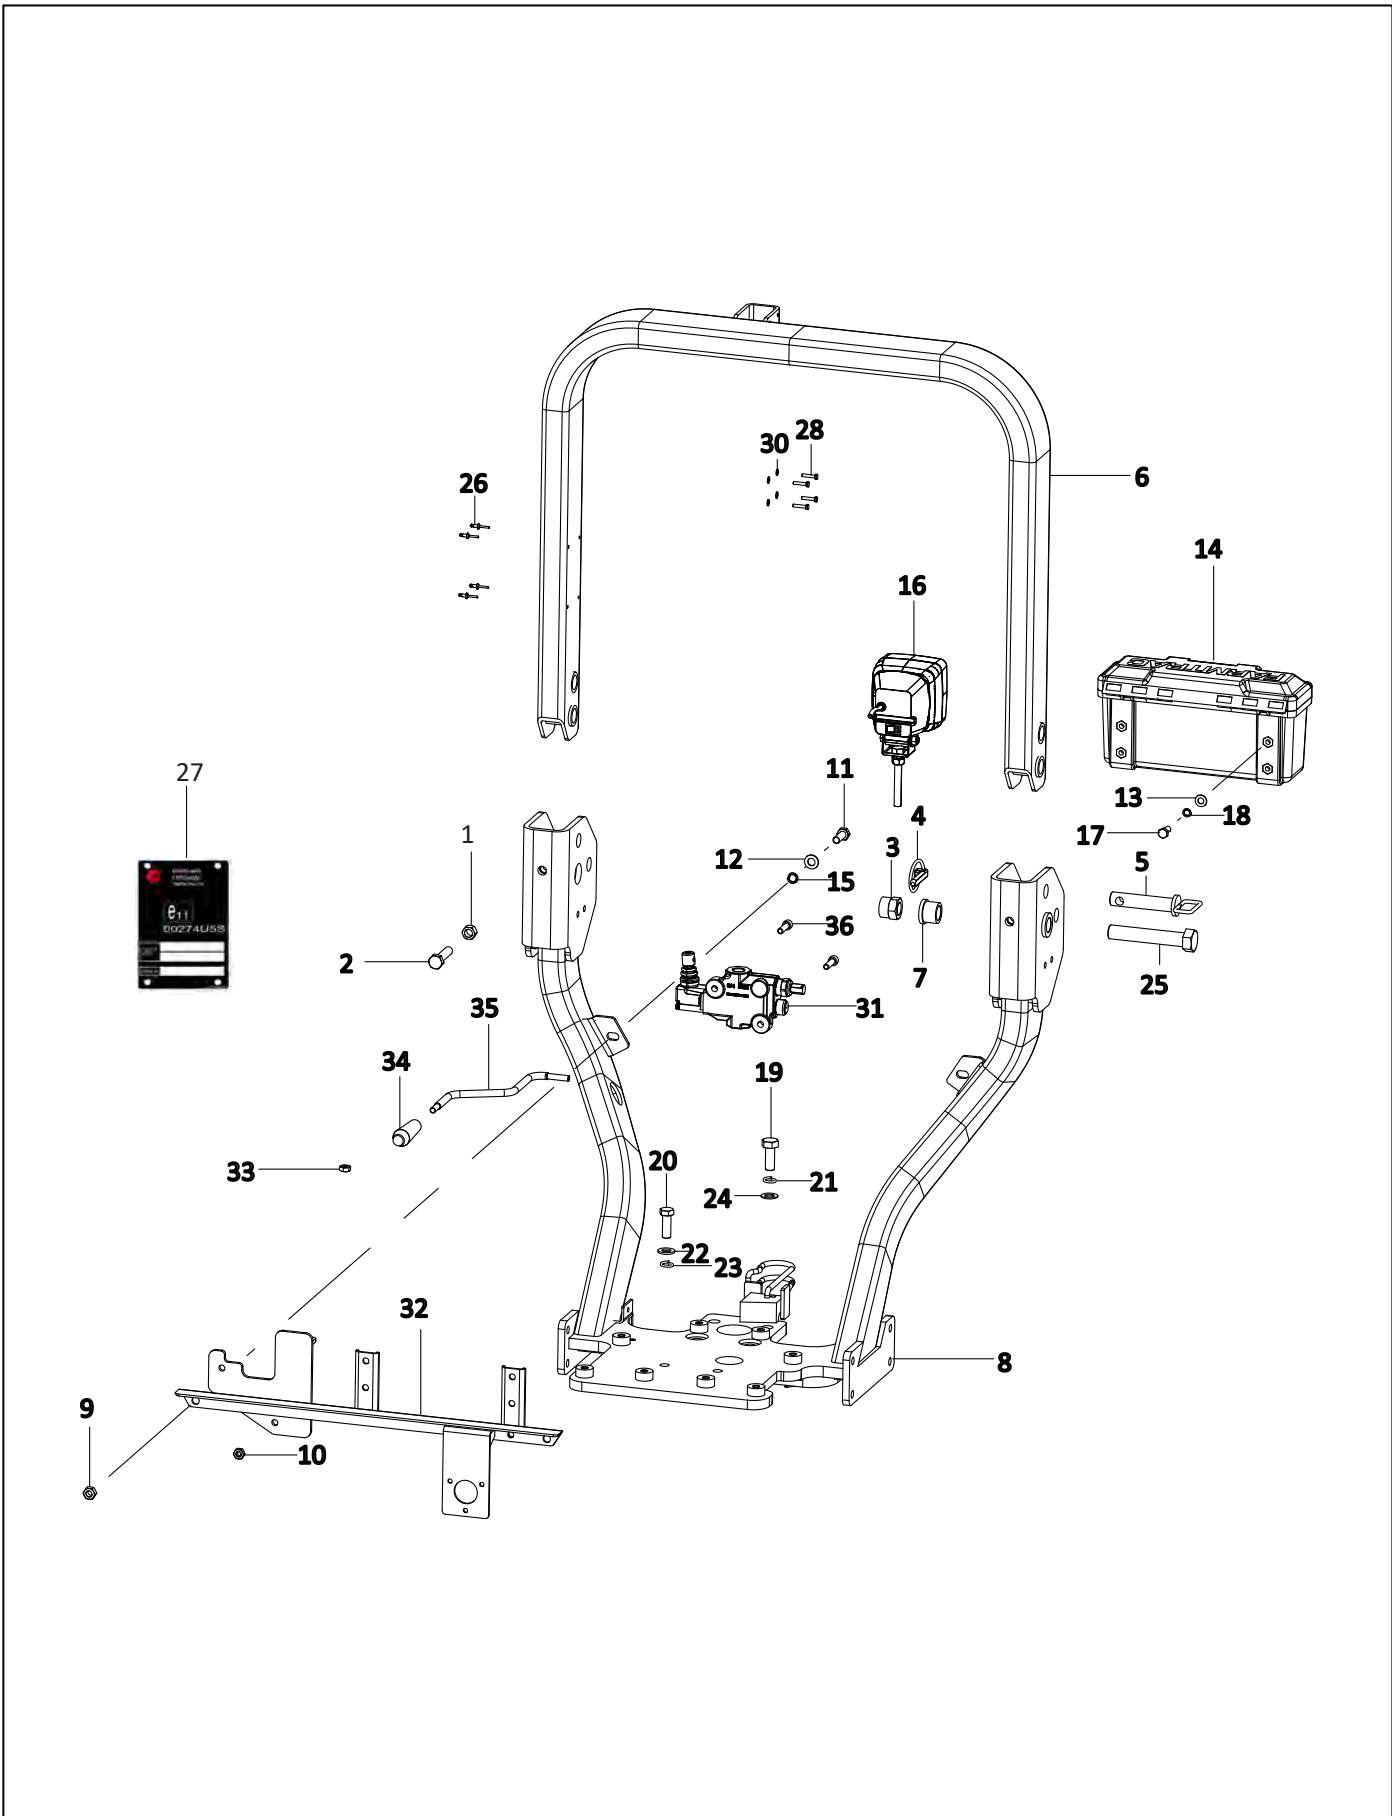


TABLE-77
ROPS FOLDABLE SUBASSEMBLY COMPACT

Fig. No.	Part No.	Description	Qty
1	D83500290.9	NUT M12X1.75 HEX	2
2	D81500170.9	BOLT M12X1.75X55-10.9 HEX HEAD	2
3	D83500670.9	NUT M20X2.50 HEX NYLOCK	2
4	D10014880.9	PIN AND RING ASSEMBLY LOWER LIFT LINK LYNCH	2
5	D10549890.9	PIN ROPS LOCKING	2
6	D10563560.9	FRAME ASSEMBLY ROPS FOLDABLE COMPACT	1
7	D10549880.9	BUSH COLLAR ROPS FRAME	2
8	D10768890.9	BASE ASSEMBLY ROPS FOLDABLE COMPACT HST	1
9	D83500090.9	NUT M10X1.50-8 HEX	10
10	D83500110.9	NUT M8X1.25-8 HEX	5
11	D81500060.9	BOLT M10X1.50X30-8.8 HEX HEAD	2
12	D85500140.9	WASHER M10 FLAT	2
13	D85500050.9	WASHER M8 FLAT	2
14	D10568790.9	BOX ASSEMBLY TOOL COMPACT (PLASTIC)	1
15	D86500050.9	WASHER M10 SPRING LOCK	2
16	D10535780.9	LAMP ASSEMBLY PLOUGH	1
17	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	2
18	D86500030.9	WASHER M8 SPRING LOCK	2
19	D81500740.9	BOLT M14X2.00X35-10.9 HEX HEAD LOCK	4
20	D81503400.9	BOLT M12X35-10.9 HEX HEAD	2
21	D86500070.9	WASHER M14 SPRING LOCK	4
22	D85500060.9	WASHER M12 FLAT	2
23	D86500020.9	WASHER M12 SPRING LOCK	2
24	D85500510.9	WASHER M14X1.5 FLAT	4
25	D81503130.9	BOLT M20X2.5X115-8.8 HEX HEAD	2
26	D10339690.9	RIVET 4X6.0MM (CLINCH TYPE)	4
27	D10694250.9	DECAL ROPS E-MARKED	1
28	D81502010.9	BOLT M4X20-6.8 HEX HEAD	4
29	D10523390.9	BRACKET ASSEMBLY BEACON	1
30	D85500190.9	WASHER M4.0 FLAT	4
31	D10556200.9	VALVE ASSEMBLY HYDRAULIC CONTROL SINGLE SPOOL (DOUBLE ACTING)	1
32	D10564070.9	BRACKET ASSEMBLY SUPPORT FENDER (WITH ROPS)	1
33	D83500060.9	NUT M8X1.25-6 HEX	2
34	D10215860.9	KNOB HAND THROTTLE CONTROL LEVER	1
35	D10570140.9	LEVER SPOOL VALVE	1
36	D81503450.9	BOLT M8X1.25X30 HEX SOCKET HEAD	2

TABLE-78
FENDER SUBASSEMBLY (HST NON JOYSTICK)

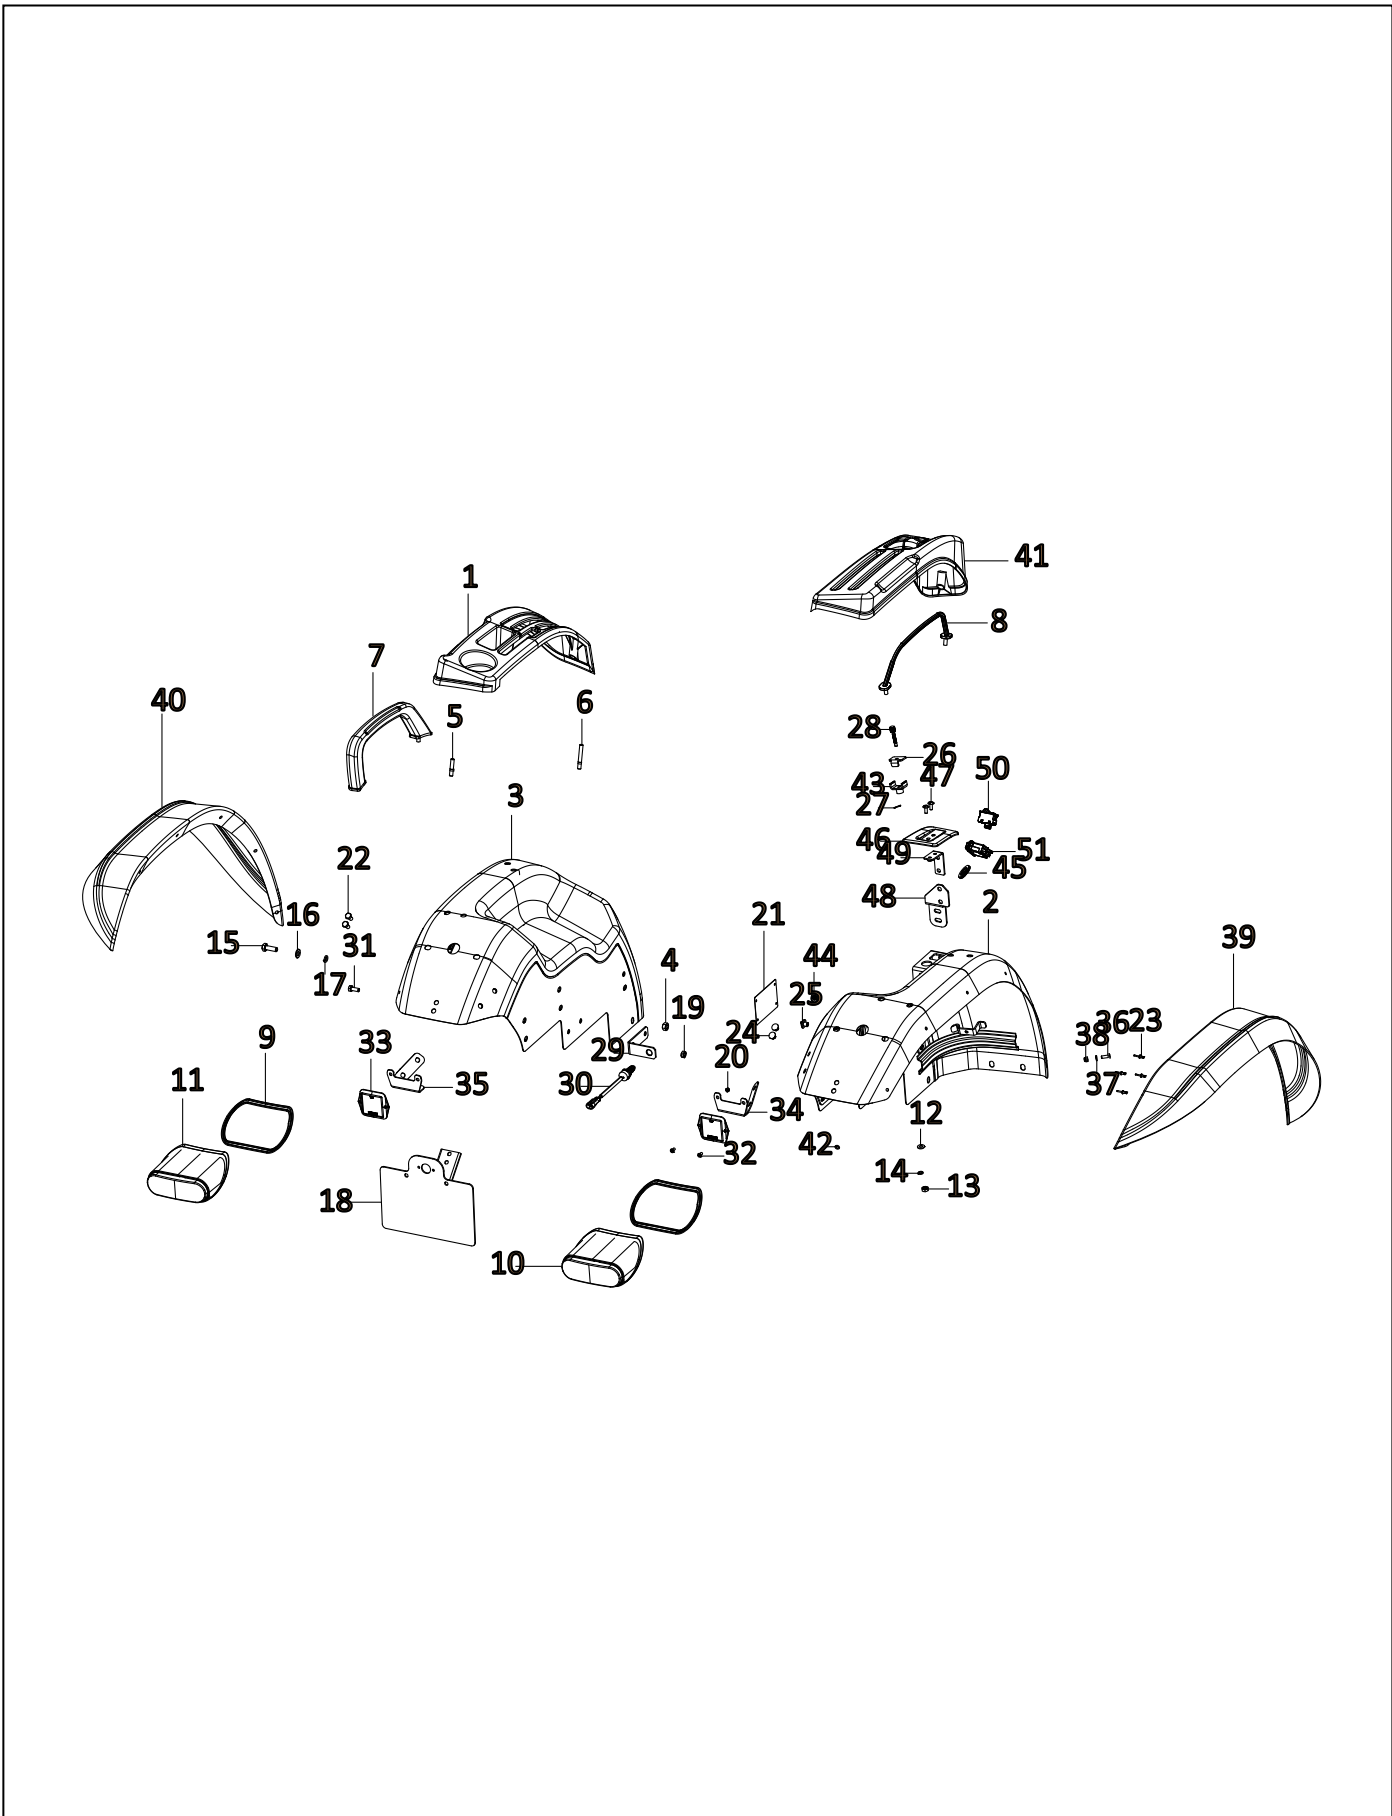


TABLE-78**FENDER SUBASSEMBLY (HST NON JOYSTICK)**

Fig. No.	Part No.	Description	Qty
1	D10561010.9	CONSOLE LH RANGE LEVER	1
2	D10775280AC.9	FENDER ASSEMBLY RH	1
3	D10696080.9	FENDER ASSEMBLY LH	1
4	D83500090.9	NUT M10X1.50-8 HEX	9
5	D84500170.9	STUD B M8X1.25X42-8.8	4
6	D84500160.9	STUD B M8X1.25X60-8.8	2
7	D10567570.9	HANDLE FENDER ASSEMBLY LH	1
8	D10567560.9	HANDLE FENDER ASSEMBLY RH	1
9	D10568780.9	BIDING RUBBER REAR LIGHT COVER	2
10	D10580840.9	LAMP ASSEMBLY FENDER REAR RH (LED)	1
11	D10580850.9	LAMP ASSEMBLY FENDER REAR LH (LED)	1
12	D85500130.9	WASHER M8 FLAT	18
13	D83500110.9	NUT M8X1.25-8 HEX	10
14	D86500030.9	WASHER M8 SPRING LOCK	14
15	D81500480.9	BOLT M10X1.50X30-6.6 HEX HEAD	18
16	D85500010.9	WASHER M10 FLAT	18
17	D86500090.9	WASHER M10 SPRING LOCK	10
18	D10566480.9	BRACKET ASSEMBLY REGISTRATION PLATE MOUNTING	1
19	D83500060.9	NUT M8X1.25-6 HEX	4
20	D83500010.9	NUT M5X0.8-6 PLATED	2
21	D10534070.9	PLATE DATA STATUTORY	1
22	D81503090.9	BOLT M8X1.25X16-8.8 HEX HEAD	6
23	D10339690.9	RIVET 4X6.0MM (CLINCH TYPE)	4
24	D93100360.9	PLUG FENDER DIA 11.0	2
25	D93100350.9	PLUG M10X1.5 SQUARE HEAD (DELPHINIUM BLUE)	2
26	D10783800.9	PAD HYDRAULIC LIFT CONTROL LEVER UPPER STOPPER	1
27	D10000640.9	PIN 1/16"X0.50" COTTER	1
28	D10668670.9	KNOB HYDRAULIC LIFT CONTROL LEVER STOP	1
29	D10664480.9	BRACKET ASSEMBLY HOLDING GEAR SHIFT SWITCH	1
30	D10716760.9	SWITCH ASSEMBLY (NO TYPE)	1
31	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	2
32	D82501160.9	SCREW M5X0.80X10 CROSS RECESSED PAN HEAD	4
33	D10554130.9	REFLECTOR REAR	2
34	D10663690.9	BRACKET REAR REFLECTOR RH	1
35	D10663680.9	BRACKET REAR REFLECTOR LH	1
36	D81500360.9	BOLT M6X1.00X16-9.8 HEX HEAD	14
37	D85500040.9	WASHER M6 FLAT	12
38	D83500350.9	NUT M6X1.00 NYLOCK HEX	12
39	D10696130.9	FLAP FENDER RH	1
40	D10696120.9	FLAP FENDER LH	1

TABLE-78
FENDER SUBASSEMBLY (HST NON JOYSTICK)

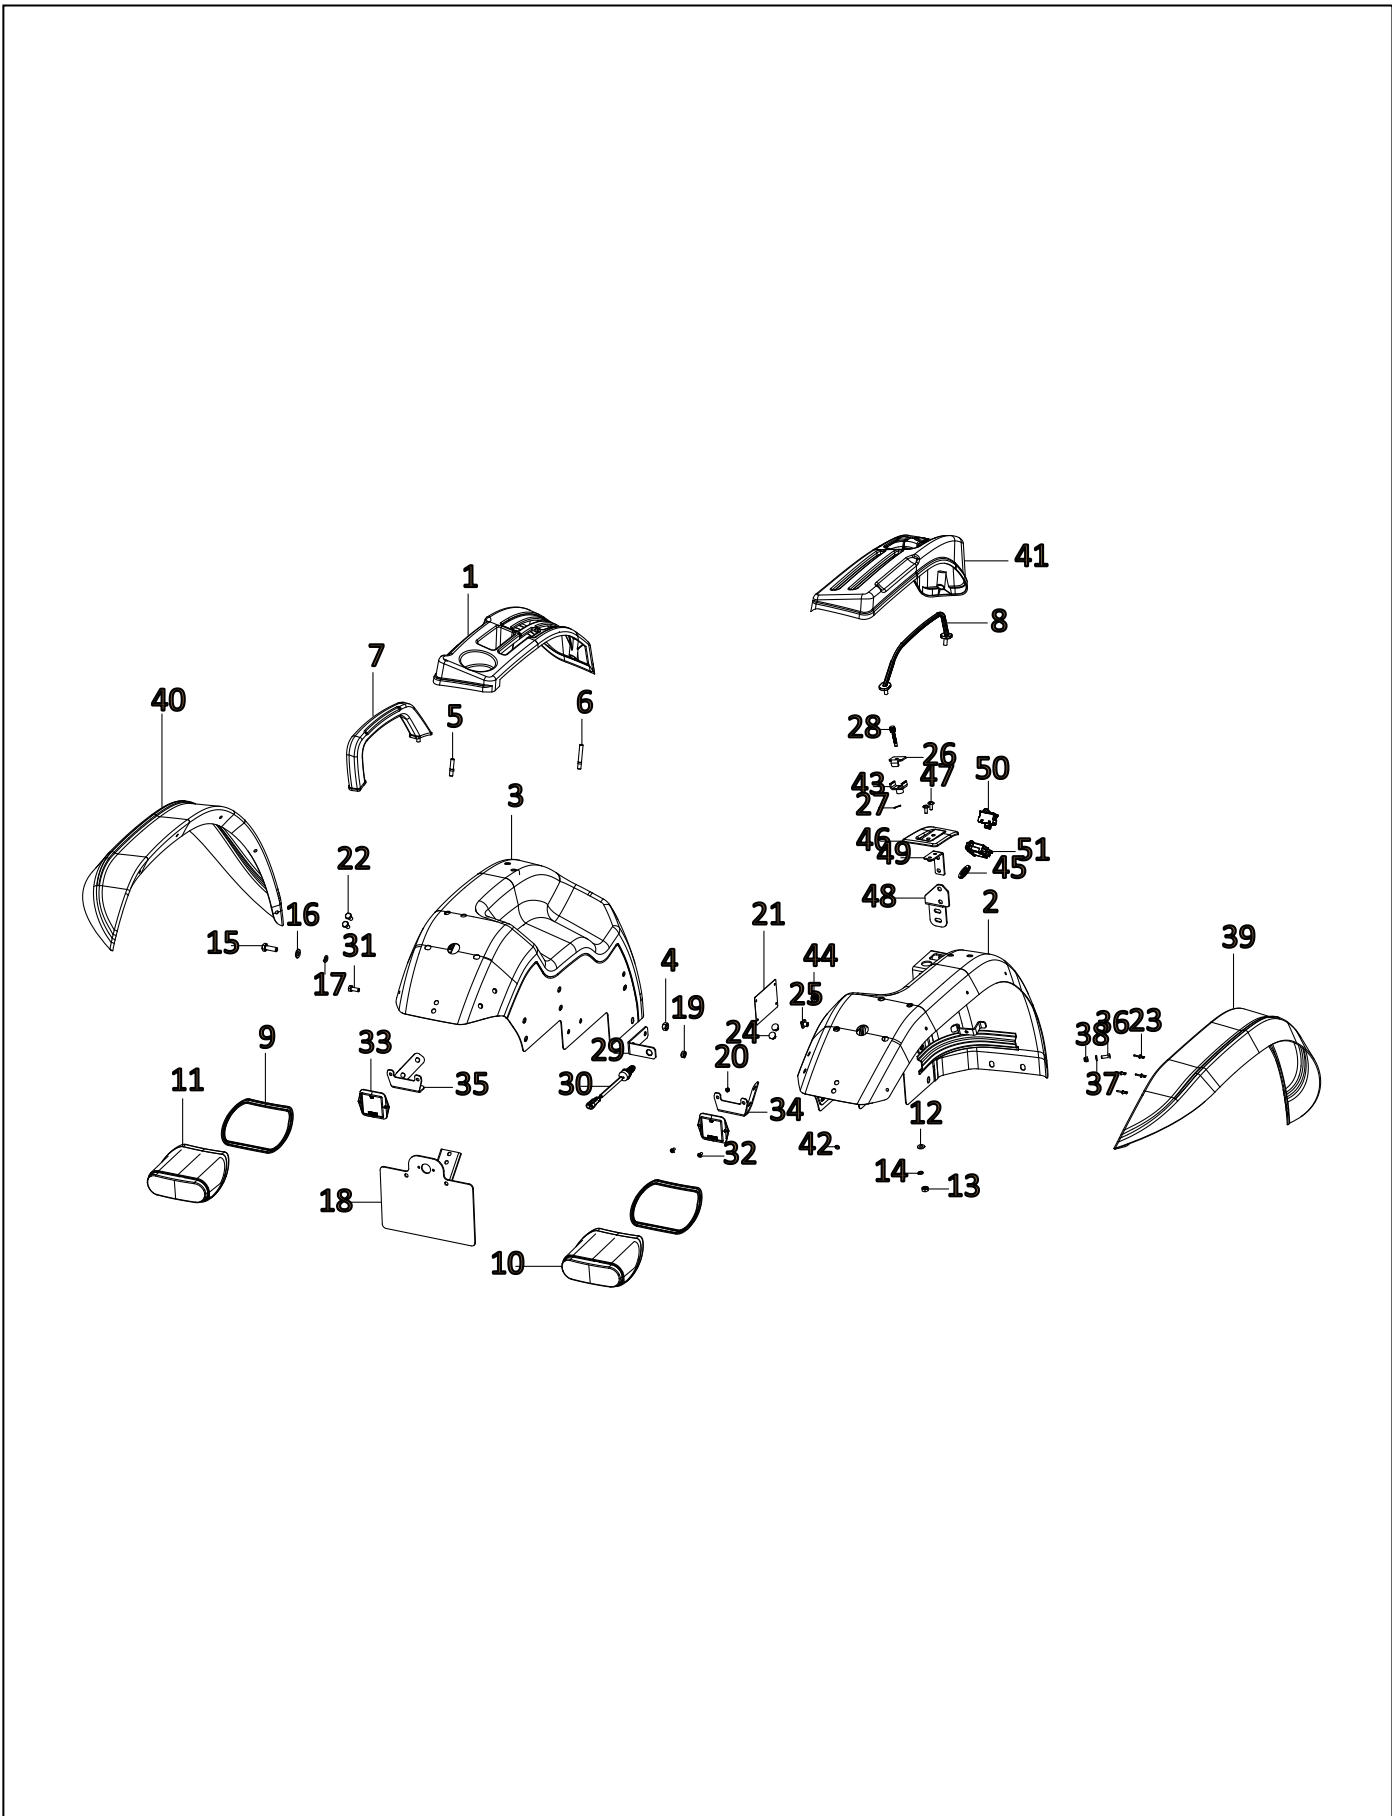


TABLE-78
FENDER SUBASSEMBLY (HST NON JOYSTICK)

Fig. No.	Part No.	Description	Qty
41	D10718590.9	CONSOLE JOYSTICK LOADER ACTUATION	1
42	D85500110.9	WASHER M6 FLAT	2
43	D10783770.9	PAD ASSEMBLY HYDRAULIC LIFT CONTROL LEVER LOWER STOPPER	1
44	D10433490.9	GROMMET TOOL BOX (DIA 9)	1
45	D93100550.9	PLUG DIA 27	3
46	D10871140.9	COVER CONSOLE JOYSTICK	1
47	D82501190.9	SCREW M6X1.0X16 TRUSS HEAD CROSS SLOTTED	2
48	D10778110.9	BRACKET JOYSTICK LOADER ACTUATION MOUNTING FRONT	1
49	D10871150.9	BRACKET ASSEMBLY MOUNTING COVER CONSOLE	1
50	D10892370.9	SWITCH ASSEMBLY PTO OVERDRIVE	1
51	D10495450.9	SWITCH ASSEMBLY BEACON LAMP	1

TABLE-79
BOARD RUNNING RH AND LH SUBASSEMBLY

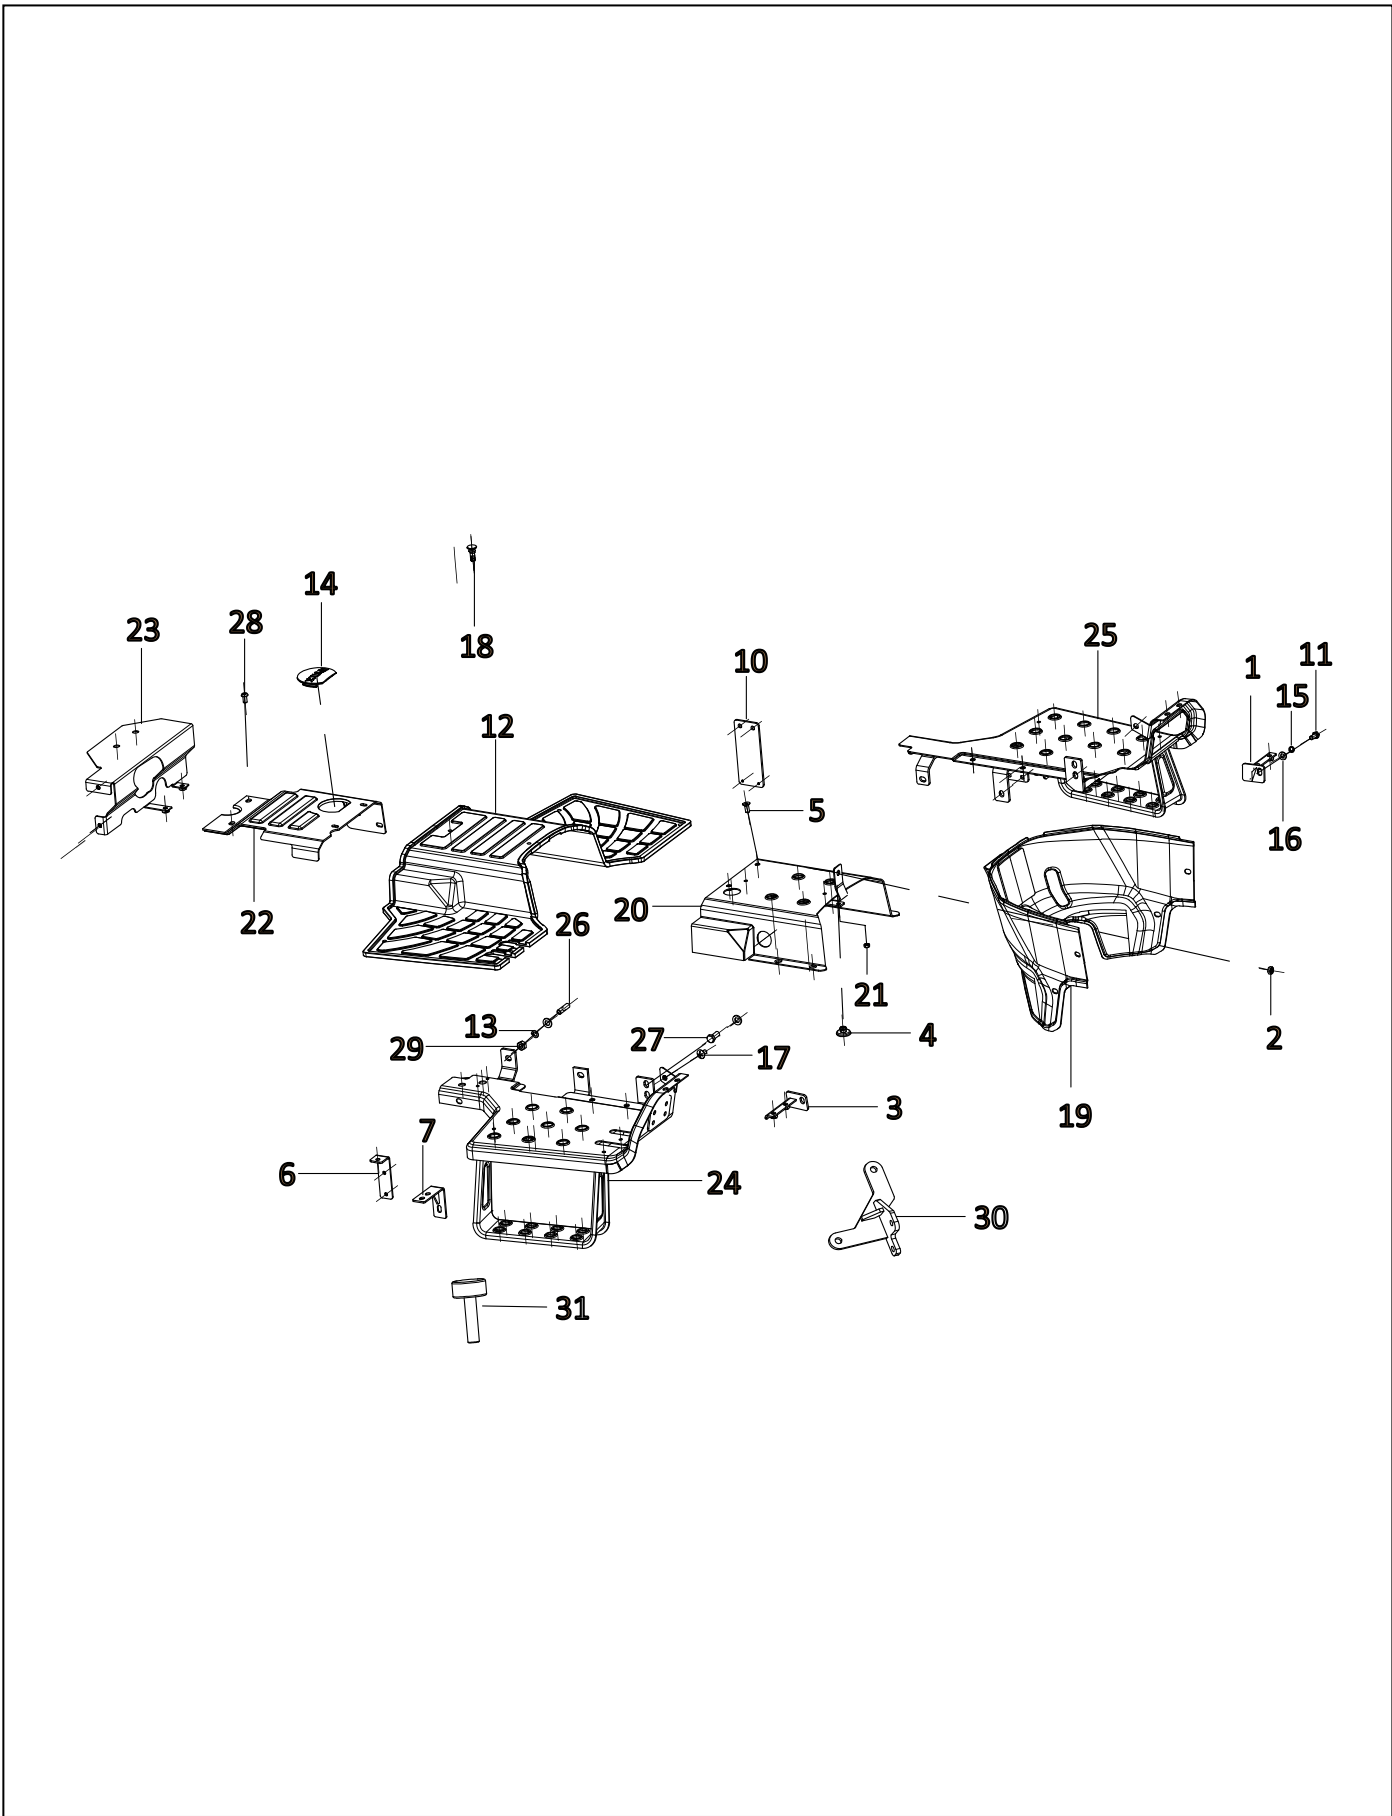


TABLE-79**BOARD RUNNING RH AND LH SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D10566360.9	BRACKET ASSEMBLY RUNNING BOARD SUPPORT FRONT LH	1
2	D83500060.9	NUT M8X1.25-6 HEX	21
3	D10566330.9	BRACKET ASSEMBLY RUNNING BOARD SUPPORT FRONT RH	1
4	D10562340.9	GROMMET FUEL TANK	2
5	D10152630.9	SCREW M8X1.25X20 COUNTERSUNK SOCKET HEAD	7
6	D10775300.9	BRACKET ASSEMBLY JOYSTICK CABLE MOUNTING	1
7	D10748040.9	BRACKET ASSEMBLY SHAFT PEDAL CONTROL MOUNTING	1
8	D83500110.9	NUT M8X1.25-8 HEX	2
10	D10769030.9	PLATE MOUNTING BRAKE SWITCH LH	1
11	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	15
12	D10610610.9	MAT RUNNING BOARD FRONT	1
13	D86500090.9	WASHER M10 SPRING LOCK	8
14	D10614820.9	CAP DIPSTICK	1
15	D86500030.9	WASHER M8 SPRING LOCK	13
16	D85500050.9	WASHER M8 FLAT	15
17	D82501140.9	SCREW M8X1.25X16 TRUSS HEAD CROSS SLOTTED	3
18	D10570580.9	PIN PUSH RUNNING BOARD MAT	7
19	D10610620.9	COVER DASHBOARD LOWER	1
20	D10609650.9	BOARD RUNNING ASSEMBLY CENTER	1
21	D83500220.9	NUT M6X1.00-5 HEX	1
22	D10607580.9	CONSOLE GEAR AND DIFFERENTIAL HOUSING	1
23	D10561040.9	COVER ASSEMBLY DRIVER SEAT FLOOR	1
24	D10607590.9	BOARD RUNNING ASSEMBLY RH	1
25	D10607650.9	BOARD RUNNING ASSEMBLY LH	1
26	D84500340.9	STUD B M10X1.5X40-10.9	4
27	D10101750.9	BOLT M10X1.50X25-8.8 HEX HEAD	4
28	D82501150.9	SCREW M8X1.25X16 BUTTON HEAD SOCKET CAP	2
29	D83500130.9	NUT M10X1.50-10P HEX	4
30	D10873120.9	BRACKET ASSEMBLY TENSION SPRING MOUNTING	1
31	D10493580.9	PAD BRAKE AND CLUTCH PEDAL STOP	2

TABLE-80
SEAT DRIVER SUBASSEMBLY (EXPORT)

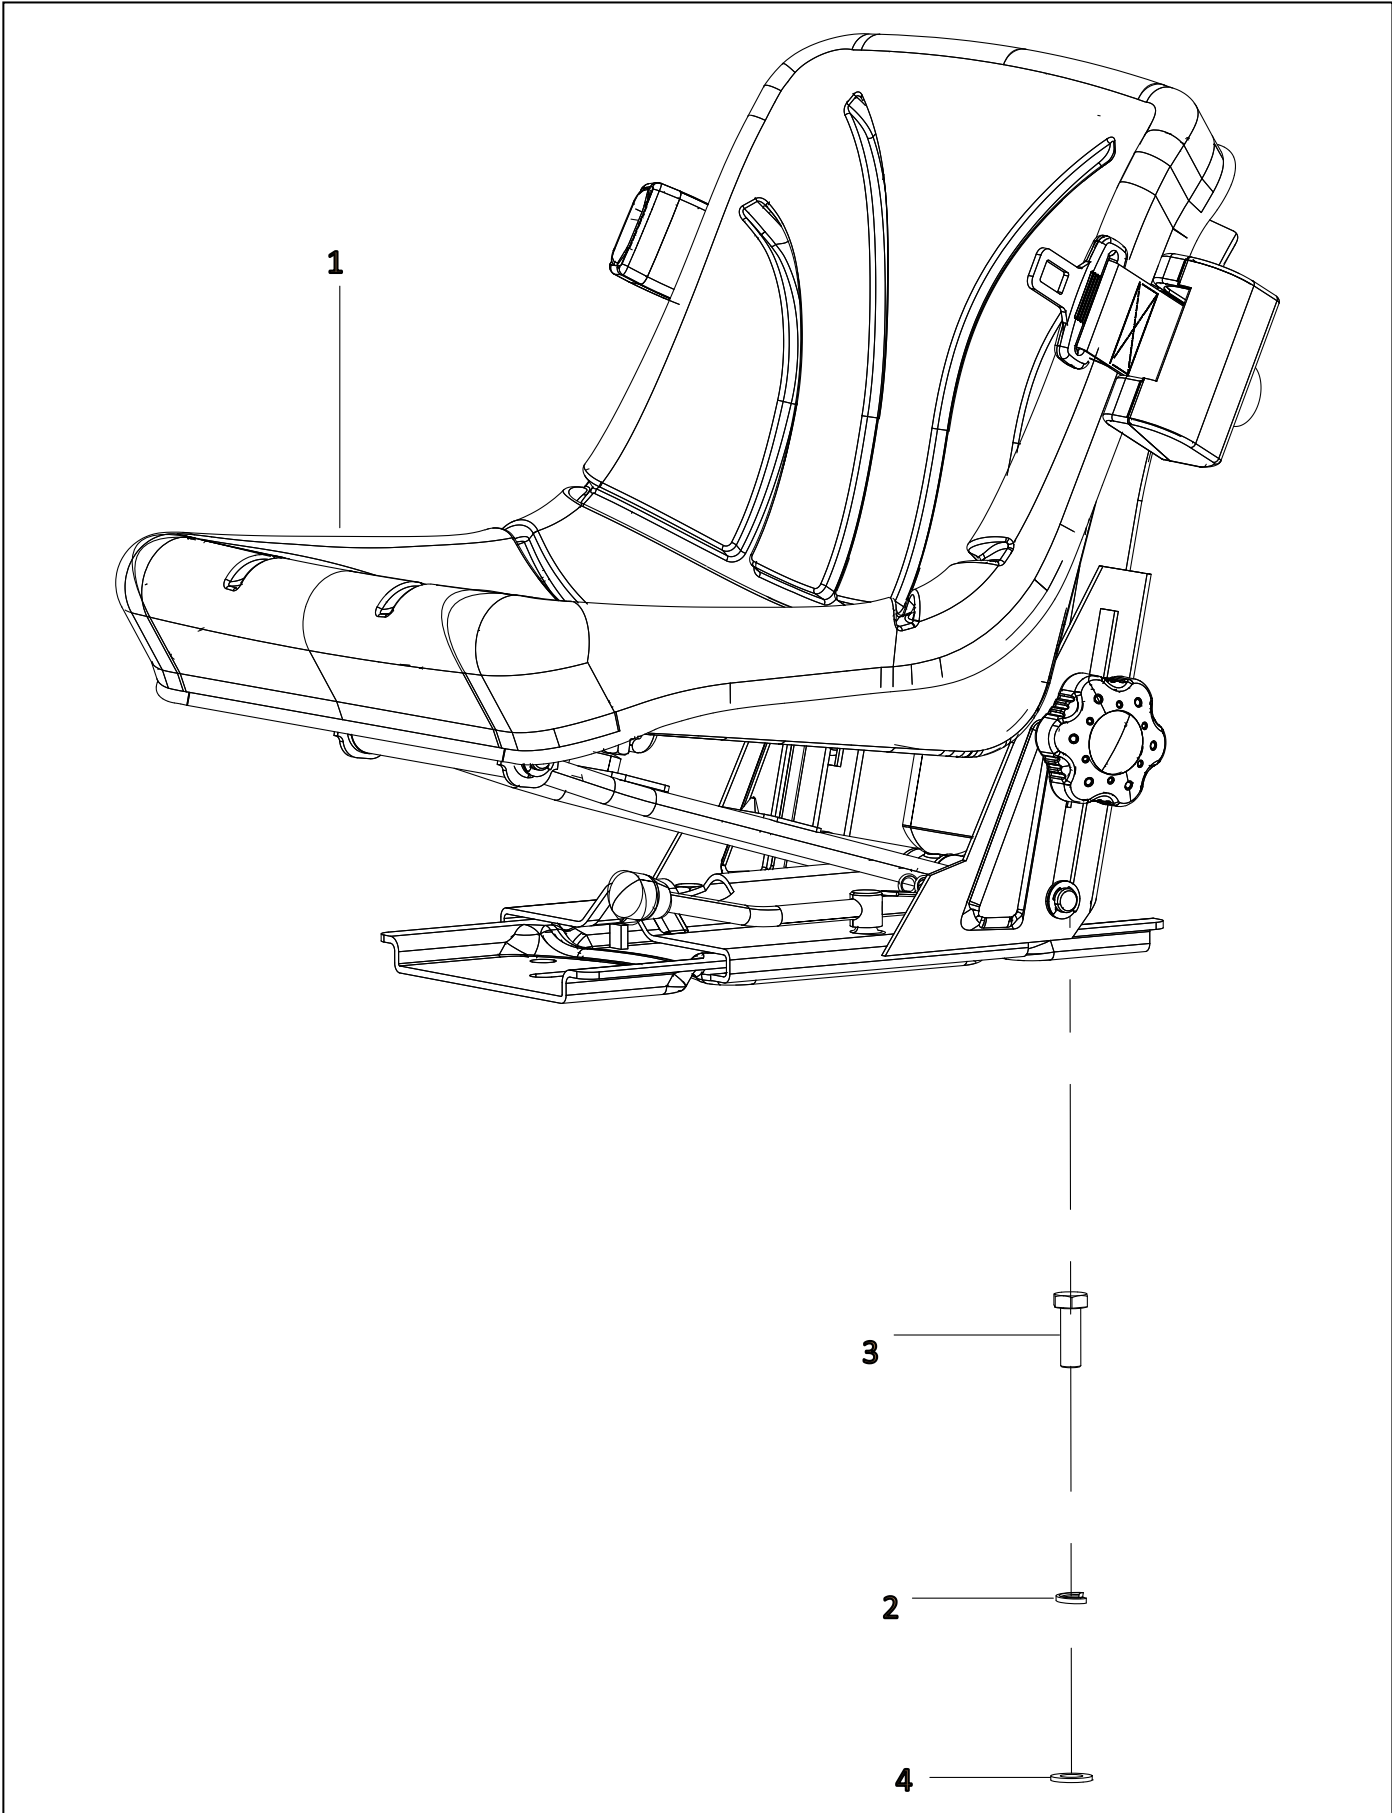


TABLE-81
MIRROR AND FRONT LAMP SUBASSEMBLY

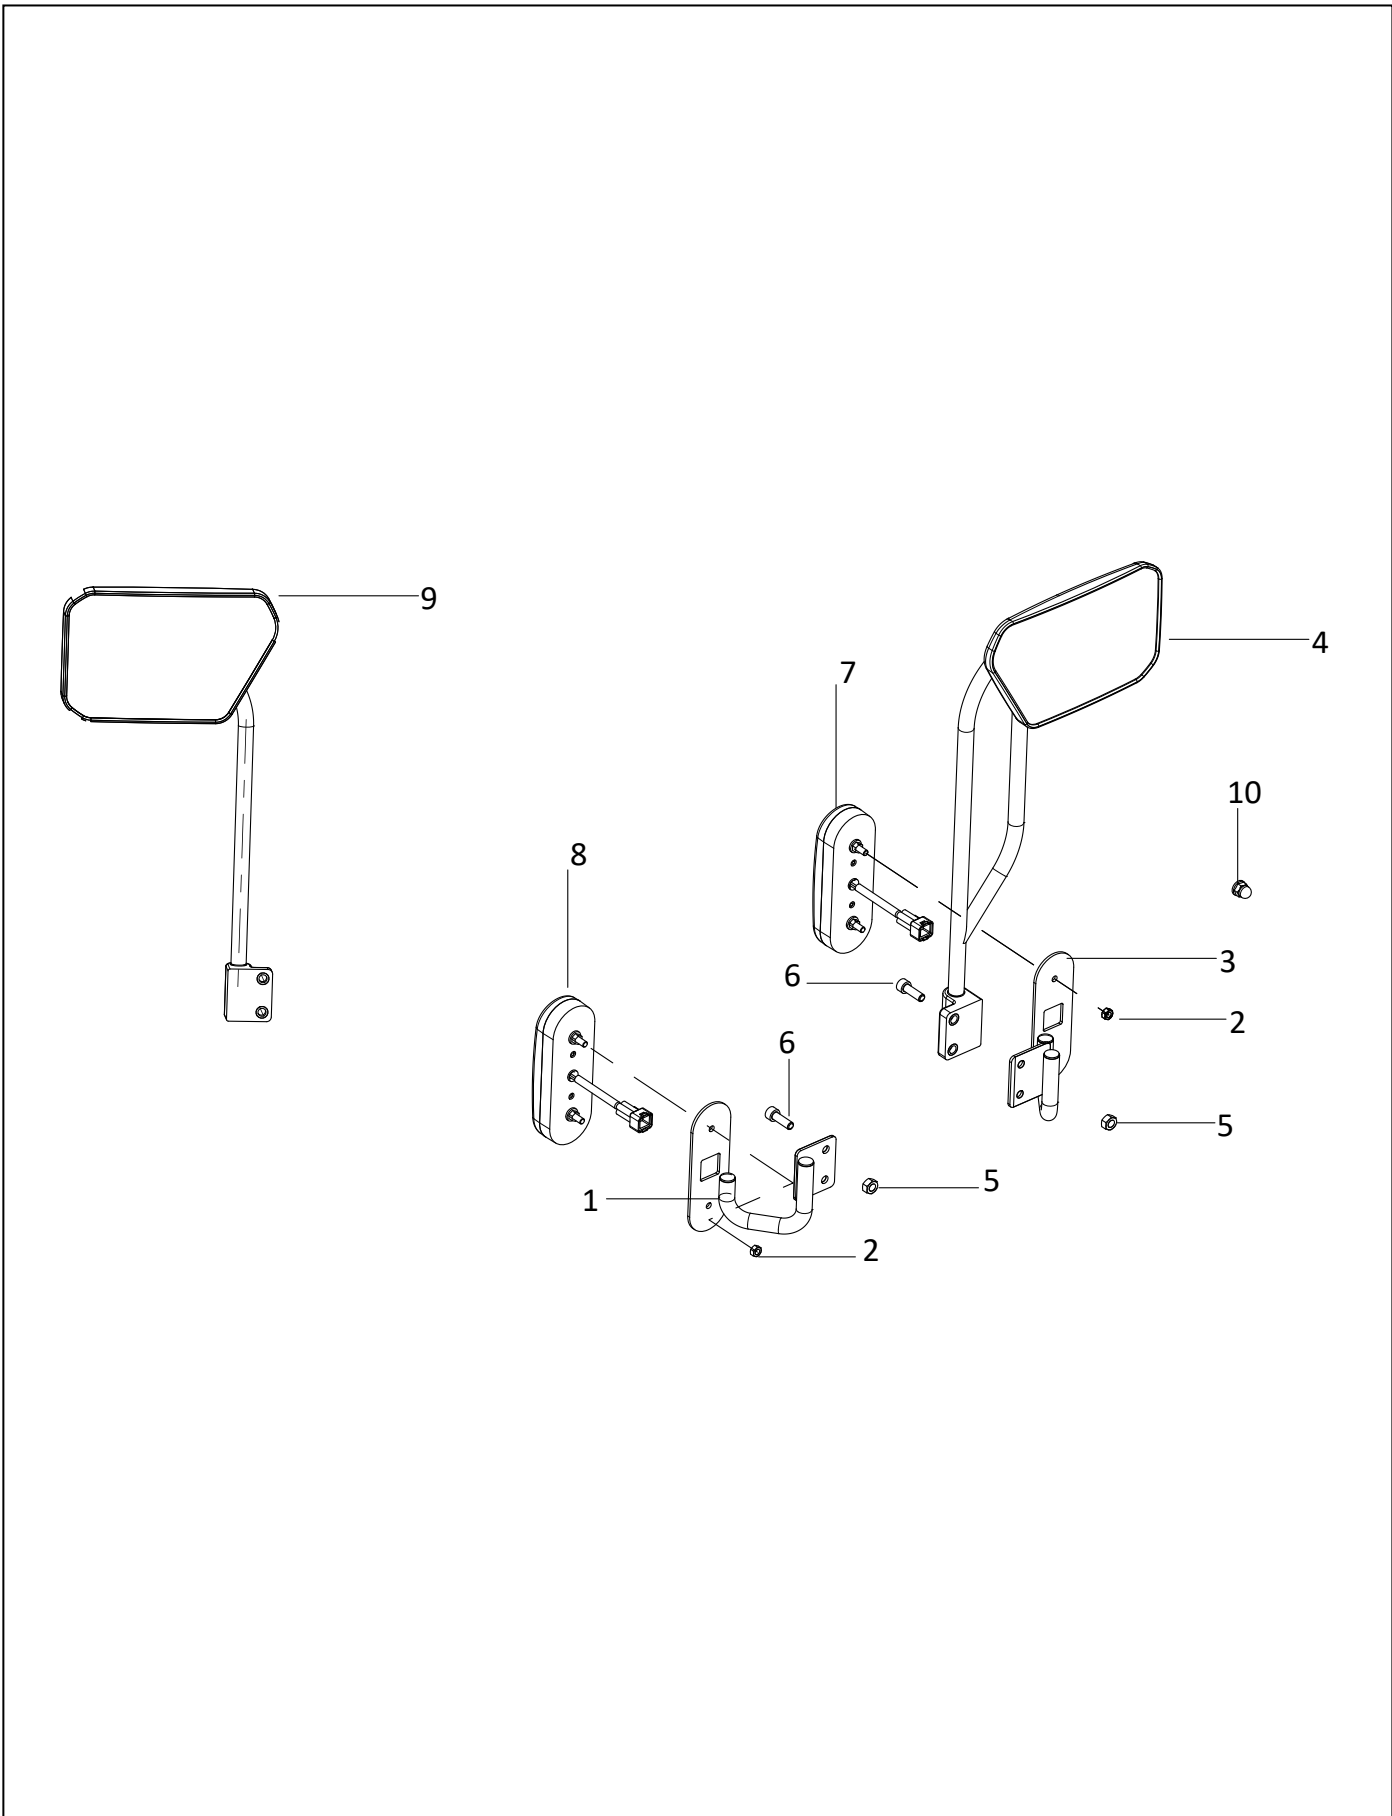


TABLE-81
MIRROR AND FRONT LAMP SUBASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10570940.9	BRACKET ASSEMBLY FRONT LAMP MOUNTING LH	1
2	D83500220.9	NUT M6X1.00-5 HEX	2
3	D10570950.9	BRACKET ASSEMBLY FRONT LAMP MOUNTING RH	1
4	D10561350.9	MIRROR AND ROD ASSEMBLY REAR VIEW RH	1
5	D83500110.9	NUT M8X1.25-8 HEX	4
6	D81503580.9	BOLT M8X1.25X25 HEX SOCKET HEAD	4
7	D10580820.9	LAMP ASSEMBLY FENDER FRONT RH (LED)	1
8	D10580830.9	LAMP ASSEMBLY FENDER FRONT LH (LED)	1
9	D10561340.9	MIRROR AND ROD ASSEMBLY REAR VIEW LH	1
10	D83500700.9	NUT M8X1.25-6.8 DOME HEX FLANGE	1

TABLE-82

DECAL AND BADGES MODEL IDENTIFICATION ASSEMBLY HST

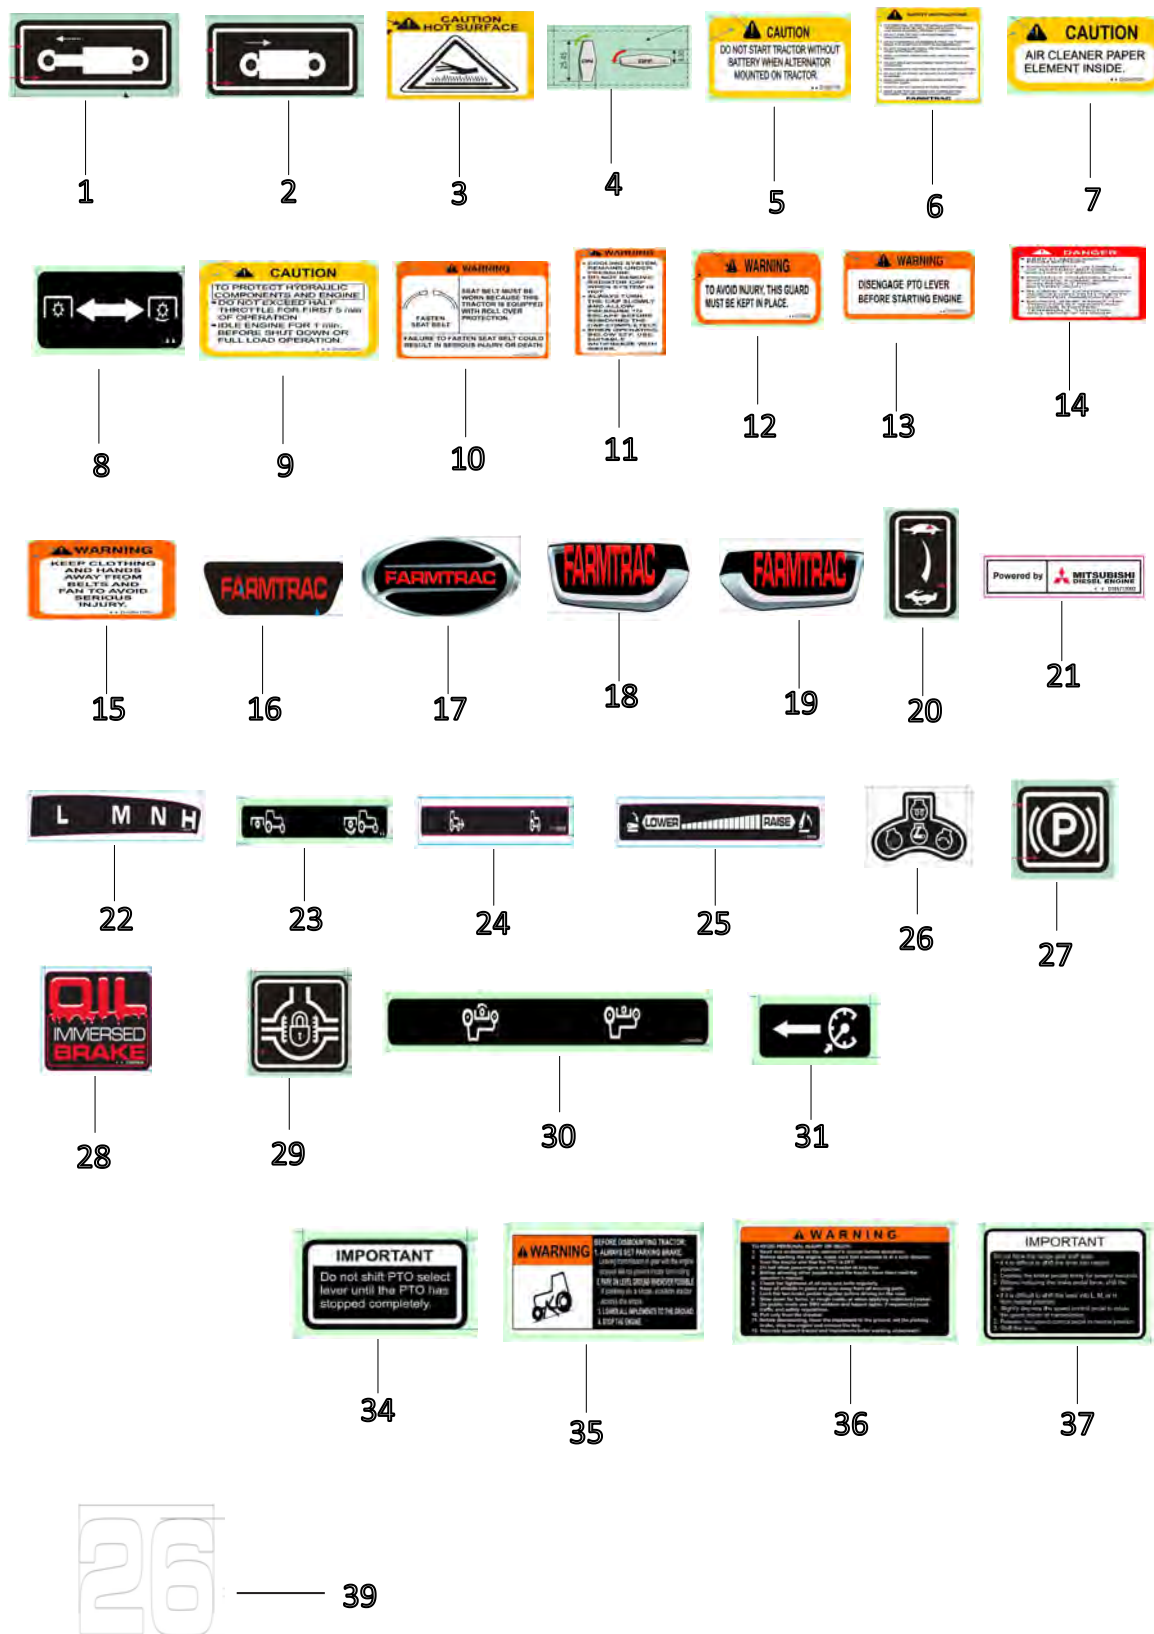


TABLE-82**DECAL AND BADGES MODEL IDENTIFICATION ASSEMBLY HST**

Fig. No.	Part No.	Description	Qty
1	D10588450.9	DECAL QRC CYLINDER OPEN	1
2	D10588440.9	DECAL QRC CYLINDER CLOSED	1
3	D10570890.9	DECAL HOT SURFACE WARNING	1
4	D10529560.9	DECAL ISOLATOR ASSEMBLY BATTERY	1
5	D10647790.9	DECAL CAUTION ALTERNATOR	1
6	D10647780.9	DECAL TRACTOR SAFETY INSTRUCTIONS	1
7	D10647820.9	DECAL CAUTION AIR CLEANER	1
8	D10616540.9	DECAL CLUTCH PTO	1
9	D10647800.9	DECAL CAUTION HYDRAULIC AND ENGINE	1
10	D10647910.9	DECAL SEAT BELT WARNING	1
11	D10647890.9	DECAL RADIATOR CAP WARNING	1
12	D10647840.9	DECAL PTO GUARD WARNING	1
13	D10647810.9	DECAL PTO WARNING	1
14	D10647870.9	DECAL DANGER BATTERY	1
15	D10647850.9	DECAL BELT AND FAN WARNING	1
16	D10570910.9	DECAL FARMTRAC LOGO STEERING WHEEL	1
17	D10589170.9	BADGE FRONT HOOD FARMTRAC	1
18	D10570810.9	BADGE FRONT FARMTRAC LH	1
19	D10570820.9	BADGE FRONT FARMTRAC RH	1
20	D10570830.9	DECAL HAND ACCELERATOR	1
21	D10571300.9	DECAL POWERED WITH MITSUBISHI ENGINE (RED)	1
22	D10570800.9	DECAL RANGE	1
23	D10616560.9	DECAL REAR PTO	1
24	D10570780.9	DECAL 4WD ENGAGE DISENGAGE	1
25	D10570340.9	DECAL POSITION LEVER	1
26	D10570070.9	DECAL STARTING SWITCH BLUE	1
27	D10570050.9	DECAL PARKING BRAKE	1
28	D10570030.9	DECAL OIL IMMersed BRAKE (RED)	1
29	D10570020.9	DECAL DIFFERENTIAL LOCK	1
30	D10616550.9	DECAL MID PTO	1
31	D10616530.9	DECAL CRUISE LOCK	1
34	D10616570.9	DECAL PTO LEVER INSTRUCTION	2
35	D10616580.9	DECAL VEHICLE PARKING WARNING	1
36	D10616590.9	DECAL VEHICLE WARNING	1
37	D10616510.9	DECAL RANGE GEAR SHIFT LEVER INSTRUCTION	1
38	D10692790.9	BADGE HST	2
39	D10588640.9	BADGE 26 HP	2